cookwise AF2-40D06

9L Dual Air Fryer with Visual Window

User Manual

COOKWISE

Important Safety Information

When using electrical appliances, always follow basic safety precautions to reduce the risk of fire, electric shock, or injury. Please read all instructions before using.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse the cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use the appliance for other than intended use.
- Do not attempt to repair or disassemble the appliance yourself.
- Do not place food directly into the basket without the crisper tray.
- Do not block any ventilation openings.
- This appliance is for household use ONLY.

Cautions

- This is an air fryer that works on hot air. Do not fill the basket with oil, frying fat, or other liquid.
- The basket and crisper tray will be hot during and for some time after use, so always use the handles.
- The appliance is for household use ONLY.

- The basket is hot after the frying process. Always place it on a heat-resistant surface when you remove it from the device.



Smart Power-Off: The air fryer automatically powers off when the basket is pulled out, enhancing safety during operation.

Product Overview

The cookwise 9L Dual Air Fryer is designed for efficient and healthy cooking. It features two independent 4.5L baskets, allowing you to cook different foods simultaneously. The integrated visual window lets you monitor cooking progress without opening the drawers, preserving heat and ensuring optimal results.



Dual Baskets: Two 4.5L baskets provide a total of 9L capacity, perfect for family meals.



Visual Window: Monitor your food as it cooks through the clear viewing windows.



3D Heat Circulation: Advanced technology ensures even cooking and crispy results with less oil.

Initial Setup

1. **Unboxing:** Carefully remove the air fryer and all accessories from the packaging. Retain packaging for future storage or transport.
2. **Initial Cleaning:** Before first use, wash the removable baskets and crisper trays with warm, soapy water. Rinse thoroughly and dry completely. The baskets and crisper trays are dishwasher-safe. Wipe the main unit with a damp cloth.
3. **Placement:** Place the air fryer on a stable, heat-resistant surface, ensuring adequate ventilation around the unit. Do not place it directly against a wall or under cabinets.
4. **First Use (Burn-in):** It is recommended to run the air fryer empty for about 10-15 minutes at 180°C (350°F) during the first use to eliminate any manufacturing odors. A slight odor may be present, which is normal and will dissipate.



Easy Cleaning: Baskets and crisper trays are dishwasher-safe for convenient cleanup.

Operating Instructions

Control Panel

The air fryer features a sensitive LED touch display for easy operation. The display shows temperature, time, and various cooking presets.



Smart Touch Control: Intuitive LED display for setting and controlling cooking functions.

Cooking Presets

The air fryer includes 9 pre-set cooking modes for various food types. Simply select the desired preset, and the air fryer will automatically set the optimal time and temperature.

- Fish

- Fries
- Bacon
- Bake
- Chicken-leg
- Steak
- Vegetable
- Shrimp
- Chicken



9 Cooking Presets: Easily prepare a variety of dishes with pre-programmed settings.

Temperature and Time Control


You can manually adjust the temperature in precise 1°C increments up to 200°C and set the timer from 10 minutes up to 900 minutes (15 hours) using the delay start function.



Precise Temperature Control: Achieve optimal cooking results with accurate temperature management.

Dual Basket Functionality and Smart Finish

The dual baskets can be used independently or together. The Smart Finish function ensures that both baskets complete their cooking cycles at the same time, even if they have different settings. Use the 'Match' button to synchronize programs after setting one basket.

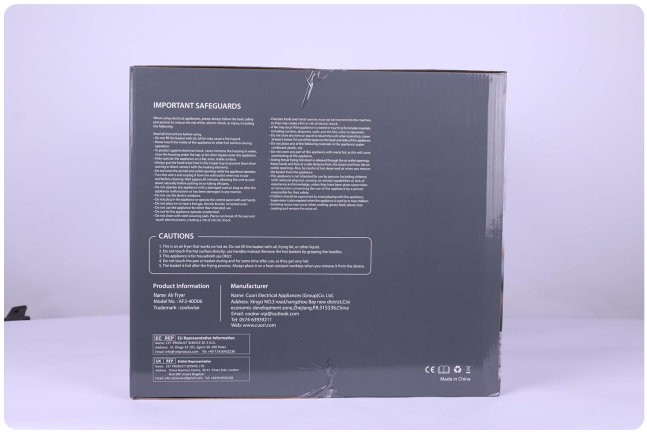

Sync Finish: Cook different ingredients simultaneously and have them ready at the same time.

Shake Reminder

For certain recipes, the air fryer will provide an intelligent shake reminder, alerting you when it's time to flip or shake the food to ensure even cooking and crispiness.



Flipping Reminder: The SHAKE icon will flash with beeps to remind you to flip or shake food for optimal cooking.

Care and Maintenance

Proper care and maintenance will extend the life of your cookwise Dual Air Fryer.

- **Cleaning Baskets and Trays:** The food-grade 304 stainless steel frying baskets and crisper trays are non-stick and dishwasher-safe. For best results, clean them after each use.
- **Cleaning the Main Unit:** Wipe the exterior of the air fryer with a soft, damp cloth. Do not immerse the main unit in water or any other liquid.
- **Interior Cleaning:** After the unit has cooled completely, wipe the interior with a damp cloth. For stubborn residue, use a mild detergent.
- **Storage:** Ensure the appliance is clean and dry before storing. Store it in a cool, dry place.



Heat-Resistant Handles: Ergonomic handles ensure safe handling of hot baskets.

Troubleshooting

If you encounter issues with your air fryer, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on	Not plugged in; Power outlet issue; Basket not fully inserted	Ensure plug is securely in outlet; Check power supply; Push basket firmly into place until it clicks.
Food not cooked evenly	Overcrowding; Not shaking/flipping food	Cook in smaller batches; Use the shake reminder and flip food halfway through cooking.
White smoke coming from appliance	Grease residue; Excess oil on food	Clean baskets and interior thoroughly; Reduce amount of oil used.
Food not crispy	Too much moisture; Not enough oil (for certain foods)	Pat food dry before cooking; Lightly spray with oil for extra crispiness.

If the problem persists after trying these solutions, please contact customer support.

Product Specifications

Feature	Specification
Brand	cookwise
Model Number	AF2-40D06
Colour	Black

Feature	Specification
Product Dimensions	42 x 37.5 x 31.5 cm
Capacity	9 litres (2 x 4.5L baskets)
Power / Wattage	2570 watts
Voltage	220 Volts
Material	Plastic (Food-grade 304 stainless steel for baskets/trays)
Auto Shutoff	Yes
Special Features	Timer, 9 Preset Functions, 3D Heat Circulation, Dual Zone with Viewing Window, Programmable
Item Weight	7.1 kg

Warranty and Customer Support

Cookwise is committed to providing high-quality products and excellent customer service.

This product comes with a**5-year limited warranty**. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

For any questions, issues, or warranty claims, please contact Cookwise customer service. Our dedicated team is ready to assist you 24/7.

Manufacturer Information:
Name: Cixi Electrical Appliances Group Co.,Ltd.
Address: Xingyi NO.3 road,hangzhou bay new district,Cixi economic development zone,Zhejiang,P.R.315336,China
Tel: 0086-574-63899021
Web: www.cixit.com

© 2024 cookwise. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question