Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

cureder 61017

Cureder 24 Inch Outdoor Refrigerator Instruction Manual

Model: 61017

1. Safety Information

Please read all instructions carefully before using this appliance to ensure safe operation and to prevent injury or damage. Keep this manual for future reference.

- **Electrical Safety:** Ensure the refrigerator is connected to a properly grounded 110V AC outlet. Do not use extension cords or ungrounded adapters. Disconnect power before cleaning or performing any maintenance.
- **Placement:** Place the refrigerator on a firm, level surface. Ensure adequate ventilation around the unit. Avoid direct sunlight, heat sources, or areas with excessive humidity. This unit is designed for both indoor and outdoor use, but protect it from extreme weather conditions.
- **Child Safety:** This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. The door is equipped with a lock; keep keys out of reach of children.
- **Handling:** Use caution when moving the unit due to its weight. Always lift with at least two people.
- **Flammable Materials:** Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

2. Product Overview

The Cureder 24 Inch Outdoor Refrigerator is a versatile beverage cooler designed for both built-in and freestanding applications in various settings, including patio kitchens, indoor bars, and commercial spaces. It features a durable stainless steel construction and precise digital temperature control.

Key Features:

- **Digital Temperature Control:** Easy-to-use control panel with a digital display for precise temperature settings from 32°F to 46°F (0°C to 8°C).
- **Durable Construction:** Made with 304 stainless steel for efficient insulation and durability, even in environments up to 104°F (40°C) with 65% humidity.
- **Efficient Cooling:** Features an air-cooled, frost-free system with 360° air circulation for fast and consistent cooling.
- **Adjustable Storage:** Includes three removable wire racks for flexible storage of various can and bottle sizes.

- **Security:** Equipped with a safe lock mechanism.
- **Odor-Free Design:** Engineered to prevent odors inside the unit.



Figure 2.1: Product Structure Display. This diagram illustrates the main components of the refrigerator, including the stainless steel door, stainless steel body, high-density microcellular foam insulation, and internal night light.



Figure 2.2: Insulation Layers. This image highlights the good insulation effect and energy-saving design, featuring layers of PVC, foam materials, and 304 stainless steel.

Your browser does not support the video tag.

Video 2.1: Cureder 24 Inch Outdoor Refrigerator Overview. This video provides a general overview of the refrigerator's features and design.

3. Installation

3.1 Unpacking

- Carefully remove all packaging materials, including foam and tape.
- Inspect the refrigerator for any shipping damage. Report any damage immediately to the retailer.
- Remove any protective film from the stainless steel surfaces.

3.2 Location Requirements

This refrigerator is designed for both built-in and freestanding installation. Choose a location that meets the following criteria:

- **Level Surface:** The unit must be placed on a flat, stable surface to ensure proper operation and prevent vibrations.
- **Ventilation:** Ensure adequate airflow around the unit, especially at the front grille, for efficient cooling. Do not block the front ventilation.
- **Temperature & Humidity:** While suitable for outdoor use, avoid direct exposure to extreme weather. The unit is designed to operate efficiently in ambient temperatures up to 104°F (40°C) and 65% humidity.
- **Clearances:** For built-in installation, ensure the cabinet opening meets the product dimensions. For freestanding use, allow sufficient space around the unit for air circulation.



Figure 3.1: Outdoor Installation Example. The refrigerator integrated into an outdoor kitchen counter.

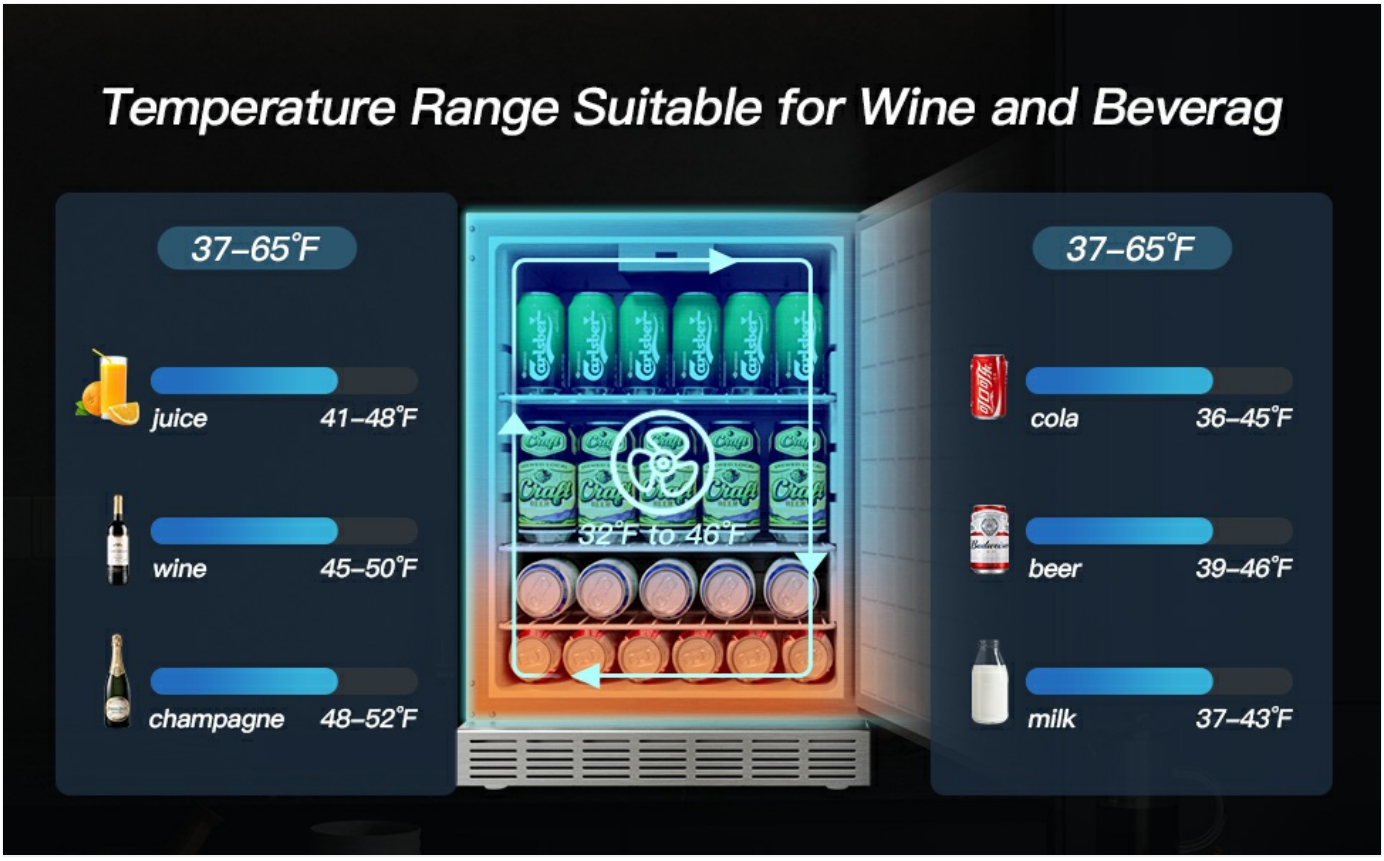


Figure 3.2: Indoor Installation Example. The refrigerator integrated into an indoor kitchen counter.

3.3 Electrical Connection

- Plug the refrigerator into a dedicated, grounded 110V AC outlet.
- Do not use a power strip or extension cord.

3.4 Leveling the Unit

Adjust the leveling feet at the bottom of the unit to ensure it is perfectly level. This prevents vibrations and ensures proper door sealing.

3.5 Door Reversal

The door of this refrigerator is designed to be reversible, allowing it to open from either the left or right side. Refer to the detailed instructions provided in the separate door reversal kit (if applicable) or contact customer support for guidance. Note that while the hinges can be moved, the lock mechanism may require specific orientation.

3.6 Initial Cleaning

Before first use, clean the interior and exterior of the refrigerator with a mild detergent and warm water. Rinse thoroughly and dry with a soft cloth.



Figure 3.3: Product Dimensions. This image provides key measurements for installation: 32.8 inches height, 25.4 inches depth, and 23.6 inches width.

4. Operation

4.1 Control Panel

The refrigerator features a digital control panel located inside the unit for easy access. It includes buttons for power, illumination, and temperature adjustment, along with a clear digital display.



Figure 4.1: Digital Control Panel. This image shows the precise digital temperature control area with buttons for switch, illumination, and temperature adjustment.

4.2 Setting the Temperature

- Press the 'SET' button to enter temperature adjustment mode.
- Use the 'Up' and 'Down' arrow buttons to select your desired temperature between 32°F and 46°F (0°C and 8°C).
- The display will flash while adjusting and then return to the current internal temperature after a few seconds.

4.3 Internal Lighting

Press the 'Light' button on the control panel to turn the interior LED light on or off.

4.4 Adjusting Shelves

The refrigerator comes with three removable wire racks. These can be adjusted or removed to accommodate different sizes of bottles and cans, optimizing internal storage space.



Figure 4.2: Removable Metal Shelves. This image demonstrates the flexibility of the three removable shelves for efficient storage.



Figure 4.3: Interior Capacity. An internal view showing the refrigerator's capacity with various beverages, highlighting the 32°F to 46°F cooling zone.

4.5 Door Lock

Use the provided key to lock or unlock the refrigerator door for added security.

5. Maintenance

5.1 Cleaning the Interior

- Always unplug the refrigerator before cleaning.
- Remove all contents and shelves.
- Wash the interior surfaces with a solution of mild detergent and warm water. Do not use abrasive cleaners or harsh chemicals.
- Rinse thoroughly and dry with a soft cloth.
- Clean removable shelves and accessories separately.

5.2 Cleaning the Exterior

- Wipe the exterior surfaces with a soft cloth dampened with mild detergent and water.
- For stainless steel surfaces, use a stainless steel cleaner and polish in the direction of the grain.
- Ensure the front ventilation grille is free of dust and debris for optimal performance.

5.3 Automatic Defrost System

This refrigerator features an automatic defrost system, which minimizes frost buildup. During the defrost cycle, water will drain into an evaporation tray at the back of the unit.
Note: In high humidity environments or with frequent door openings, some frost or ice buildup on the back wall may occur. If excessive frost accumulates, manually defrost the unit by unplugging it and leaving the door ajar until the ice melts. Ensure to place towels to catch any water.

5.4 Power Saving Tips

- Avoid opening the door too frequently or for extended periods.
- Ensure the door seal is clean and intact.
- Do not overload the refrigerator, as this can restrict airflow.
- Place the unit in the coolest possible location, away from direct sunlight or heat sources.

6. Troubleshooting

Before contacting customer service, please check the following common issues and solutions:

Problem	Possible Cause	Solution
Refrigerator does not operate	No power to the unit.	Check if the power cord is securely plugged in. Verify the circuit breaker or fuse.
Unit is not cooling sufficiently	Temperature setting is too high. Door is not closed properly. Poor ventilation. Ambient temperature is too high.	Adjust the temperature to a lower setting. Ensure the door is fully closed and the seal is intact. Clear any obstructions from the front grille. Relocate the unit if ambient temperature is consistently above recommended limits.
Excessive noise	Unit is not level. Objects vibrating against the unit.	Adjust the leveling feet. Ensure no items inside or around the unit are touching the walls or compressor.
Excessive frost/ice buildup	Frequent door openings. High humidity. Door seal issue.	Minimize door openings. Check and clean the door seal. Perform a manual defrost if necessary.

7. Specifications

Feature	Specification
Model Name	61017
Brand	cureder
Product Dimensions (D x W x H)	23"D x 34"W x 23"H

Feature	Specification
Capacity	5.47 cubic feet
Color	Silver2
Installation Type	Freestanding / Built-in
Number of Doors	1
Defrost System	Automatic
Voltage	110 volts_of_alternating_current
Cooling Method	Compressor
Number of Shelves	3 (Wire Racks)
Power Plug Type	Type A - 2 pin (North American)
Door Orientation	Reversible
Lock Type	Key
Annual Energy Consumption	298 kWh
Material	Stainless Steel
Specification Met	UL
UPC	727458610178

8. Warranty and Support

8.1 Warranty Information

This Cureder refrigerator comes with a**1-year warranty** from the date of purchase. This warranty covers manufacturing defects in materials and workmanship under normal use.
The warranty does not cover damage resulting from improper installation, misuse, abuse, accidents, unauthorized repairs, or normal wear and tear.

8.2 Customer Support

For warranty claims, technical assistance, or any questions regarding your Cureder refrigerator, please contact the manufacturer or your retailer directly. Refer to your purchase documentation for specific contact details.
Manufacturer: Cureder

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0C5QRWRQL

More documents and user manuals: **https://manuals.plus/**