SERVOMASTER SM01

SERVOMASTER SM01 Cordless Handheld Vacuum Cleaner User Manual

Introduction

Thank you for choosing the SERVOMASTER SM01 Cordless Handheld Vacuum Cleaner. This portable and powerful vacuum is designed for efficient cleaning in various environments, including your car, home, and office. Its lightweight design, rechargeable battery, and washable HEPA filter make it a convenient tool for quick cleanups.

Important Safety Instructions

- Read all instructions before using this appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- Do not use in an enclosed space where vapors are present from oil base paint, paint thinner, some mothproofing substances, flammable dust, or other explosive or toxic vapors.
- Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- Do not use without dust bag and/or filters in place.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance.

- Use only with battery packs specifically designated for the appliance. Use of any other battery packs may create a risk of injury and fire.
- When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- Do not use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- Do not expose a battery pack or appliance to fire or excessive temperature. Exposure to fire or temperature above 130°C (265°F) may cause explosion.
- Follow all charging instructions and do not charge the battery pack or appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
- Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
- Do not modify or attempt to repair the appliance or the battery pack (as applicable) except as indicated in the instructions for use and care.

Package Contents

Please check the package for the following items:

- 1 x SERVOMASTER SM01 Handheld Vacuum Cleaner
- 1 x Crevice Tool
- 1 x Dusting Brush
- 1 x Washable HEPA Filter (extra filter included)
- 1 x TYPE-C Charging Cable
- 1 x Drawstring Bag
- 1 x User Manual



Image: The SERVOMASTER SM01 handheld vacuum cleaner shown with its included accessories: crevice tool, dusting brush, USB-C charging cable, drawstring bag, and an extra HEPA filter.

Product Overview

Familiarize yourself with the components of your SERVOMASTER SM01 vacuum cleaner:

- **Main Unit:** Contains the motor, battery, and control buttons.
- **Dust Cup:** Transparent container for collected debris.
- **HEPA Filter:** Washable filter located inside the dust cup.
- **On/Off Button:** Power control for the vacuum.
- **Dust Cup Release Button:** For detaching the dust cup for emptying.
- **Charging Port:** Type-C port for recharging the battery.



Image: An exploded diagram showing the main components of the SERVOMASTER SM01 handheld vacuum, including the main unit, dust cup, HEPA filter, brush, long nozzle, cleaning brush, and charging cord.

Setup and First Use

1. **Charge the Vacuum:** Before first use, fully charge the vacuum cleaner using the provided Type-C charging cable. Connect the cable to the charging port on the vacuum and plug the other end into a compatible USB power source (e.g., laptop, power bank, car charger, 5V/2A adapter). The charging indicator light will show the charging status.
2. **Attach Accessories:** Select the appropriate attachment for your cleaning task. The crevice tool is ideal for narrow gaps and corners, while the dusting brush is suitable for keyboards, carpets, and irregular surfaces. Simply insert the desired tool firmly into the vacuum's nozzle.



Image: The SERVOMASTER SM01 handheld vacuum with the crevice tool attached, effectively cleaning debris from a car's center console.

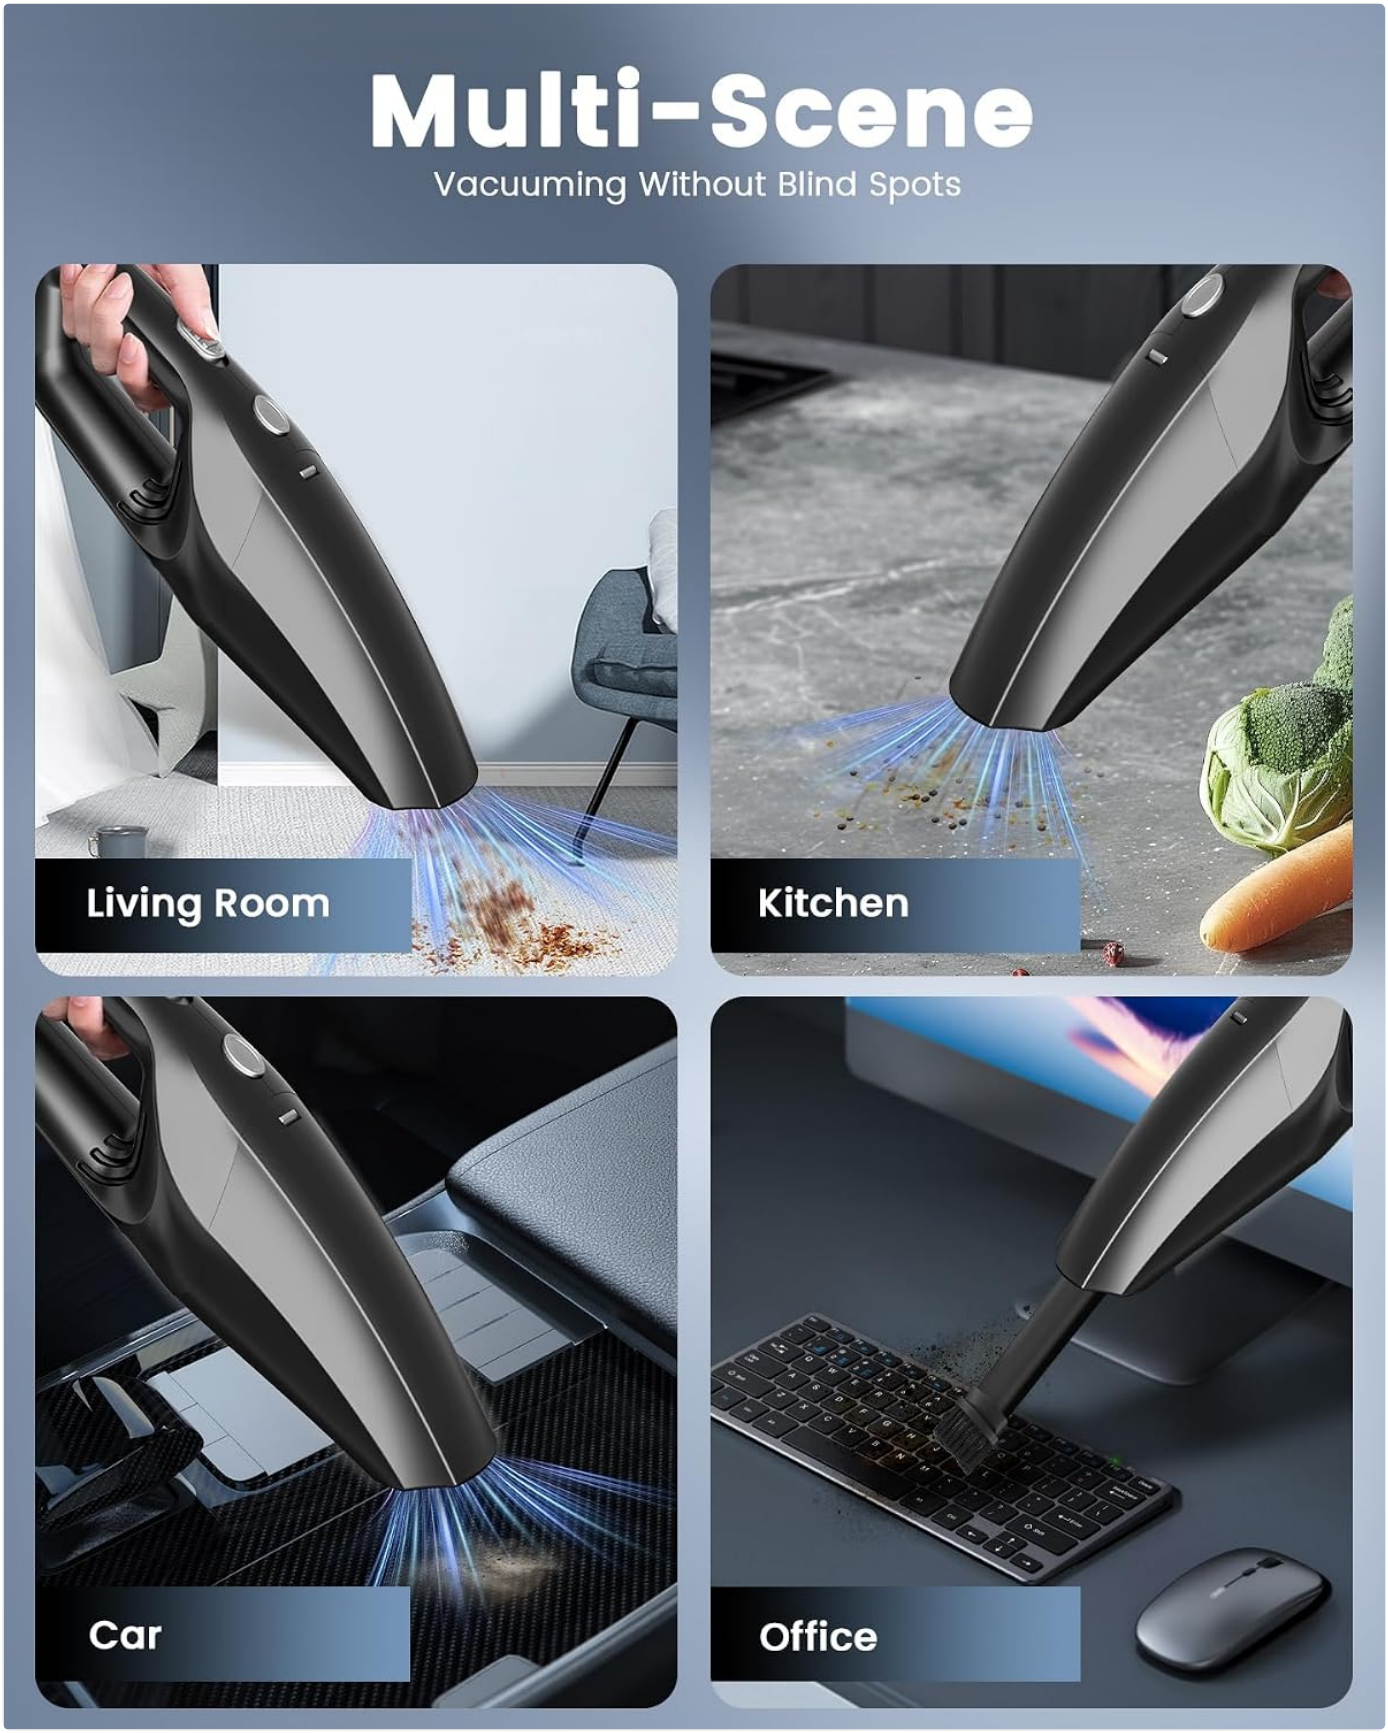


Image: The SERVOMASTER SM01 handheld vacuum with the dusting brush attached, cleaning dust and crumbs from a computer keyboard.

Operating the Vacuum Cleaner

1. **Power On/Off:** Press the On/Off button located on the handle to start the vacuum. Press it again to turn off the device.
2. **Cleaning:** Guide the vacuum's nozzle over the area to be cleaned. For optimal suction, ensure the nozzle is close to the surface. The powerful motor is designed to pick up fine particles, dust, pet hair, and small debris.

3. **Using Attachments:**
    - **Crevice Tool:** Use for tight spaces, car seats, sofa crevices, and corners.
    - **Dusting Brush:** Ideal for delicate surfaces, upholstery, keyboards, and areas where agitation helps loosen dirt.



Image: The SERVOMASTER SM01 handheld vacuum with the crevice tool cleaning between sofa cushions.



Image: The SERVOMASTER SM01 handheld vacuum with the crevice tool cleaning a car floor mat.

Official Product Video: SERVOMASTER SM01 Handheld Vacuum Cleaner

Your browser does not support the video tag.

Video: This video demonstrates the SERVOMASTER SM01 handheld vacuum cleaner in action, showcasing its powerful suction and ease of use for various cleaning tasks.

Maintenance and Cleaning

Regular cleaning of the dust cup and HEPA filter is crucial to maintain optimal suction power and extend the lifespan of your vacuum.

1. **Emptying the Dust Cup:** Press the dust cup release button and detach the dust cup from the main unit. Empty any collected rubbish into a trash bin.
2. **Cleaning the HEPA Filter:** Remove the HEPA filter from the dust cup. Rinse the filter and the dust cup with clean water. Ensure both are thoroughly air-dried before reassembling. Do not use the vacuum with a wet filter, as this can damage the machine.
3. **Reassembly:** Once completely dry, place the HEPA filter back into the dust cup, then reattach the dust cup to the main unit until it clicks securely into place.



Image: A visual guide demonstrating how to disassemble the dust cup and washable HEPA filter, clean them with water, and air dry before reassembly.

Official Product Video: SM01BS Handheld Vacuum Cordless

Your browser does not support the video tag.

Video: This video provides a demonstration of the SERVOMASTER SM01 handheld vacuum, including its features and how to use it for cleaning.

Charging the Battery

The SERVOMASTER SM01 is equipped with a rechargeable battery and a Type-C charging port for convenience.

- Connect the provided Type-C charging cable to the charging port on the vacuum.
- Plug the USB-A end of the cable into a suitable power source, such as a laptop, power bank, car charger, or a 5V/2A adapter.
- The charging indicator light will illuminate during charging.
- A full charge provides approximately 20 minutes of battery life.
- If the device has been idle for an extended period, recharge it to activate the battery.



Image: The SERVOMASTER SM01 handheld vacuum connected to a Type-C charging cable, illustrating various compatible charging options like a laptop, power bank, car charger, and 5V/2A adapter.

Troubleshooting

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Low or no suction power	• Dust cup is full. • HEPA filter is clogged or dirty. • Nozzle or attachments are blocked. • Battery is low.	• Empty the dust cup. • Clean or replace the HEPA filter. • Check and clear any blockages in the nozzle or attachments. • Recharge the battery.
Vacuum does not turn on	• Battery is completely drained. • Device has been idle for too long.	• Charge the vacuum fully. • Recharge the battery to activate it.

Specifications

Feature	Detail
Brand	SERVOMASTER
Model Name	SM01 Handheld Vacuum Cleaner
Special Feature	Cordless, Portable, Lightweight, Type-C Charging, Extra HEPA Filter
Filter Type	HEPA Filter
Is Cordless?	Yes
Capacity	400 Grams
Wattage	120 Nanowatts
Recommended Uses	For car, home, office, couch, carpet, and pet hair cleaning
Form Factor	Handheld
Color	Black Cordless
Product Dimensions	11"L x 4"W x 4"H
Noise Level	60 Decibels
Battery Life	20 minutes
Item Weight	1.19 pounds
Power Source	Battery Powered

Warranty and Support

For any order-related support or inquiries, please contact us directly via your Amazon Account Page. Our customer service team is available to assist you with any issues or questions regarding your SERVOMASTER SM01 Handheld Vacuum Cleaner.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question