Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Quik Shade Summit X 170

Quik Shade Summit X 170 Instant Canopy User Manual

Model: Summit X 170

1. Introduction

The Quik Shade Summit X 170 Instant Canopy is designed to provide a versatile and expansive outdoor shade solution. Ideal for various activities such as sports events, beach outings, outdoor parties, and poolside relaxation, this canopy offers 170 square feet of shade, comfortably accommodating 12 to 15 people. Its robust construction features a powder-coated metal frame for durability and a 300 denier polyester fabric top with Aluminex-backing for 99% UV protection and water resistance. The canopy also includes adjustable dual half awnings and a vented ceiling for optimal airflow.

2. Safety Information

Important Safety Precautions:

- Always secure the canopy with the included stakes and guy lines, especially in windy conditions, to prevent tipping or collapse.
- Maintain a safe distance from all heat sources, including open flames, heaters, and barbecues, to avoid fire hazards.
- Never leave the canopy unattended while it is set up, particularly during adverse weather conditions.
- While the canopy provides UV protection, it is recommended to use additional sunscreen and wear protective clothing to minimize UV exposure.
- Do not use the canopy as a permanent structure. Disassemble and store it when not in use or during severe weather forecasts.

3. Components List

Before assembly, ensure all components are present:

- Canopy Frame (Pre-assembled accordion style)
- Canopy Top Fabric (300 denier polyester with Aluminex-backing)
- Adjustable Dual Half Awnings (Integrated with canopy top)
- Ground Stakes (Quantity: typically 4-8, check packaging)
- Guy Lines (Quantity: typically 4, check packaging)
- Polyester Roller Bag (Heavy-duty 600 denier)

4. Setup Instructions

Follow these steps for quick and easy assembly. While one person can set it up, two people are recommended for optimal ease.

4.1 Unpacking and Initial Expansion

1. Remove the canopy frame and fabric top from the roller bag.
2. Place the folded frame in the desired setup location. With a partner, grasp two opposite outer legs and slowly walk backward, pulling the frame apart until it is partially expanded.
3.



Image: The Quik Shade Summit X 170 Instant Canopy fully deployed, showcasing its straight leg design and one extended half awning.

4.2 Attaching the Canopy Top

3. Drape the canopy fabric over the partially expanded frame. Ensure the fabric is centered and the corners align with the frame's corners.
4. Secure the fabric to the frame using the hook-and-loop fasteners or clips located on the underside of the fabric.

4.3 Full Expansion and Height Adjustment

5. From each corner, push up on the lower truss bars until the frame fully locks into place. You will hear a click.
6.



Image: The canopy providing shade in an open outdoor setting, demonstrating its large coverage area.

7. Extend each leg by pressing the quick release push/pull pins and sliding the leg extender to the desired height. There are three height adjustments available. Ensure all legs are set to the same height for stability.
8.



Image: Detail of the push/pull latch mechanism on the canopy leg, used for adjusting the height.

4.4 Securing the Canopy

8. Use the provided ground stakes to secure each leg to the ground. For added stability, especially in windy conditions, attach guy lines to the canopy's corners and stake them firmly into the ground at an angle.
9.



Image: The sturdy footplate at the base of a canopy leg, designed for stability and securing with ground stakes.

5. Operating Instructions

5.1 Adjusting Dual Half Awnings

The Summit X 170 features two side half awnings that can be adjusted to suit your needs:

- **For Rain Repelling:** Position the awnings at an angle to help direct rainwater away from the shaded area.
- **For Extra Shade:** Extend the awnings horizontally to provide additional shade during peak sun hours.

- 

Image: The canopy providing shade by a swimming pool, with both half awnings extended to maximize coverage.



Image: The canopy in use at an outdoor market, demonstrating how the extended awning can provide additional coverage for a stall.

5.2 Vented Ceiling

The canopy features a vented ceiling designed for optimal airflow, which helps to keep the area underneath cooler during hot weather. This also aids in stability by allowing wind to pass through, reducing uplift pressure.

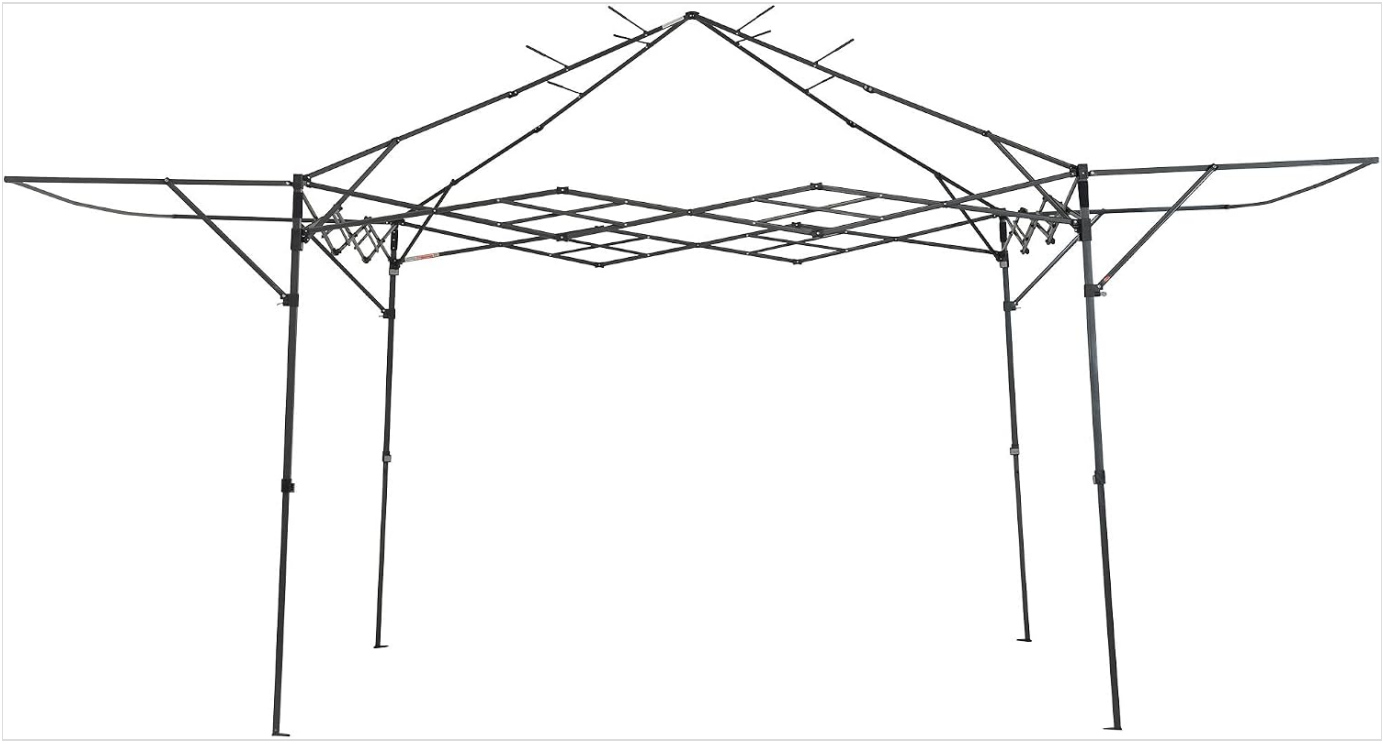


Image: A detailed view of the multi-tiered vented roof design, which promotes airflow and reduces wind resistance.

6. Maintenance

Proper maintenance will extend the life of your Quik Shade canopy:

- **Cleaning:** Clean the fabric top with mild soap and water. Do not use harsh detergents or abrasive cleaners, as they can damage the fabric and its UV protective coating. Rinse thoroughly and allow to air dry completely before storage.
- **Frame Care:** The metal frame has a powder-coated finish to resist chipping, peeling, rust, and corrosion. Wipe down the frame with a damp cloth as needed. Inspect joints and moving parts periodically for any signs of wear or damage.
- **Storage:** Always ensure the canopy fabric and frame are completely dry before folding and storing them in the roller bag. Storing a damp canopy can lead to mildew and fabric degradation. Store in a cool, dry place away from direct sunlight.

7. Troubleshooting

Problem	Possible Cause	Solution
Canopy difficult to open/close	Frame joints are stiff or misaligned.	Ensure all legs are extended evenly. Apply a silicone-based lubricant to moving parts if necessary. Ensure no fabric is caught in the frame.
Canopy unstable or wobbly	Not properly staked or legs uneven.	Verify all legs are extended to the same height. Use all provided ground stakes and guy lines. Consider adding weight bags to the legs in windy conditions.
Water pooling on canopy top	Insufficient tension or improper setup.	Ensure the frame is fully extended and locked. Check that the fabric top is taut and properly secured to the frame. Adjust awnings to an angle to shed water.
Zipper on roller bag broken	Excessive force or manufacturing defect.	Avoid overstuffing the bag. If the zipper is detached, attempt to re-align the slider. For significant damage, contact customer support or a repair service.

8. Specifications

Brand	Quik Shade
Model	Summit X 170
Coverage Area	170 square feet
Dimensions (Approx. Set Up)	10' x 17' (3m x 5.2m)
Peak Height	Up to 10' (3m)
Eave Clearance	Up to 6'5" (1.9m)
Frame Material	Powder-coated Metal
Canopy Fabric	300 Denier Polyester with Aluminex-backing

UV Protection	99% UV Protection
Water Resistance	Water Resistant
Item Weight	64 pounds
Package Dimensions	51.2 x 11.2 x 11.2 inches
UPC	677599336201



Image: Technical diagram illustrating the dimensions and key features such as Aluminex UV protection, super vents, rigid frame system, heavy-duty leg extenders, and dual awnings.



Image: A detailed diagram providing specific measurements for the canopy's height, width, and awning extension.

9. Storage

To store your canopy:

1. Ensure the canopy fabric and frame are completely dry.

2. Lower all legs to their shortest height.
3. Release the frame locks and gently push the frame inward from opposite sides until it is fully collapsed.
4. Carefully fold the fabric top and place it, along with the collapsed frame, into the included polyester roller bag.
5.

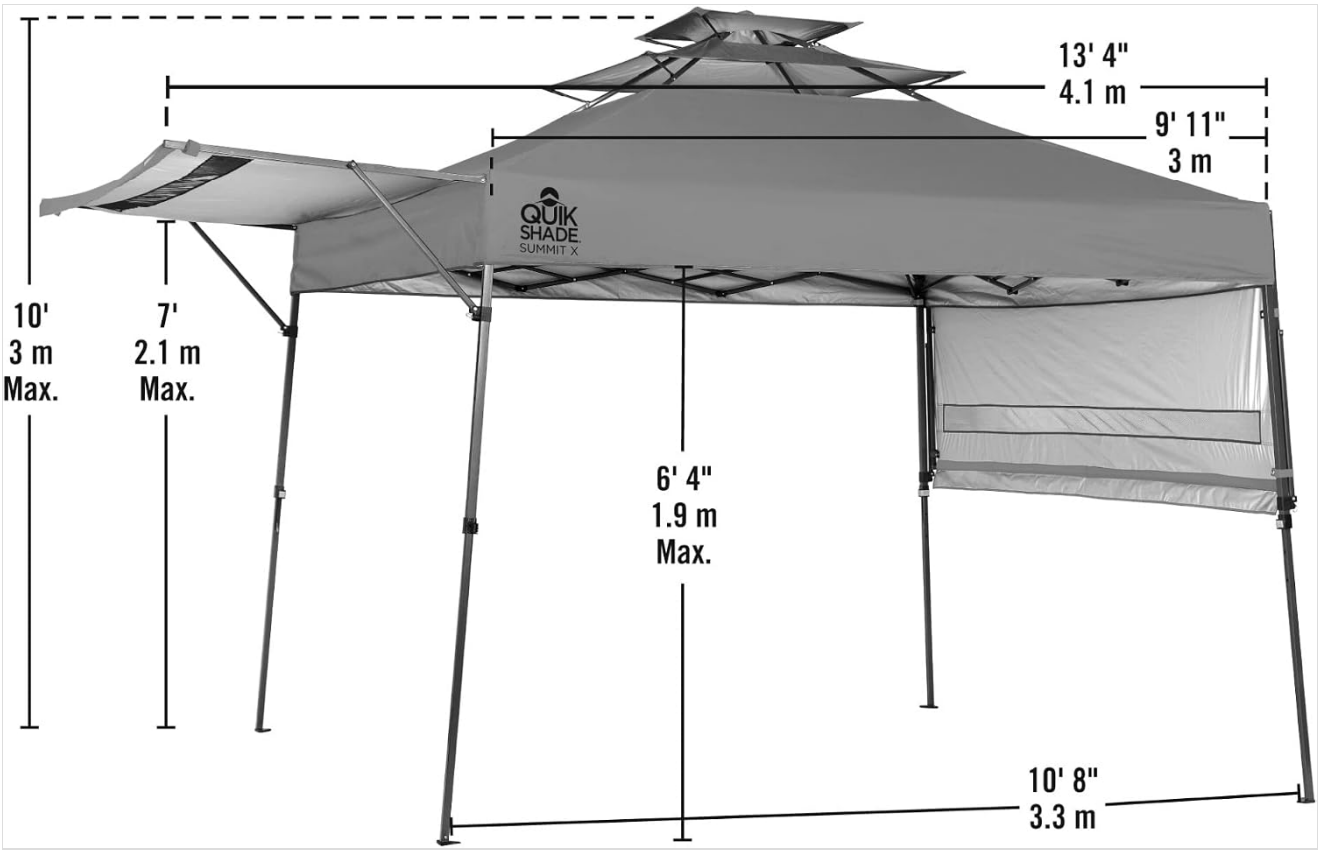


Image: A person demonstrating the ease of transport using the heavy-duty wheeled roller bag.

6. Store the bag in a cool, dry place, protected from extreme temperatures and direct sunlight.

10. Warranty and Support

For warranty information or customer support, please refer to the manufacturer's official website or contact their customer service department. Keep your purchase receipt as proof of purchase.

- **Brand:** Quik Shade
- **Manufacturer:** ShelterLogic
- **Customer Support:** Refer to the Quik Shade Store on Amazon or the manufacturer's official website for contact details.

© 2024 Quik Shade. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0C5YD9DLG

More documents and user manuals: **https://manuals.plus/**