Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

onerbl 60-1190

onerbl AC DC Adapter Instruction Manual

For Radio Shack Cat.No. 60-1190 Christmas Rockin Santa Animated Singing Dancing Figure

Introduction

This manual provides essential instructions for the safe and effective use of your onerbl AC DC Adapter. This adapter is designed to power compatible devices, specifically the Radio Shack Cat.No. 60-1190 Christmas Rockin Santa Animated Singing Dancing Figure. Please read this manual thoroughly before use and retain it for future reference.

Safety Information

To ensure safe operation and prevent damage, observe the following precautions:

- Use the adapter only with devices that match its voltage and current specifications.
- Do not expose the adapter to water, moisture, or extreme temperatures.
- Avoid dropping or subjecting the adapter to severe impact.
- Do not attempt to open or modify the adapter. There are no user-serviceable parts inside.
- Unplug the adapter from the wall outlet when not in use for extended periods.
- Keep out of reach of children.

Setup

Follow these steps to set up your onerbl AC DC Adapter:

1. **Inspect the Adapter:** Before connecting, visually inspect the adapter and its cable for any signs of damage. Do not use if damaged.
2. **Connect to Device:** Insert the DC output plug of the adapter firmly into the power input port of your Radio Shack Cat.No. 60-1190 Christmas Rockin Santa Figure. Ensure a secure connection.
3. **Connect to Power Outlet:** Plug the AC input prongs of the adapter into a standard AC 100-240V wall outlet.



Figure 1: The onerbl AC DC Adapter with its coiled cable. This image shows the main unit with the AC prongs and the DC output connector.



Figure 2: The onerbl AC DC Adapter connected to a power strip, demonstrating a typical usage scenario in an office or home environment.

Operating

Once the adapter is properly connected to both the device and a power outlet, the device should receive power. Refer to your device's specific instructions for powering it on and operating its functions.
Note: This adapter is a power supply unit. It does not control the functions of the connected device.

Maintenance

Proper maintenance ensures the longevity and safe operation of your adapter:

- **Cleaning:** Disconnect the adapter from all power sources before cleaning. Use a soft, dry cloth to wipe the exterior. Do not use liquid cleaners or solvents.
- **Storage:** Store the adapter in a cool, dry place away from direct sunlight and extreme temperatures. Avoid tightly coiling the cable to prevent damage.

- **Cable Care:** Do not bend, twist, or pull the cable excessively. Ensure the cable is not pinched or placed under heavy objects.

Troubleshooting

If you encounter issues with your adapter, try the following steps:

- **No Power to Device:**
  - Ensure the adapter is securely plugged into both the wall outlet and the device.
  - Verify the wall outlet is functional by plugging in another device.
  - Check the device's power input port for any obstructions or damage.
- **Adapter Overheating:**
  - Unplug the adapter immediately.
  - Ensure the adapter is not covered or placed in an area with poor ventilation.
  - If overheating persists, discontinue use and contact support.

If these steps do not resolve the issue, please refer to the support information provided.

Specifications

Feature	Specification
Model	AC DC Adapter
Input Voltage	AC 100-240V, 50/60Hz
Output	*(Specific output voltage/current not provided in source, please refer to product label)*
Wattage	36.5 watts
Cable Length	Approximately 76 inches (6.3 feet)
Protections	Over Voltage Protection, Over Heat Protection
Compatible Devices	RadioShack Christmas Rockin Santa Animated Singing Dancing Figure (Cat.No. 60-1190)

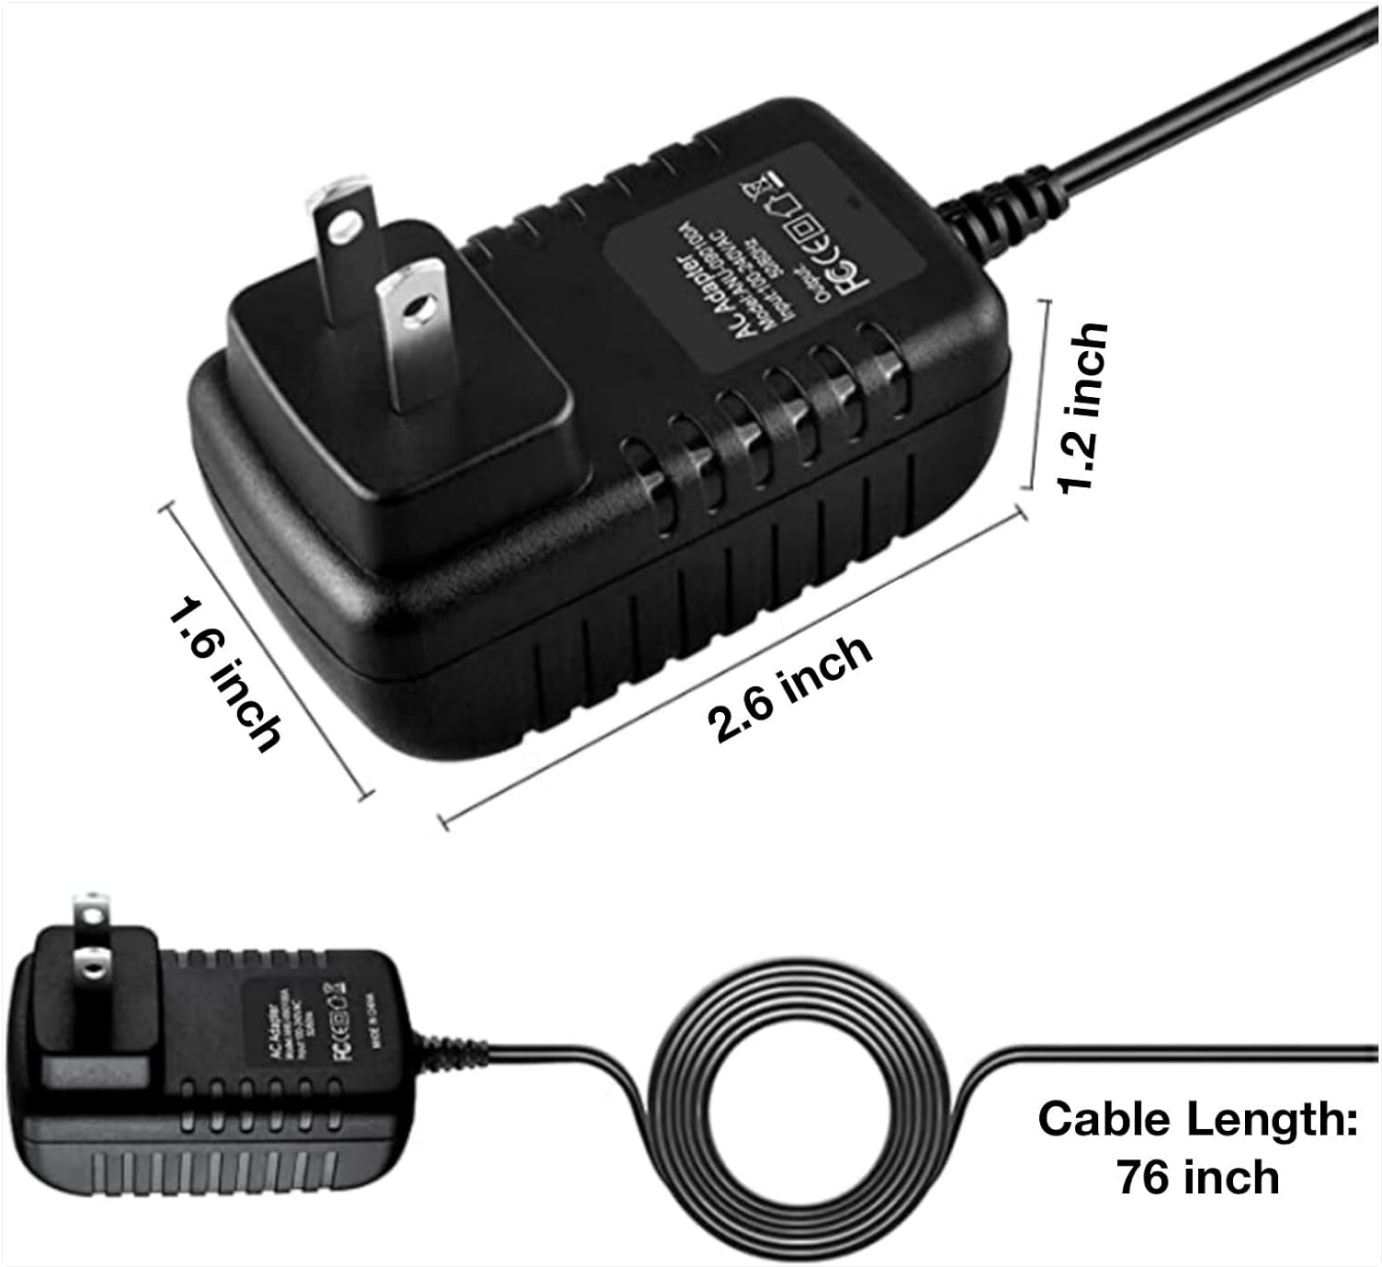


Figure 3: Physical dimensions of the onerbl AC DC Adapter, showing measurements of 2.6 inches in length, 1.6 inches in width, and 1.2 inches in height. The cable length is approximately 76 inches.



Figure 4: Illustration of the adapter's built-in safety features, including short-circuit protection, over-voltage protection, and over-current protection, designed to guard electricity safety.

Warranty and Support

This product comes with a standard warranty. For specific warranty details, please refer to the product packaging or contact the seller directly. If you require technical assistance or have questions not covered in this manual, please contact onerbl customer support through the retailer's platform where the product was purchased.

© 2023 onerbl. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0C65CLPY8

More documents and user manuals: **https://manuals.plus/**