Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

onerbl AC/DC Adapter for Womow W5S HC-1810D

onerbl AC/DC Adapter User Manual

For Womow W5S HC-1810D Cordless Stick Vacuum Cleaner

1. Introduction

This manual provides essential instructions for the safe and effective use of your onerbl AC/DC Adapter. This adapter is specifically designed to provide power and charge the Womow W5S HC-1810D Cordless Stick Vacuum Cleaner.

2. Important Safety Instructions

- **Indoor Use Only:** This adapter is intended for indoor use in dry locations. Do not expose it to rain, moisture, or extreme temperatures.
- **Proper Ventilation:** Ensure the adapter has adequate ventilation during use. Do not cover it or place it in an enclosed space.
- **Disconnect When Not in Use:** Unplug the adapter from the wall outlet when not in use or during electrical storms.
- **Avoid Damage:** Do not use the adapter if the cord or plug is damaged. Do not attempt to disassemble or repair the adapter yourself. Contact qualified service personnel.
- **Compatibility:** Only use this adapter with compatible devices as specified. Using it with incompatible devices may cause damage or injury.
- **Keep Away from Children:** Store the adapter out of reach of children.

3. Setup and Connection

Follow these steps to properly connect your AC/DC adapter:

1. **Verify Compatibility:** Before connecting, ensure that the voltage and current requirements of your Womow W5S HC-1810D vacuum cleaner match the output specifications of this adapter.
2. **Connect to Device:** Insert the adapter's DC output plug securely into the charging port of your Womow W5S HC-1810D vacuum cleaner.
3. **Connect to Power Outlet:** Plug the AC input prongs of the adapter into a standard, functional wall power outlet (AC 100-240V).
4. **Confirm Charging:** Observe your vacuum cleaner for an indication that it is receiving power or charging (e.g., an LED indicator).


AC Adapter
Model:
Input:100-240VAC
50/60Hz
Output:

Figure 3.1: The onerbl AC/DC Adapter. This image shows the main unit of the adapter with its integrated power cord and plug, ready for connection.



Figure 3.2: Adapter in use. The image displays the AC/DC adapter plugged into a power strip on a desk, illustrating a typical usage scenario.

4. Operation

Once properly connected, the onerbl AC/DC Adapter will automatically supply the necessary power to your Womow W5S HC-1810D vacuum cleaner for operation or charging. The adapter features automatic voltage detection for worldwide AC input (100-240V).

5. Maintenance and Care

- **Cleaning:** Disconnect the adapter from power before cleaning. Use a soft, dry cloth to wipe the surface. Do not use liquid cleaners or aerosols.
- **Storage:** When not in use, store the adapter in a cool, dry place, away from direct sunlight and extreme

temperatures. Avoid wrapping the cord too tightly around the adapter.

- **Cord Inspection:** Periodically inspect the power cord and plug for any signs of damage, fraying, or bending. If damage is found, discontinue use immediately.

6. Troubleshooting

If you encounter issues with your adapter, refer to the following table:

Issue	Possible Cause	Solution
Device not charging/powering on.	Loose connection, faulty outlet, incompatible device.	Ensure all connections are secure. Test the wall outlet with another device. Confirm the adapter is compatible with your vacuum cleaner.
Adapter feels excessively hot.	Overload, poor ventilation, internal fault.	Disconnect immediately. Allow to cool. Ensure adequate ventilation. If the issue persists, discontinue use.
Visible damage to cord or adapter.	Physical stress, wear and tear.	Discontinue use immediately to prevent electrical hazards. Do not attempt to repair.

7. Product Specifications

- **Input:** AC 100-240V, 50/60Hz (Worldwide AC Input)
- **Output:** Compatible with 22.2VDC devices (e.g., Womow W5S HC-1810D)
- **Protections:** Over Voltage Protection, Over Heat Protection, Short-circuit Protection, Over-current Protection
- **Cable Length:** Approximately 76 inches (1.93 meters)
- **Dimensions (Adapter Body):** Approximately 2.6 inches (L) x 1.6 inches (W) x 1.2 inches (H)
- **Condition:** Brand New, High Quality Replacement AC Wall Power Charger Adapter

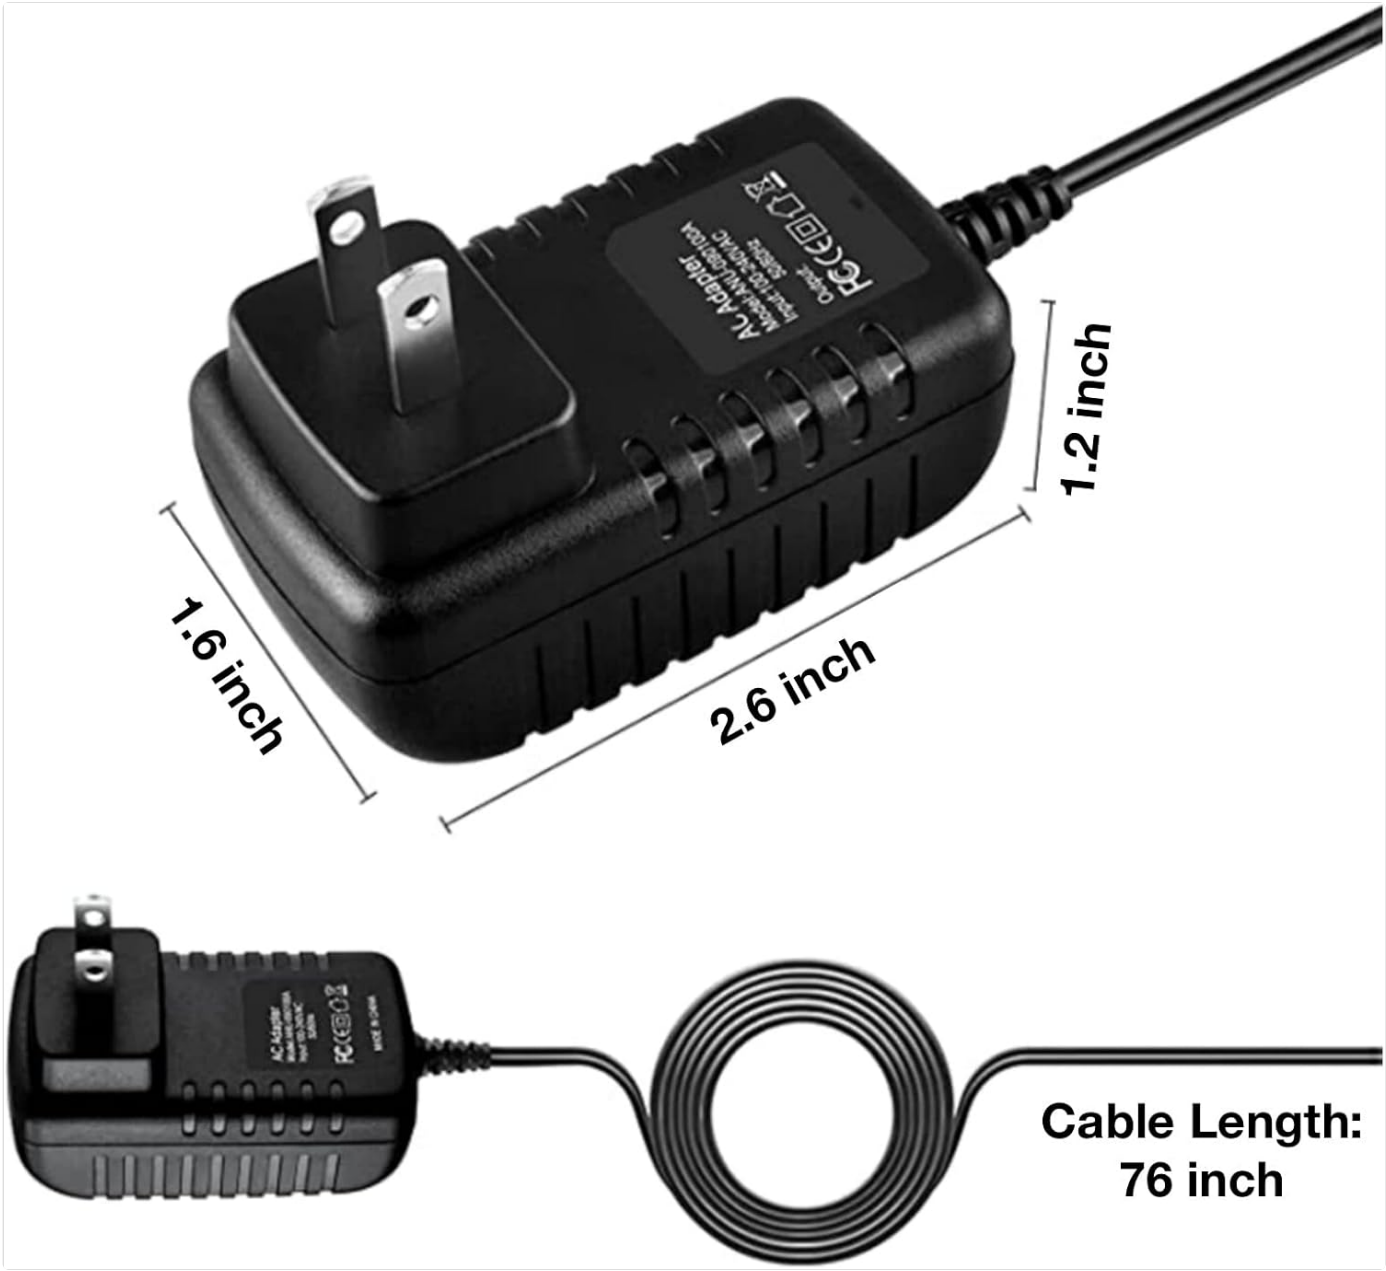


Figure 7.1: Adapter dimensions. This image illustrates the physical measurements of the adapter body, showing its length, width, and height.



Figure 7.2: Smart chip protection. This graphic highlights the built-in safety features including short-circuit, over-voltage, and over-current protection.

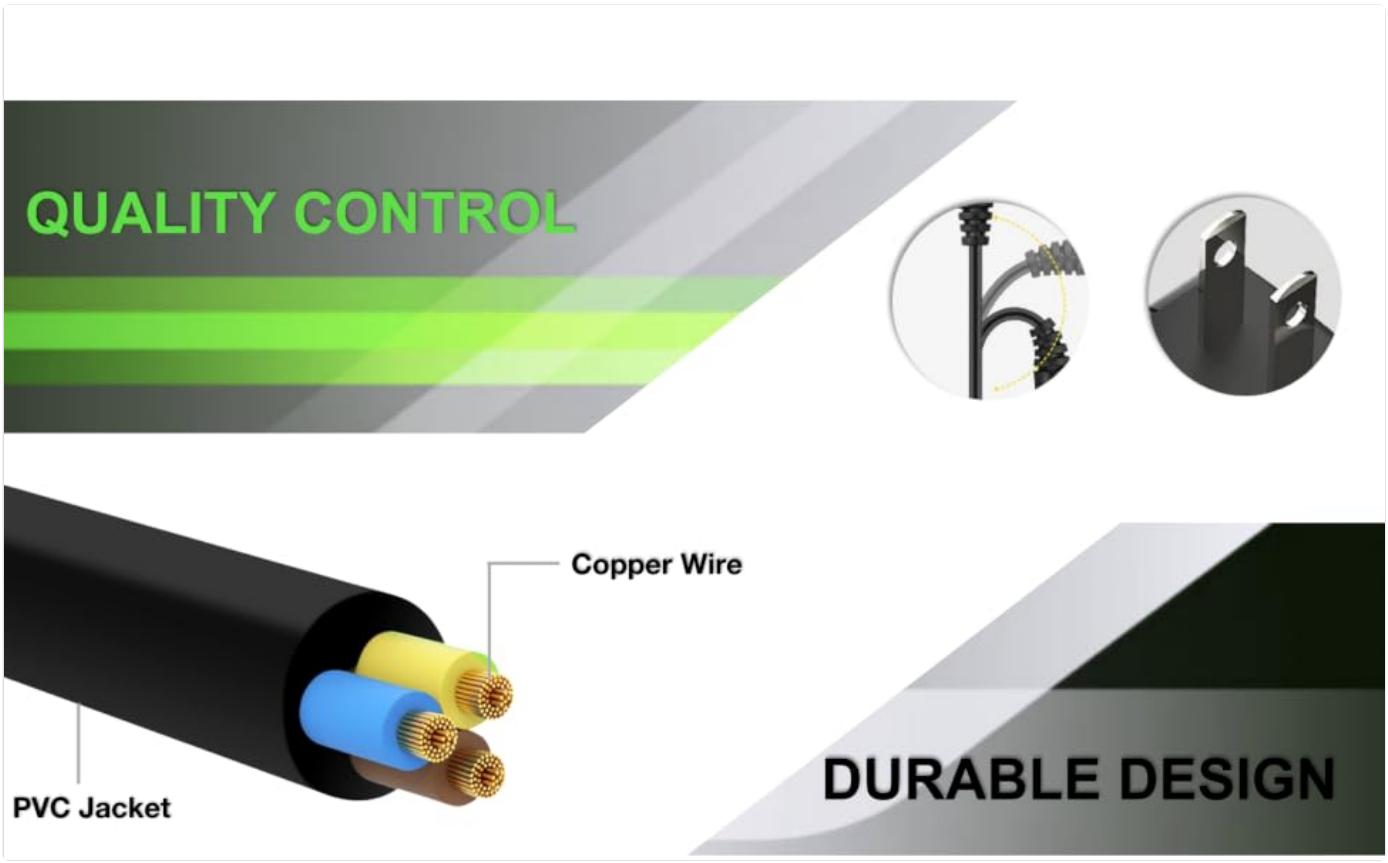


Figure 7.3: Durable design. This image shows a cross-section of the cable, indicating copper wire and a PVC jacket for enhanced durability and quality control.

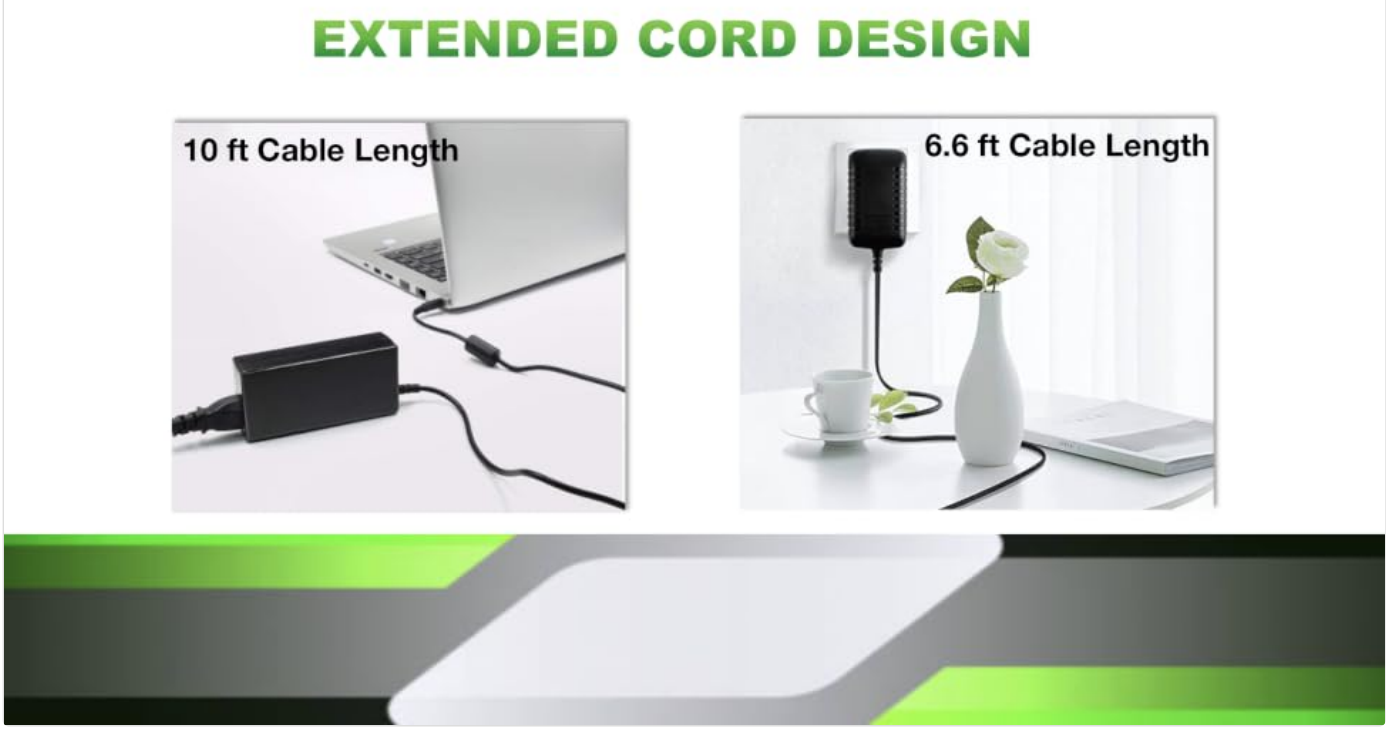


Figure 7.4: Extended cord design. This image illustrates the cable length, providing flexibility in placement and use.

8. Warranty and Support

For warranty information, technical assistance, or customer support regarding your onerbl AC/DC Adapter, please refer to the documentation provided at the time of purchase or contact your retailer. Specific warranty terms may vary.

© 2023 onerbl. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0C65DZ484

More documents and user manuals: **https://manuals.plus/**