Whirlpool WSB 624 S IT

Whirlpool WSB 624 S IT Washing Machine User Manual

Model: WSB 624 S IT

1. Introduction

This manual provides essential information for the safe and efficient operation of your new Whirlpool WSB 624 S IT washing machine. Please read these instructions carefully before using the appliance and retain them for future reference. Proper use and maintenance will ensure optimal performance and extend the lifespan of your washing machine.



Image 1.1: Front view of the Whirlpool WSB 624 S IT washing machine.

2. Safety Information

General Safety

- Ensure the appliance is properly grounded before use.
- Do not allow children to play with or operate the washing machine.
- Keep packaging materials out of reach of children.
- Do not touch the appliance with wet hands or feet.
- Unplug the appliance before cleaning or performing any maintenance.
- Do not open the detergent dispenser or door during a wash cycle.

Installation Safety

- Install the washing machine on a firm, level floor.
- Ensure adequate ventilation around the appliance.

- Do not install the appliance in areas where it may be exposed to freezing temperatures.
- Connect to a cold water supply only.

3. Product Overview

Control Panel

The control panel allows you to select wash programs, adjust settings, and start/stop cycles. Refer to the image below for a detailed view of the control panel and its main functions.



Image 3.1: Close-up of the control panel, showing program selector, display, and function buttons.

Detergent Dispenser

The detergent dispenser is located on the top left of the machine. It typically has compartments for pre-wash detergent, main wash detergent, and fabric softener.



Image 3.2: Open detergent dispenser drawer, showing compartments for detergent and softener.

Drum and Door

The washing machine features a front-loading drum with a capacity of 6 kg. The door opens wide for easy loading and unloading of laundry.



Image 3.3: The washing machine with its door open, revealing the stainless steel drum.

4. Installation

Unpacking

- Remove all packaging materials, including the polystyrene base and any protective film.
- Remove the transport bolts from the rear of the machine. Keep these bolts for future transport.

Positioning and Leveling

- Place the washing machine on a flat, stable surface.
- Adjust the feet of the appliance to ensure it is perfectly level. This prevents vibrations and excessive noise during operation.
- The slim design (42.5 cm depth) allows for installation in compact spaces.



Image 4.1: The washing machine installed in a modern laundry area, showcasing its compact design.

Water and Drain Connections

- Connect the water inlet hose to a cold water tap. Ensure the connection is secure to prevent leaks.
- Position the drain hose into a standpipe or over the edge of a sink, ensuring it is securely fixed to prevent displacement during draining.

Electrical Connection

- Plug the power cord into a grounded electrical outlet.
- Ensure the voltage matches the specifications of your appliance.

5. Operating Instructions

Loading Laundry

- Sort laundry by fabric type, color, and degree of soiling.
- Open the washing machine door and load items loosely into the drum, ensuring not to overload. The maximum capacity is 6 kg.
- Close the door firmly.

Adding Detergent and Additives

- Pull out the detergent dispenser drawer.
- Add the appropriate amount of detergent to the main wash compartment. If using pre-wash, add detergent to the pre-wash compartment.
- Pour fabric softener into its designated compartment, ensuring not to exceed the maximum fill line.
- Gently push the dispenser drawer back into place.

Selecting a Program

- Turn the program selector knob to choose the desired wash program (e.g., Cotton, Synthetics, Rapid 30).
- The 6th Sense Technology will automatically adapt resources based on load size and type for optimal results.
- Adjust additional options such as temperature or spin speed if available and desired.

Starting a Cycle

- Press the 'Start/Pause' button to begin the wash cycle.
- To pause a cycle, press the 'Start/Pause' button again. Press it once more to resume.
- To cancel a cycle, press and hold the 'Start/Pause' button for a few seconds until the machine resets.

Delayed Start

- Select your desired program and options.
- Press the 'Delayed Start' button repeatedly to set the desired delay time.
- Press 'Start/Pause' to activate the delayed start. The machine will begin the cycle after the set delay.

6. Programs and Features

6th Sense Technology

The intelligent 6th Sense sensors automatically adapt resources (time, energy, water) based on the size and type of the load. This ensures optimized washing performance and efficiency for your garments.

Inverter Motor

The innovative Inverter Motor is designed for quiet operation and long-lasting performance. It contributes to ideal washing results with reduced noise levels.

Rapid 30 Program

This program offers excellent washing results in just 30 minutes, ideal for lightly soiled items or when you need quick laundry turnaround.

Delayed Start

The Delayed Start option allows you to postpone the start of a wash cycle, enabling you to schedule laundry at a more convenient time or to take advantage of off-peak electricity rates.

7. Maintenance and Cleaning

Cleaning the Detergent Dispenser

- Regularly remove and clean the detergent dispenser drawer under running water to prevent residue buildup.

Cleaning the Filter

- Locate the filter at the bottom front of the machine.
- Place a shallow container beneath the filter to catch any residual water.
- Carefully unscrew and remove the filter, then clean it of any lint or debris.
- Reinsert and securely tighten the filter.

Cleaning the Exterior

- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

Drum Care

- Periodically run a maintenance wash cycle (e.g., a hot wash with no laundry and a descaling agent) to keep the drum clean and fresh.

8. Troubleshooting

Common Issues and Solutions

Problem	Possible Cause	Solution
Machine does not start	No power; Door not closed; Delayed start active	Check power supply; Ensure door is latched; Cancel or wait for delayed start.
Excessive vibration/noise	Machine not level; Transport bolts not removed; Uneven load	Adjust leveling feet; Remove transport bolts; Redistribute laundry in drum.
Water not draining	Drain hose kinked/blocked; Filter blocked	Check and clear drain hose; Clean the pump filter.
Detergent residue in dispenser	Low water pressure; Dispenser blocked	Check water supply; Clean detergent dispenser.

9. Specifications

Specification	Value
Manufacturer	Whirlpool
Model Number	WSB 624 S IT
Product Dimensions (L x W x H)	42.5 x 59.5 x 85 cm
Item Weight	61.5 Kilograms
Color	White
Finish Type	Glossy
Material	Steel
Voltage	220 Volts
Installation Method	Freestanding
Capacity	6 Kilograms
Access Location	Front Load
Special Features	6th Sense Technology, Slim Design, Inverter Motor, Delayed Start, Rapid 30
Included Components	Machine Body
Energy Efficiency Class	C
Spin Speed	1200 RPM
Date First Available	29 May 2023

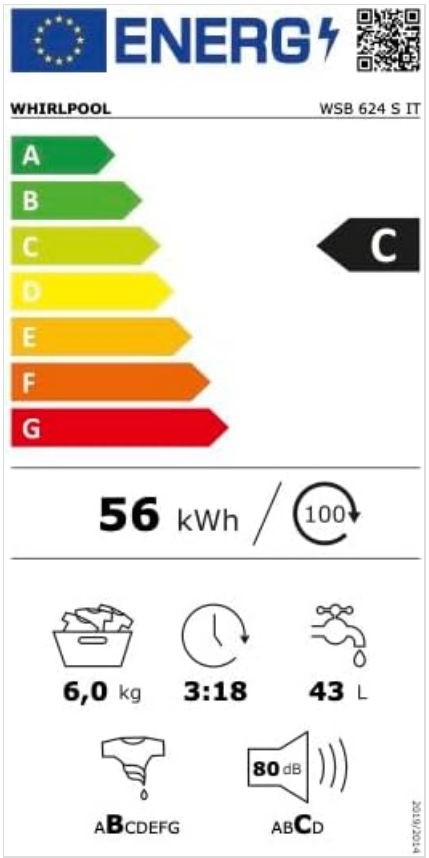


Image 9.1: Energy label for the Whirlpool WSB 624 S IT, indicating its energy class and consumption.

Scheda informativa del prodotto - (UE) 2019/2014

Marchio o nome del fornitore: WHIRLPOOL

Indirizzo del fornitore: VIA CARLO PISACANE, 1 20016 PERO (MI) ITALY

Identificativo del modello: WSB 624 S IT

Parametri di prodotto generali:

Parametro	Valore		Parametro	Valore	
Capacità nominale (kg);	6,0		Dimensioni in cm	Altezza	85
				Larghezza	60
				Profondità	43
Indice di efficienza energetica (EEI_W)	68,9		Classe di efficienza Energetica	C	
Indice di efficienza di lavaggio	1,031		Efficacia di risciacquo (g/kg)	4,9	
Consumo di energia in kWh per ciclo, con il programma eco 40-60 in una combinazione di carichi pieni e parziali. Il consumo effettivo di energia dipende dalle modalità d'uso dell'apparecchio	0,558		Consumo di acqua in litri per ciclo, con il programma eco 40-60 in una combinazione di carichi pieni e parziali. Il consumo effettivo di acqua dipende dalle modalità d'uso dell'apparecchio e dalla durezza dell'acqua	43	
Temperatura massima all'interno dei tessuti trattati (°C)	Capacità nominale	40	Contenuto ponderato di umidità residua (%)	53,0	
	Metà	35			
	Un quarto	25			

Image 9.2: Detailed product information sheet with technical data.

10. Warranty and Support

For warranty information, technical support, or service requests, please refer to the warranty card included with your product or visit the official Whirlpool website. Ensure you have your model number (WSB 624 S IT) and serial number ready when contacting support.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question