Globe Electric 64000043

Globe Electric 64000043 3-Light Track Lighting Instruction Manual

Model: 64000043

Introduction

This manual provides instructions for the installation, operation, and maintenance of your Globe Electric 3-Light Track Lighting fixture. This fixture features a matte white finish and three light heads with bamboo shades, designed for ceiling mounting. The pivoting track heads allow for adjustable light direction, making it suitable for various indoor settings.



Image: The Globe Electric 3-Light Track Lighting fixture, showcasing its matte white finish and three bamboo-shaded light heads.

Safety Information

WARNING: RISK OF ELECTRIC SHOCK.

- Always turn off the power at the main circuit breaker or fuse box before beginning installation or performing any maintenance.
- Consult a qualified electrician if you are unsure about the installation process.

- Ensure all electrical connections are made in accordance with local codes and ordinances.
- Do not exceed the maximum wattage specified for the bulbs.
- This product is for indoor use only and is not water resistant.

Package Contents

Verify that all components are present before beginning installation:

- Track Light fixture
- Bamboo Shades (3)
- Instruction Sheet
- Mounting Hardware

Note: Light bulbs are sold separately.

Specifications

Brand	Globe Electric
Model Name	Sophia
Part Number	64000043
Color	White, Bamboo
Material	Metal, Bamboo
Product Dimensions	22"L x 4.75"W x 6.88"H (55.8 cm L x 12 cm W x 17.5 cm H)
Installation Type	Hard-wired ceiling mounting
Power Source	Hardwired
Voltage	120 Volts
Number of Light Sources	3
Bulb Base	E12
Max Wattage per Bulb	60 Watts
Special Feature	Dimmable (dimmer switch not included)
Indoor/Outdoor Usage	Indoor

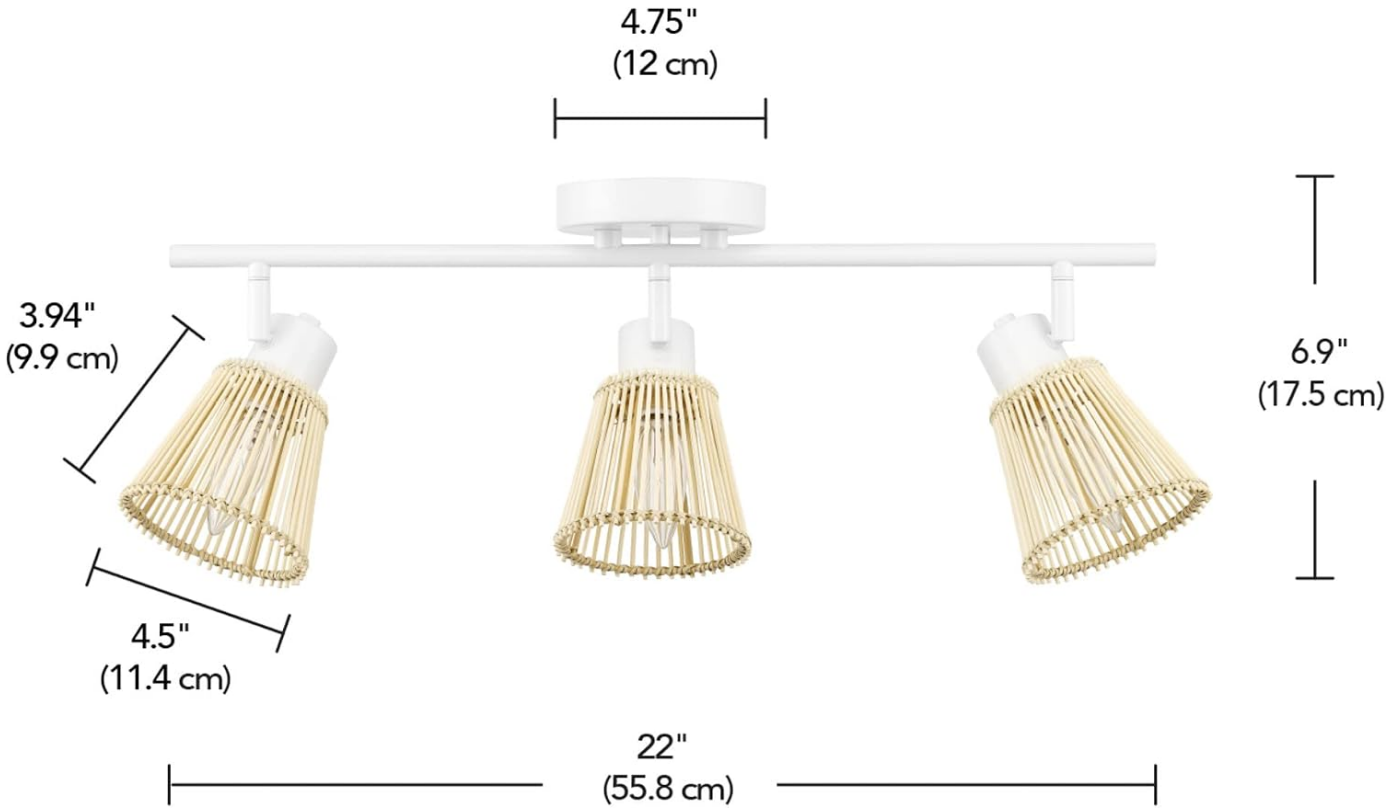


Image: Detailed dimensions of the track lighting fixture, including length, width, and height measurements.

Setup and Installation

This fixture is designed for hard-wired ceiling mounting. Professional installation is recommended if you are unfamiliar with electrical wiring.

Required Tools (Not Included):

- Screwdriver
- Wire strippers
- Electrical tape
- Safety glasses

Installation Steps:

1. **Turn Off Power:** Locate the circuit breaker controlling the light fixture's location and turn it OFF. Ensure power is completely disconnected before proceeding.
2. **Prepare Mounting Surface:** Ensure the ceiling surface is clean, dry, and structurally sound to support the fixture's weight.
3. **Attach Mounting Bracket:** Use the provided mounting hardware to securely attach the fixture's mounting bracket to the ceiling junction box.
4. **Wire Connections:** Connect the fixture's wires to the household electrical wires according to standard electrical codes (typically black to black, white to white, and ground to ground). Secure connections with wire nuts and electrical tape.
5. **Mount Fixture:** Carefully align the fixture with the mounting bracket and secure it in place using the provided screws.
6. **Install Shades:** Attach the three bamboo shades to the light heads.
7. **Insert Bulbs:** Screw in three E12 base bulbs (max 60W each, sold separately) into the sockets.
8. **Restore Power:** Turn the power back ON at the circuit breaker.



Image: A close-up view of the fixture's ceiling mounting base, showing the connection points.

Operating Instructions

Adjusting Light Direction:

The three light heads are designed to pivot up to 350 degrees. Gently grasp each light head and rotate it to direct the light as desired. This allows for customized illumination of specific areas in your room.



Image: The track light fixture demonstrating the 350-degree pivoting motion of its individual light heads.

Dimming Functionality:

This track light fixture is fully dimmable. To utilize the dimming feature, you must install a compatible dimmer switch (sold separately) in place of your standard wall light switch. Follow the dimmer switch manufacturer's instructions for installation.

Maintenance

To maintain the appearance and functionality of your track light fixture, follow these simple guidelines:

- **Cleaning:** Dust the fixture regularly with a soft, dry cloth. For more thorough cleaning, ensure the power is off and gently wipe with a slightly damp cloth. Avoid abrasive cleaners or solvents, as these can damage the finish and bamboo shades.
- **Bulb Replacement:** Always turn off the power before replacing bulbs. Allow bulbs to cool completely before handling. Use only E12 base bulbs with a maximum wattage of 60W.



Image: A detailed close-up of one of the track light's bamboo shades, highlighting its construction.

Troubleshooting

If you encounter issues with your track lighting, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn on.	No power to the fixture.	Check the circuit breaker or fuse. Ensure the wall switch is ON.
	Loose wire connections.	Turn off power at the breaker. Check all wire connections inside the junction box.
	Faulty bulb.	Replace the bulb with a new, working E12 base bulb (max 60W).
Light flickers or dims incorrectly.	Incompatible dimmer switch.	Ensure you are using a dimmer switch compatible with LED or incandescent bulbs, depending on your bulb type.
	Loose bulb.	Turn off power. Tighten the bulb in its socket.

If the problem persists after attempting these solutions, contact a qualified electrician or Globe Electric customer support.

Warranty and Support

This product is sold with **No Warranty** as per the manufacturer's specifications.
For technical assistance or inquiries, please refer to the contact information provided on the product packaging or visit the official Globe Electric website.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question