Vistefly B6

Vistefly B6 Cordless Stick Vacuum Cleaner User Manual

Model: B6

1. Introduction

Thank you for choosing the Vistefly B6 Cordless Stick Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and keep it for future reference.

2. Safety Instructions

- Always disconnect the vacuum cleaner from the charger before cleaning or performing maintenance.
- Do not use the appliance to pick up water or wet substances, hot ashes, sharp objects, or hazardous materials.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Do not operate the vacuum cleaner if it is damaged or malfunctioning. Contact customer support for assistance.
- Use only the original charger and accessories provided by Vistefly.
- This appliance is for household use only. Do not use outdoors or on wet surfaces.

3. Package Contents

Please check the package contents upon unboxing to ensure all components are present:

- Cordless Vacuum Cleaner (Main Unit) x1
- Extension Tube x1
- Floor Brush x1

- Power Adapter x1
- 2-in-1 Brush x1
- Crevice Tool x1
- Sofa Brush x1
- Wall Mount Bracket x1
- Spare HEPA Filter x1
- Mounting Screws x2
- Instruction Manual x1

4. Product Overview and Filtration System

The Vistefly B6 features a 6-layer filtration system designed to capture 99.99% of fine particles and release fresh air, preventing secondary pollution. This system includes cyclone filtration, metal mesh filtration, conical filtration, sponge filtration, and dual HEPA filtration.

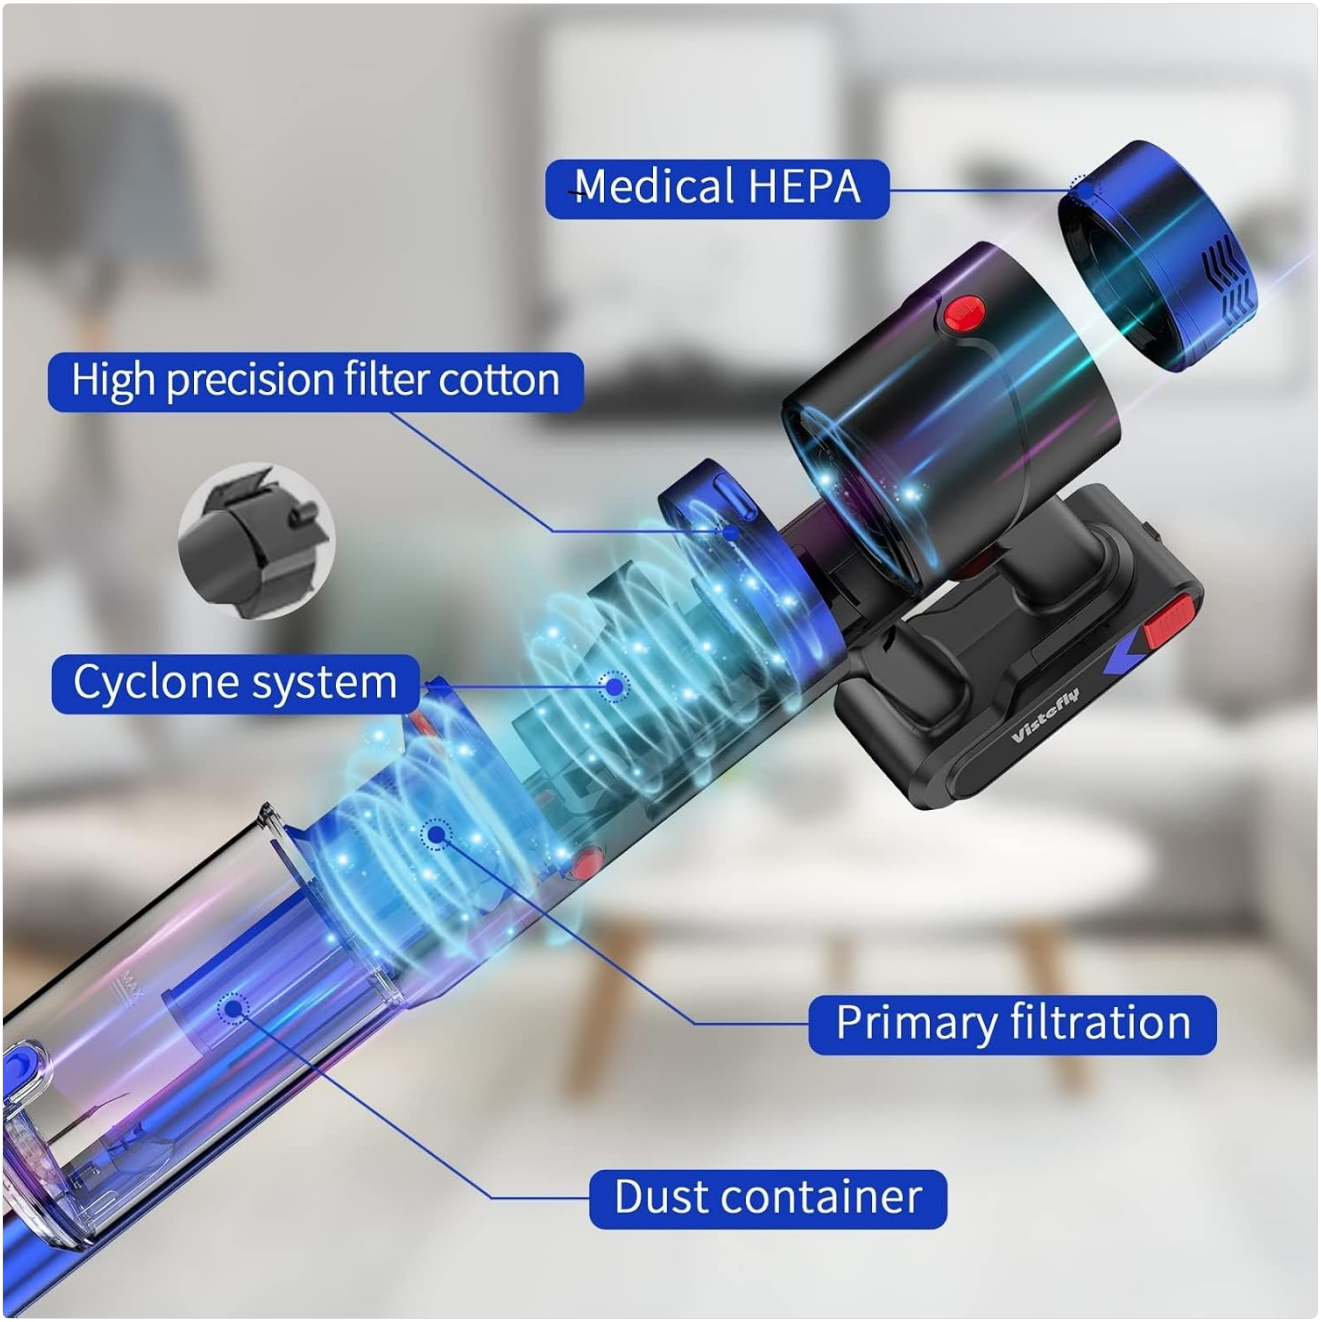


Image 1: Diagram illustrating the Vistefly B6's 6-layer filtration system, including the dust container, primary filtration, cyclone system, high precision filter cotton, and Medical HEPA filter components.

5. Setup

5.1 Assembly

1. **Attach the Extension Tube:** Insert the extension tube into the main unit until it clicks securely.
2. **Attach the Floor Brush:** Connect the floor brush to the other end of the extension tube, ensuring it locks into place.
3. **Install Wall Mount (Optional):** Use the provided screws to secure the wall mount bracket in a convenient location for storage and charging.

5.2 Charging the Battery

The Vistefly B6 is equipped with 8 rechargeable 2000 mAh batteries. Before first use, fully charge the vacuum cleaner.

- Connect the power adapter to the charging port on the main unit or the wall mount.

- Plug the adapter into a power outlet.
- The LED display will indicate the charging status. A full charge typically takes approximately 4-5 hours.
- The battery is interchangeable, allowing for extended cleaning time with an optional spare battery.

6. Operating Instructions

6.1 Power On/Off and Suction Modes

- **Power On:** Press the power button to start the vacuum cleaner.
- **Adjust Suction:** The vacuum offers 5 speed modes. Use the mode button to cycle through the suction levels: Automatic, Low, Medium, High, and MAX.
- **Automatic Dust Detection:** In Automatic mode, the vacuum cleaner intelligently adjusts suction power based on the detected dust level.
- **LED Display:** The integrated LED screen provides real-time information on suction power and battery level.
- **Power Off:** Press the power button again to turn off the vacuum cleaner.

6.2 Using Attachments

The Vistefly B6 comes with various attachments for different cleaning tasks:

- **Floor Brush:** Ideal for hard floors and short-pile carpets. Features 4 LED lights to illuminate dark areas and a flexible 180-degree side rotation and 90-degree vertical rotation for easy maneuverability. The rubber brush design minimizes hair tangling.
- **2-in-1 Brush:** Suitable for cleaning curtains, upholstery, and delicate surfaces.
- **Crevice Tool:** Perfect for narrow gaps, corners, and hard-to-reach areas.
- **Sofa Brush:** Designed for cleaning sofas, car seats, and other fabric surfaces.

These attachments can be combined in various ways to suit your specific cleaning needs.

6.3 Battery Runtime

The vacuum cleaner offers the following approximate runtimes on a full charge:

- **Automatic Mode:** Up to 60 minutes
- **Low Mode:** Up to 60 minutes
- **Medium Mode:** Up to 45 minutes
- **High Mode:** Up to 25 minutes
- **MAX Mode:** Up to 12 minutes

7. Maintenance

Regular maintenance ensures optimal performance and extends the lifespan of your Vistefly B6 vacuum cleaner.

7.1 Emptying the Dust Container

The large 1.3-liter dust container reduces the frequency of emptying. Empty the dust container when the debris reaches the

MAX fill line.

1. Ensure the vacuum cleaner is turned off.
2. Press the dustbin release button to detach the dust container from the main unit.
3. Hold the dust container over a trash bin and open the bottom flap to release the contents.
4. Close the flap and reattach the dust container to the main unit until it clicks.

7.2 Cleaning the Filters

The 6-layer filtration system requires regular cleaning to maintain suction power and air quality. A spare HEPA filter is included for convenience.

1. Turn off the vacuum cleaner and remove the dust container.
2. Twist and pull out the filter components (HEPA filter, sponge filter, conical filter, metal mesh filter).
3. Tap off loose dust from each filter.
4. Rinse the filters under cold running water. Do not use detergents.
5. Allow all filter components to air dry completely for at least 24 hours before reassembling. Do not use a dryer or direct heat.
6. Reassemble the dry filters in reverse order and reattach the dust container.

7.3 Cleaning the Brush Roll

Periodically check the floor brush for tangled hair or debris.

1. Ensure the vacuum cleaner is off and disconnected from the extension tube.
2. Locate the release mechanism on the side of the floor brush and open it to remove the brush roll.
3. Use scissors or a cleaning tool to cut and remove any tangled hair or fibers from the brush roll.
4. Clean any debris from the brush roll housing.
5. Reinsert the brush roll and close the release mechanism until it clicks.

8. Troubleshooting

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is depleted.	Charge the battery fully.
	Power button malfunction.	Contact customer support.
Low suction power.	Dust container is full.	Empty the dust container.
	Filters are clogged.	Clean or replace the filters. Ensure they are completely dry before reinstallation.
	Brush roll is tangled.	Clean the brush roll.
	Hose or nozzle is blocked.	Check and clear any blockages in the extension tube or attachments.

Problem	Possible Cause	Solution
Battery not charging.	Power adapter not connected properly.	Ensure the adapter is securely plugged into both the vacuum and the power outlet.
	Faulty power adapter or battery.	Contact customer support for replacement.

9. Specifications

Feature	Specification
Brand	Vistefly
Model Number	B6
Color	Pink
Dimensions (Product)	43.8 x 30 x 19 cm
Weight (Product)	4.08 kg
Dust Container Capacity	1.3 Liters
Motor Wattage	500 Watts
Suction Power (MAX)	34000 PA
Speed Modes	5
Noise Level	72 Decibels
Battery Type	Rechargeable (8 x 2000 mAh)
Voltage	29.6 Volts
Max Runtime	60 minutes
Filter Type	HEPA Filter (6-layer filtration system)
Special Features	Cordless, LED Display, Automatic Dust Detection, LED Floor Brush Lights
Recommended Surface	Hard floors, Carpets

10. Warranty and Support

The Vistefly B6 Cordless Stick Vacuum Cleaner comes with a**2-year quality guarantee and technical support**. For any questions, issues, or technical assistance, please contact Vistefly customer service. Our customer support team is available 24/7 to assist you.

Please refer to your purchase documentation for specific contact details or visit the official Vistefly website for support information.

© 2024 Vistefly. All rights reserved.