WiMiUS P61

WiMiUS P61 Mini Projector User Manual

Model: P61 | Brand: WiMiUS

1. Introduction

The WiMiUS P61 Mini Projector is a portable and versatile device designed for an immersive viewing experience. It features innovative electric focus, dual-band WiFi (5G/2.4G), Bluetooth 5.2 connectivity, and supports 1080P resolution with a high contrast ratio. Its compact design and multiple connectivity options make it suitable for various environments, from home theaters to outdoor camping.





Figure 1.1: WiMiUS P61 Mini Projector with its portable handle.

2. What's in the Box

Upon unboxing your WiMiUS P61 Mini Projector, please ensure all the following items are present:

- WiMiUS P61 mini Projector *1
- Power cord *1
- HDMI Cable *1
- AV Cable *1
- Remote *1 (Requires 2 AAA batteries, not included)
- WiMiUS packing box *1
- Cleaning Kit *1



Figure 2.1: The compact size of the projector, illustrating its portability.

3. Setup Guide

3.1 Placement

Position the projector on a stable, flat surface. For optimal viewing, ensure the projector is perpendicular to your projection surface (wall or screen). The projector supports a display size from 40 to 300 inches. Consider using a tripod (not included) for flexible positioning and angle adjustment.

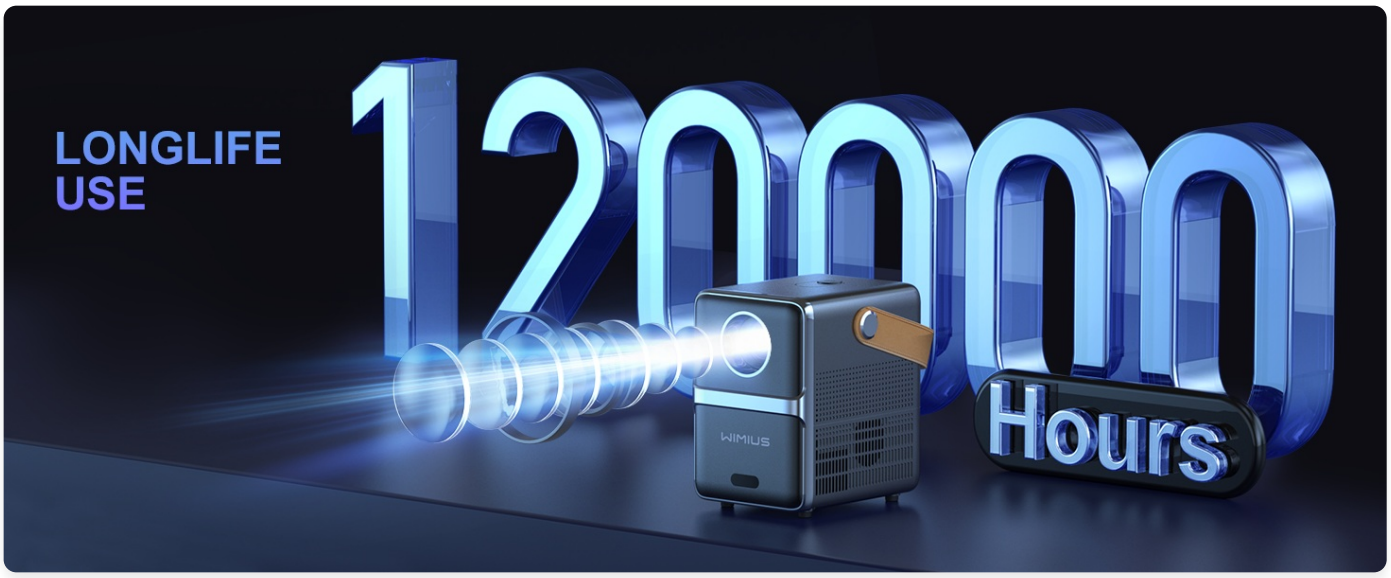


Figure 3.1: Illustration of optimal projection distance for screen size.

3.2 Power Connection

Connect the provided power cord to the projector's power input and then to a power outlet. The power cord is not very long, so an extension cord may be necessary depending on your setup.

3.3 Initial Focus Adjustment (Electric Focus)

The P61 features electric focus for quick and precise image clarity. Use the smart remote control to adjust the focus until the projected image is sharp and clear. This eliminates the need for manual lens adjustments.



Figure 3.2: Electric focus adjustment using the remote control.

4. Operating Instructions

4.1 Connectivity Options

The projector offers multiple ways to connect your devices:

- **5G/2.4G Dual-Band WiFi:** For smooth and lag-free online video streaming from iOS, Android, MacBook, and Windows laptops.
- **Bluetooth 5.2:** Connect to external Bluetooth speakers, earphones, or AirPods for enhanced audio.
- **HDMI:** Connect to devices like Fire TV Stick, Chromecast, Roku, DVD players, laptops, and gaming consoles (e.g., PS5).

- **USB:** Connect USB drives for media playback.
- **AV:** Connect older devices using the provided AV cable.
- **3.5mm Headphone Jack:** For wired audio output to headphones or external speakers.



Figure 4.1: High-speed 5G WiFi connection for seamless streaming.



Figure 4.2: Bluetooth 5.2 for connecting to various audio devices.

4.2 Audio Output

The projector features a built-in 2*6W speaker with SRS sound system for cinematic stereo sound. For a more immersive experience, connect external Bluetooth speakers or use the 3.5mm headphone jack.

4.3 Image Quality

The P61 supports 1920x1080 resolution and boasts a 15000:1 high dynamic contrast ratio with 99% NTSC technology, delivering vibrant and dynamic projection images.



Figure 4.3: Visual comparison of image clarity and brightness.

5. Maintenance

To ensure the longevity and optimal performance of your projector, regular maintenance is recommended:

- **Lens Cleaning:** Use the provided cleaning kit to gently clean the projector lens. Avoid using abrasive materials that could scratch the lens.
- **Ventilation:** Ensure the projector's ventilation openings are clear and unobstructed to allow for proper heat dissipation. This helps maintain stable performance and extends the product's lifespan.
- **Storage:** When not in use, store the projector in a cool, dry place, away from direct sunlight and excessive dust.

6. Troubleshooting

If you encounter any issues with your WiMiUS P61 Mini Projector, please refer to the following common solutions:

Problem	Possible Cause	Solution
Blurred Image	Incorrect focus setting.	Use the remote control to adjust the electric focus until the image is clear.
No Signal/No Picture	Incorrect input source selected; loose cable connection; device not powered on.	Ensure the correct input source (HDMI, USB, AV, WiFi) is selected. Check all cable connections. Verify the connected device is powered on.
No Sound	Volume too low; external speaker not connected or paired correctly; projector muted.	Increase projector volume. If using Bluetooth, ensure external speaker is paired. Check if projector is muted.
WiFi Connection Issues	Weak signal; incorrect password; interference.	Ensure projector is within range of your WiFi router. Re-enter WiFi password. Try connecting to the 2.4G band if 5G is unstable.

For more detailed troubleshooting or issues not listed here, please refer to the comprehensive User Manual (PDF) available for download or contact customer support.

7. Specifications

- **Model:** P61
- **Brand:** WiMiUS
- **Display Resolution:** 1920 x 1080 (Supported)
- **Contrast Ratio:** 15000:1
- **Connectivity Technology:** Wireless/Bluetooth/5G WiFi/HDMI/USB/AV/3.5mm jack
- **Special Feature:** Built-In Speaker
- **Recommended Uses:** Indoor/Outdoor
- **Item Weight:** 2.99 pounds
- **Product Dimensions:** 5.3 x 4.1 x 6.1 inches
- **Color:** Grey

8. Warranty and Support

WiMiUS is committed to providing excellent customer service. The P61 Mini Projector comes with a 2-year free replacement warranty and lifetime support.

For any questions or assistance, please contact WiMiUS customer service via the after-sales email. They promise 24/7 service.
You can also refer to the official User Manual (PDF) for more detailed information.

© 2024 WiMiUS. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question