Funsicle P1A01848E

Funsicle Quickset 18ft x 48in Round Inflatable Above Ground Swimming Pool with SkimmerPlus Filter Pump User Manual

Brand: Funsicle | Model: P1A01848E

1. Setup Instructions

Proper setup is crucial for the stability and longevity of your Funsicle Quickset pool. Follow these steps carefully.

1.1 Site Preparation

Select a firm, flat, and level surface for your pool. Ensure the area is free of any stones, sharp objects, or debris that could puncture the pool liner. Do not set up the pool on sandy or loose ground.

1.2 Laying Out the Liner

If using a ground cloth (not included), lay it down first. Then, carefully unfold the pool liner onto the ground cloth. Allow the liner to sit in direct sunlight for approximately two hours to make the material more pliable and easier to work with.

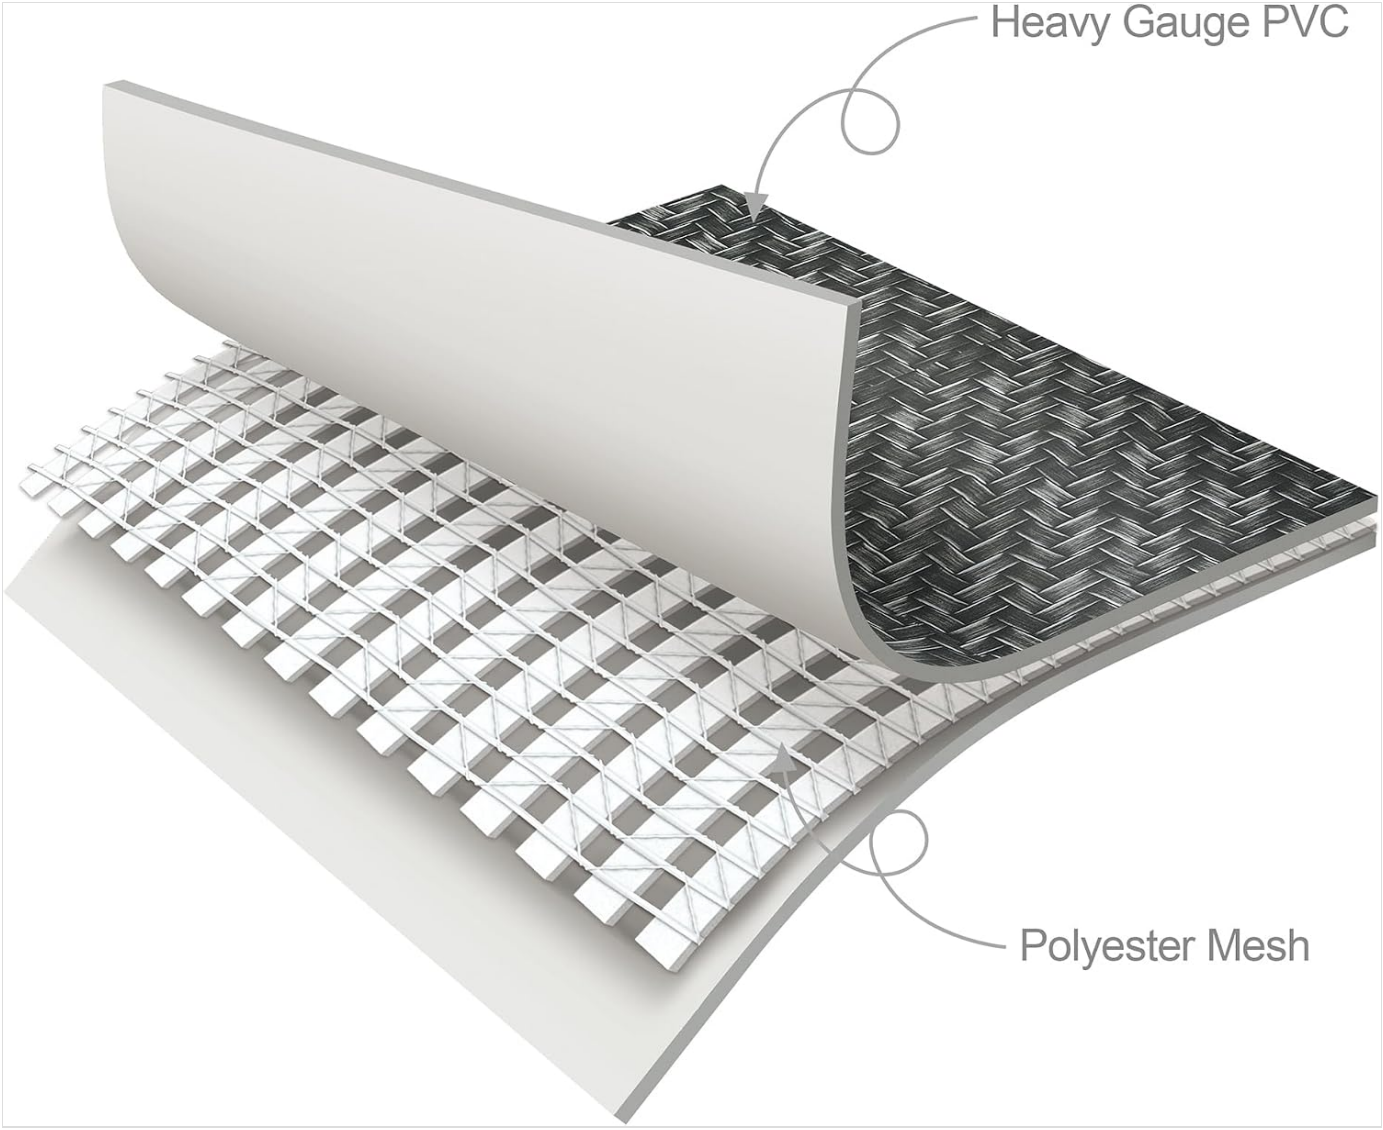


Image: The Funsicle Quickset pool liner being carefully unfolded and positioned on a protective ground cloth.

1.3 Inflating the Top Ring

Locate the inflation valve on the top ring of the pool. Use a manual or power pump to inflate the ring until it is firm to the touch. Ensure the valve is securely pushed in after inflation to prevent air leakage.

1.4 Installing the Filtration System

If your pool includes a filter pump, locate the inlet and outlet holes on the pool liner. Insert the suction and return fittings into their respective holes. Install a hose clamp on each end of the hoses and connect them to the filter pump, ensuring a tight seal over the O-rings. Refer to the filter pump's specific user guide for detailed assembly instructions.



Image: The Funsicle RX1000 filter pump, showing its cartridge and connections.

1.5 Filling the Pool

Begin filling the pool with approximately one inch of water. Stop the water flow and carefully push out any floor wrinkles from the center outwards to ensure the liner is taut and smooth. This prevents uneven settling. Once wrinkles are removed, continue filling the pool to the recommended fill line. Periodically check the pool to ensure it fills evenly, adjusting as needed.

1.6 Video Tutorial: Funsicle QuickSet Pool Setup

Your browser does not support the video tag.

Video: An official Funsicle tutorial demonstrating the complete setup process for the QuickSet Ring Top Above Ground Swimming Pool, including site preparation, liner placement, inflation, and filling.

2. Operating Instructions

Once your pool is set up and filled, follow these guidelines for safe and effective operation.

2.1 Filter Pump Operation

The included RX1000 filter pump features a GFCI (Ground Fault Circuit Interrupter) power cord for safety. If the pump does not turn on after plugging it in, check the GFCI unit. The pump's operation is controlled by a daily timer that can be configured using the 'Set' button on the GFCI unit. Refer to the filter pump's user guide for detailed timer settings.

2.2 General Usage

The Funsicle Quickset 18ft x 48in pool can hold up to 6,423 gallons of water and comfortably accommodates up to 9 people. Always supervise children in and around the pool. Ensure all safety rules are followed.



Image: People enjoying the Funsicle Quickset above ground pool, demonstrating its capacity for multiple users.

3. Maintenance

Regular maintenance ensures clean water and extends the life of your pool.

3.1 Water Chemistry

Regularly test and balance the pH and chlorine levels of your pool water using a pool test kit. Maintain levels within the recommended healthy range to prevent algae growth and ensure water clarity.

3.2 Filter Cartridge

The RX1000 filter pump uses a Type C filter cartridge. Inspect and clean the filter cartridge regularly, and replace it as needed to maintain optimal filtration performance. A clean filter is essential for clear pool water.



Image: A water jet from the filter pump returning clean, filtered water into the Funsicle pool, indicating proper circulation.

3.3 Drainage

The pool features a 2-in-1 drainage plug for convenient draining. When preparing to store the pool or for seasonal closing, ensure the pool is completely drained and thoroughly cleaned before packing away.

4. Troubleshooting

Common issues and their solutions.

- **Uneven Pool Setup:** If the pool appears uneven after filling, it is likely due to wrinkles in the liner during initial filling. Ensure the ground is perfectly level and smooth out all wrinkles when the pool has about one inch of water.
- **Filter Pump Not Operating:** Check the GFCI power cord. Press the 'Reset' button (red) to turn the pump on. If the pump still doesn't work, ensure it is properly plugged in and refer to the filter pump's user guide for further troubleshooting.
- **Water Leakage:** Inspect the pool liner for any punctures. A repair patch is included with your pool for minor damages. For leaks around fittings, ensure all hose clamps are tightened securely over the O-rings.
- **Cloudy Water:** This often indicates poor filtration or unbalanced water chemistry. Check and clean your filter cartridge, and test/adjust your pH and chlorine levels.

5. Specifications

Feature	Detail
Brand	Funsicle
Model Number	P1A01848E
UPC	193802325966
Product Dimensions	216"L x 216"W x 48"H (18ft diameter x 48in height)
Shape	Round
Capacity	6423 Gallons
Material Type	Polyvinyl Chloride (PVC) - 3-ply Tough Mesh
Included Components	Filter Cartridge (Type C), Filter Pump (RX1000 with GFCI), Ladder
Required Assembly	Yes

6. Warranty and Support

For any questions or assistance, please refer to the following information.

6.1 Manufacturer Warranty

The Funsicle Quickset pool, pump, and ladder are covered by a 1-year manufacturer warranty. Please retain your proof of purchase for warranty claims.

6.2 Customer Support

For additional support or to purchase replacement parts, please visit the official Funsicle store or contact customer service through your retailer.

Visit the Funsicle Store.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question