Luqeeg Luqeegde8gbx7tzq

Luqeeg 4K Ultra HD Enabled Camcorder User Manual

Model: Luqeegde8gbx7tzq
Brand: Luqeeg

1. Introduction

Welcome to the user manual for your new Luqeeg 4K Ultra HD Enabled Camcorder. This manual provides essential information on setting up, operating, and maintaining your camera to ensure optimal performance and longevity. Please read this manual thoroughly before using the product.

Your Luqeeg camcorder is designed to capture high-quality video and photos in various environments, from everyday moments to adventurous outdoor activities. With its 4K resolution, waterproof capabilities, and versatile mounting options, it's an ideal companion for documenting your experiences.

2. Product Overview

2.1 Key Features

- **4K Ultra HD Video & 16MP Photos:** Capture stunning clarity with 4K HD camera and 16M pixels.
- **1.3-inch HD LCD Screen:** Provides a clear viewing experience for playback and framing shots.
- **270° Rotatable Lens:** Easily adjust the lens angle for flexible shooting perspectives.
- **Built-in Wi-Fi:** Connect conveniently with the complimentary mobile phone app for remote control and file transfer.
- **30m/98ft Waterproof Case:** Enables underwater shooting for diving and water sports.
- **Rotatable Clip Stand:** Easily installable and adjustable up to 270° for versatile mounting.
- **External Microphone Support:** Features a built-in microphone and supports an external 3-meter microphone cable for clear audio recording.
- **Versatile Scenarios:** Suitable for pet recording, outdoor sports, meetings, lectures, hiking, and more.

2.2 Package Contents

Please check the package for the following items:

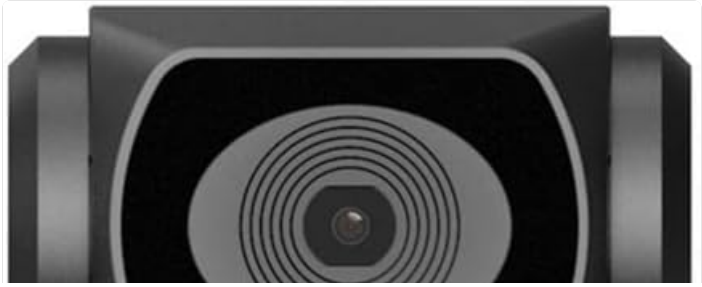
- Luqeeg 4K Ultra HD Enabled Camcorder

- Waterproof Case
- Rotatable Clip Stand
- External Microphone with 3-meter cable
- Mounting Accessories (e.g., adhesive mounts, screws)
- USB Charging Cable
- Rechargeable Battery
- User Manual (this document)



Image: Luqeeg 4K Camcorder with its various accessories, including the waterproof case, external microphone, and mounting hardware.

2.3 Component Identification



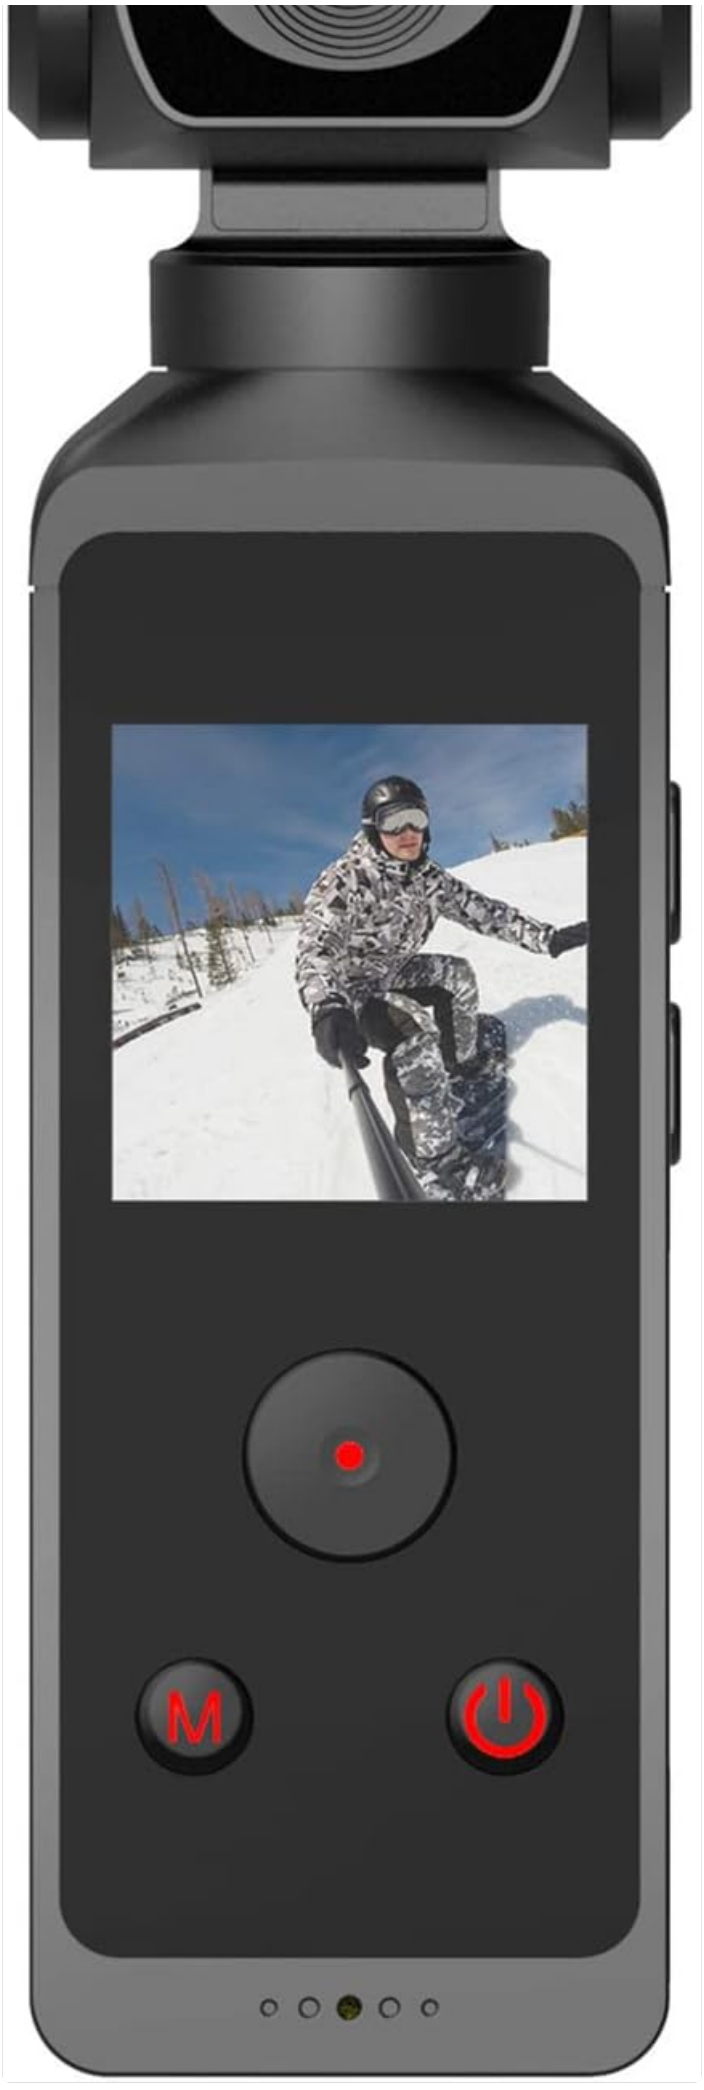

M

Image: Front view of the Luqeeg 4K Camcorder, showing the main lens, LCD screen, and control buttons.





Image: Side view of the Luqeeg 4K Camcorder, highlighting the USB port, SD card slot, and microphone jack.

- **Lens:** The main camera lens, capable of 270° rotation.
- **LCD Screen:** 1.3-inch display for live view, playback, and menu navigation.
- **Power Button:** Used to turn the camera on/off.
- **Mode Button:** Switches between video, photo, and other modes.
- **Record/Shutter Button:** Starts/stops video recording or takes a photo.
- **USB Port:** For charging and data transfer.
- **Micro SD Card Slot:** Insert your memory card here.
- **Microphone Jack:** Connect the external microphone.

3. Setup

3.1 Charging the Battery

1. Insert the included rechargeable battery into the battery compartment at the bottom of the camera.
2. Connect the camera to a USB power source (e.g., computer, wall adapter) using the provided USB cable.
3. The charging indicator light will illuminate. It will turn off or change color once fully charged.

3.2 Inserting a Micro SD Card

A Micro SD card (not included) is required to store videos and photos. Use a high-speed card (Class 10 or higher, U3 recommended) up to 128GB.

1. Locate the Micro SD card slot on the side of the camera.
2. Gently insert the Micro SD card with the gold contacts facing down until it clicks into place.
3. To remove, push the card in slightly until it springs out.

3.3 Attaching the Rotatable Clip Stand



Image: The Luqeeg 4K Camcorder shown with the rotatable clip stand attached, demonstrating its use for hands-free recording during activities like hiking.

The rotatable clip stand allows for flexible mounting on various surfaces or clothing.

1. Align the camera with the mounting slot on the clip stand.
2. Slide the camera onto the stand until it securely locks.
3. The clip stand can be rotated up to 270° to achieve the desired recording angle.

3.4 Using the Waterproof Case



Image: The Luqeeg 4K Camcorder securely enclosed within its transparent waterproof case, depicted in an underwater environment to illustrate its diving capability.

The waterproof case protects your camera up to 30 meters (98 feet) underwater.

1. Ensure the camera is clean and dry before placing it inside the case.
2. Open the latch on the waterproof case and carefully insert the camera.
3. Close the latch firmly to ensure a watertight seal.
4. Before first use underwater, perform a leak test by placing the empty case in water for 30 minutes.

4. Operating Instructions

4.1 Power On/Off

- **To Power On:** Press and hold the Power button until the screen illuminates.
- **To Power Off:** Press and hold the Power button until the screen turns off.

4.2 Mode Selection

Press the Mode button to cycle through different modes: Video Recording, Photo Shooting, Playback, and Settings.

4.3 Recording Video

1. Ensure the camera is in Video Recording mode.
2. Press the Record button once to start recording. A red indicator light will flash.
3. Press the Record button again to stop recording. The indicator light will stop flashing.

4.4 Taking Photos

1. Ensure the camera is in Photo Shooting mode.
2. Frame your shot using the LCD screen.
3. Press the Shutter button once to take a photo.

4.5 Wi-Fi Connection (Mobile App)

Connect your camera to your smartphone via Wi-Fi for remote control and file management.

1. Download the complimentary mobile app (refer to the camera's on-screen instructions or packaging for app name).
2. On the camera, navigate to the Wi-Fi settings and enable Wi-Fi. The camera's Wi-Fi name (SSID) and password will be displayed.
3. On your smartphone, go to Wi-Fi settings and connect to the camera's Wi-Fi network using the provided password.
4. Open the mobile app to control the camera, view live footage, and download files.

4.6 Using the 270° Rotatable Lens





Image: The Luqeeg 4K Camcorder illustrating its 270-degree rotatable lens, allowing for flexible shooting angles.

The camera's lens can be manually rotated up to 270 degrees to capture different perspectives without repositioning the entire camera body. Gently twist the lens module to adjust its angle.

4.7 Audio Recording with External Microphone

For enhanced audio quality, connect the included external microphone.

1. Plug the external microphone's 3.5mm jack into the microphone port on the side of the camera.
2. Ensure the microphone is securely clipped to your clothing or positioned for optimal sound capture.
3. The camera will automatically switch to using the external microphone for audio input.

5. Maintenance

5.1 Cleaning

- Use a soft, lint-free cloth to clean the camera body.
- For the lens, use a specialized lens cleaning cloth and solution. Avoid touching the lens with your fingers.
- Clean the waterproof case after each use, especially after saltwater exposure, to prevent corrosion. Rinse with fresh water and let it air dry.

5.2 Storage

- Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.
- Remove the battery if the camera will not be used for an extended period.

5.3 Battery Care

- Avoid fully discharging the battery frequently.
- Charge the battery regularly, even if not in use, to maintain its health.

6. Troubleshooting

Problem	Possible Cause	Solution
Camera does not power on.	Low battery; Battery not inserted correctly.	Charge the battery; Reinsert the battery correctly.
Cannot record video/take photos.	No Micro SD card; SD card full or corrupted; Incorrect mode.	Insert Micro SD card; Format or replace SD card; Switch to correct mode.
Wi-Fi connection fails.	Incorrect password; Camera Wi-Fi not enabled; App issue.	Re-enter password; Enable Wi-Fi on camera; Restart app/phone.
Poor audio quality.	External microphone not connected; Microphone obstructed.	Ensure external microphone is plugged in; Adjust microphone position.
Water leakage in waterproof case.	Case not properly sealed; Seal damaged.	Ensure latch is firmly closed; Check rubber seal for debris or damage.

7. Specifications

Feature	Detail
Brand	Luqeeg

Feature	Detail
Model Number	Luqeegde8gbx7tzq
Item Weight	11.3 ounces
Country of Origin	China
Photo Sensor Technology	CMOS or BSI CMOS
Video Capture Resolution	720p, 4K, 480p
Maximum Aperture	28 Millimeters
Flash Memory Type	SD (Micro SD)
Video Capture Format	MP4
Supported Audio Format	WAV, MP4
Screen Size	1.3 Inches
Connectivity Technology	Wi-Fi
Special Feature	Waterproof

8. Warranty and Support

Luqeeg products are manufactured to the highest quality standards. For information regarding warranty coverage, technical support, or service inquiries, please refer to the warranty card included with your product or visit the official Luqeeg website. Keep your purchase receipt as proof of purchase for warranty claims.

© 2023 Luqeeg. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question