Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

SONGMICS ULTB560W05

SONGMICS 1.3 Gallon Stainless Steel Bathroom Trash Can User Manual

Model: ULTB560W05

Introduction

Thank you for choosing the SONGMICS 1.3 Gallon Stainless Steel Bathroom Trash Can. This manual provides important information regarding the setup, operation, and maintenance of your new trash bin. Please read it carefully to ensure proper use and longevity of the product.

Product Features

- **Space-Efficient Design:** Slim profile (11.8"L x 5.6"W x 11.4"H) ideal for small spaces.
- **Durable Construction:** Stainless steel bin and tightly sealed lid resist rust and water, suitable for damp environments.
- **Soft-Close Lid:** Lid closes quietly and gently.
- **Stay-Open Function:** Lid can be manually lifted to 90 degrees to remain open for convenience.
- **Removable Inner Bucket:** Features inner handles for easy cleaning and emptying.
- **Hands-Free Operation:** Step pedal allows for hygienic waste disposal.
- **Portable:** Back handle for easy movement.

Setup

1. **Unpack:** Carefully remove all components from the packaging.
2. **Place Inner Bucket:** Ensure the black inner bucket is correctly seated inside the stainless steel outer bin.
3. **Insert Trash Bag:** Line the inner bucket with a suitable trash bag (e.g., 1.3-gallon or 5-liter capacity). Ensure the bag edges are tucked neatly under the rim of the inner bucket.
4. **Position:** Place the trash can in your desired location, ensuring sufficient space for the lid to open and the pedal to operate freely.



Image: The SONGMICS 1.3 Gallon Stainless Steel Bathroom Trash Can in white, showcasing its slim design next to a toilet.



Image: Detailed dimensions of the SONGMICS 1.3 Gallon Stainless Steel Bathroom Trash Can, including its height, width, and depth, and the inner bucket dimensions.

Operating Instructions

1. **Opening the Lid (Hands-Free):** Gently press down on the foot pedal located at the base of the trash can. The lid will open smoothly. Release the pedal, and the lid will close softly.
2. **Keeping the Lid Open:** For longer tasks or frequent disposal, manually lift the lid to a 90-degree angle. It will stay

open until you gently push it down to close.

3. **Removing the Inner Bucket:** To empty or clean the trash can, lift the inner bucket using the built-in handles.
4. **Moving the Trash Can:** Use the handle located on the back of the outer bin to easily reposition the trash can.



Image: Illustration demonstrating the soft-close mechanism and how to keep the lid open by lifting it to 90 degrees.

Your browser does not support the video tag.

Video: Official product video demonstrating the operation of the SONGMICS Bathroom Trash Can, including the pedal mechanism and lid

functionality.

Maintenance and Care

- **Cleaning the Outer Bin:** Wipe the stainless steel exterior with a soft, damp cloth and a mild detergent. Avoid abrasive cleaners or scouring pads, which can scratch the finish. Dry thoroughly to prevent water spots.
- **Cleaning the Inner Bucket:** The removable PP plastic inner bucket can be washed with soap and water. Rinse thoroughly and dry completely before placing it back into the outer bin.
- **Rust Resistance:** The stainless steel construction is designed to resist rust, making it suitable for damp environments like bathrooms. However, prolonged exposure to standing water or harsh chemicals should be avoided.
- **Odor Control:** Regularly empty and clean the inner bucket to prevent odors. Using scented trash bags can also help.



Image: The trash can positioned in a bathroom, highlighting its suitability for damp environments.

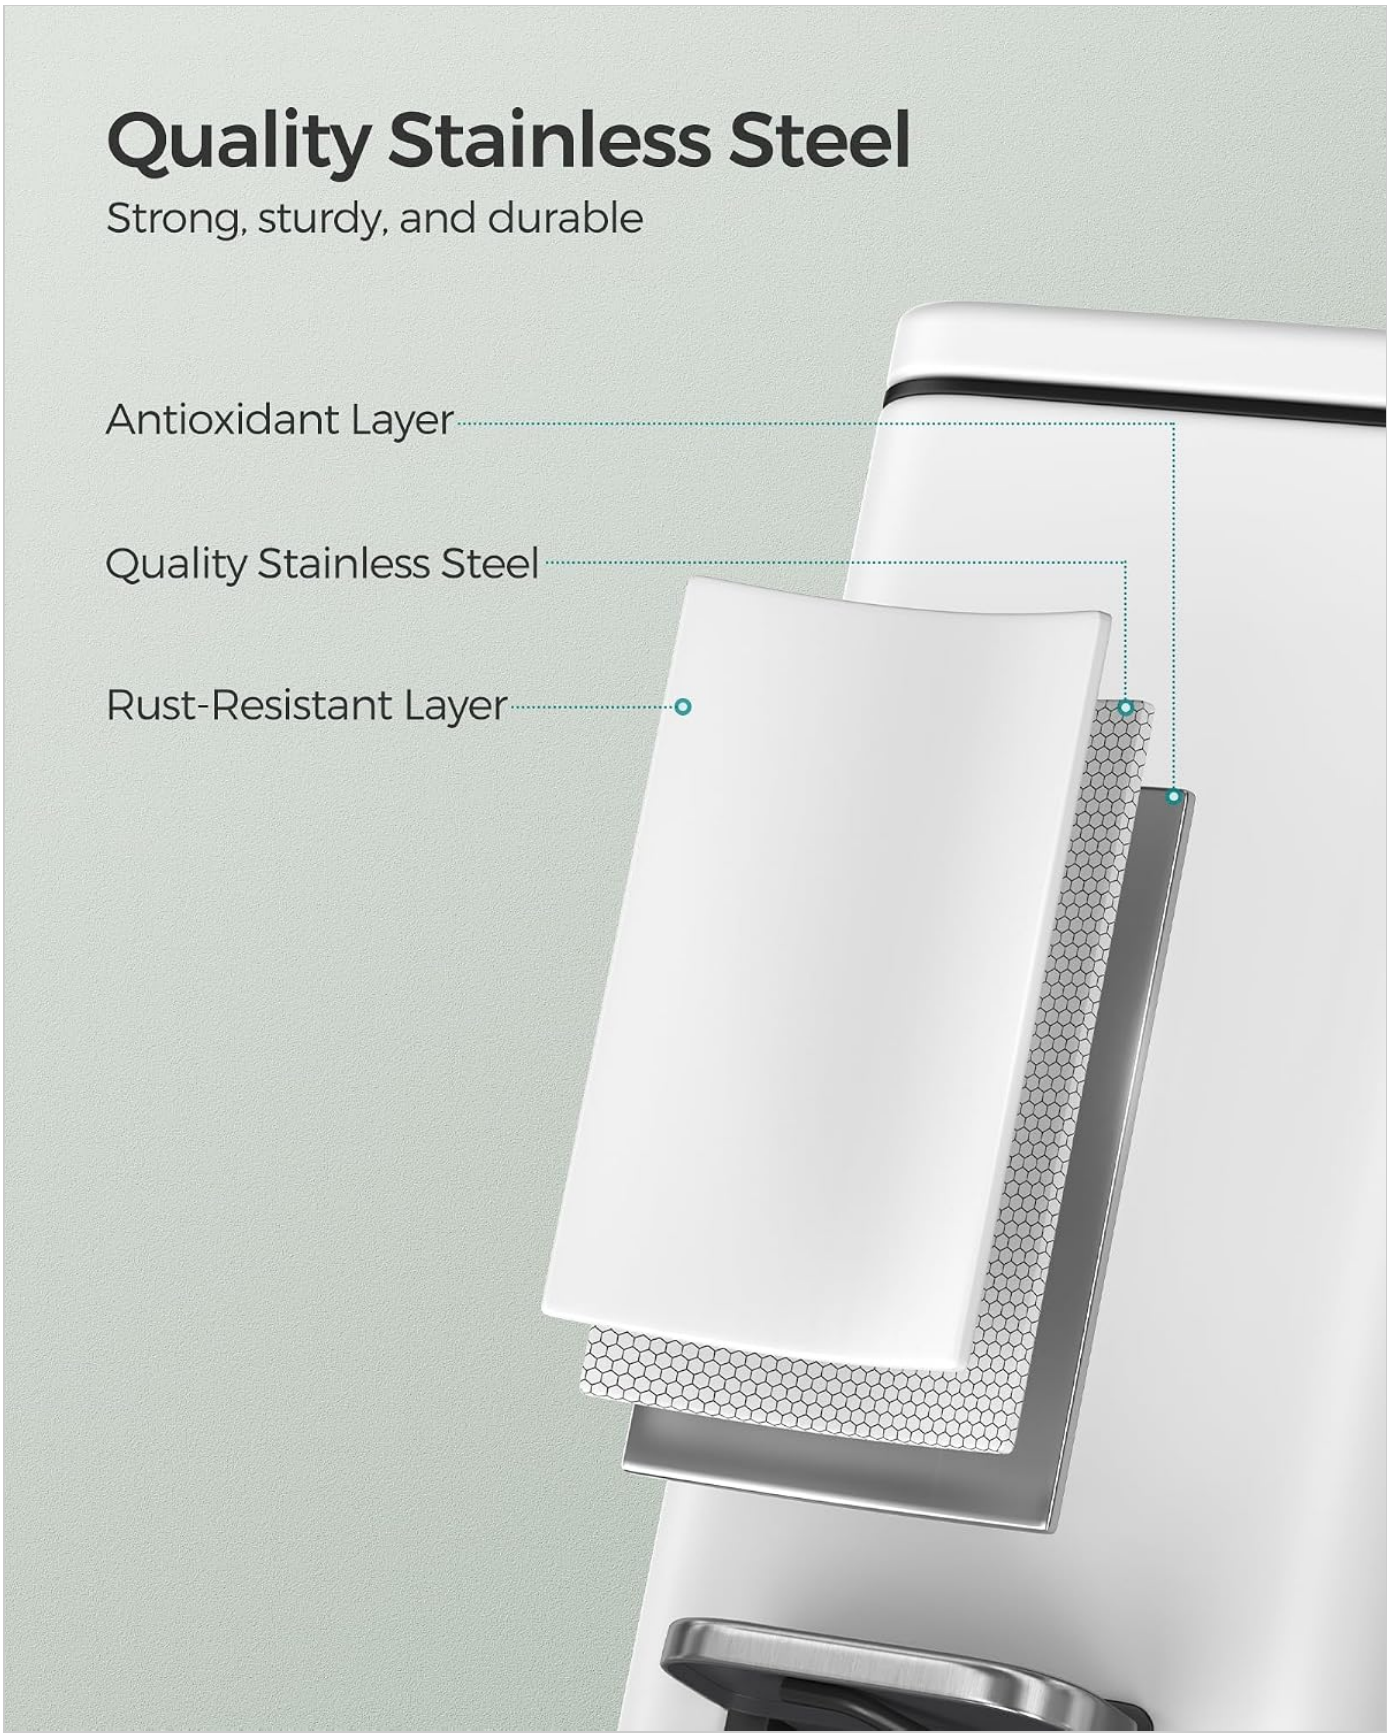


Image: Close-up of the trash can lid with water droplets, illustrating its water and rust resistance.

Troubleshooting

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Lid does not close softly.	Mechanism obstruction or damage.	Check for any debris or objects obstructing the lid's closing path. Ensure the soft-close mechanism is clean and free of foreign material. If damaged, contact customer support.
Foot pedal is stiff or unresponsive.	Debris in pedal mechanism or misalignment.	Inspect the pedal area for any trapped debris. Ensure the trash can is on a flat, stable surface. Gently operate the pedal to check for smooth movement.
Odor persists despite emptying.	Inner bucket not thoroughly cleaned.	Remove the inner bucket and wash it thoroughly with soap and water. Allow it to dry completely. Consider using odor-absorbing products or scented trash bags.

Specifications

Brand: SONGMICS

Model: ULTB560W05

Capacity: 1.3 Gallons (5 Liters)

Color: White

Opening Mechanism: Step-On Pedal

Material: Stainless Steel Bin, PP Plastic Inner Bucket, ABS Plastic Base

Dimensions (L x W x H): 11.8" x 5.6" x 11.4" (30 cm x 14.2 cm x 29 cm)

Item Weight: 2.2 pounds (1 kg)

Special Features: Quiet Close, Removable Bucket, Hands-Free Opening, Stay-Open Lid

Recommended Use: Indoor (Bathroom, Kitchen)

Warranty and Support

For any questions, concerns, or warranty claims regarding your SONGMICS product, please contact SONGMICS customer support. Refer to the product packaging or the official SONGMICS website for the most up-to-date contact information.
You can visit the official SONGMICS store for more information:SONGMICS Store

© 2026 SONGMICS. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0C7ZNWLCY

More documents and user manuals: **https://manuals.plus/**