Infinix Hot 30i

Infinix HOT 30i Smartphone User Manual

Model: Hot 30i

1. Introduction

Welcome to the user manual for your new Infinix HOT 30i smartphone. This guide provides essential information to help you set up, operate, and maintain your device. The Infinix HOT 30i is a powerful Android smartphone designed for seamless performance and an enhanced user experience.

Your browser does not support the video tag.

Video Description: An overview of the Infinix HOT 30i smartphone, highlighting its G37 processor, 8GB RAM, 5000 mAh battery, 128GB storage, dual-SIM support, 4G connectivity, stylish design, 50MP rear camera with AI lens, 5MP front camera, and 6.6-inch HD+ display. This video provides a general introduction to the device's key features.

2. What's in the Box

Upon unboxing your Infinix HOT 30i, please ensure all the following items are present:

- Handset
- Adaptor
- USB Type-C Cable
- TPU Case
- SIM Ejector Pin
- Quick Start Guide
- Warranty Card
- Xclub Card

3. Device Overview

Familiarize yourself with the physical components of your Infinix HOT 30i.


3.1 Front View





Image Description: Front view of the Infinix HOT 30i smartphone, showcasing its display with a waterdrop notch for the front camera.

3.2 Rear View

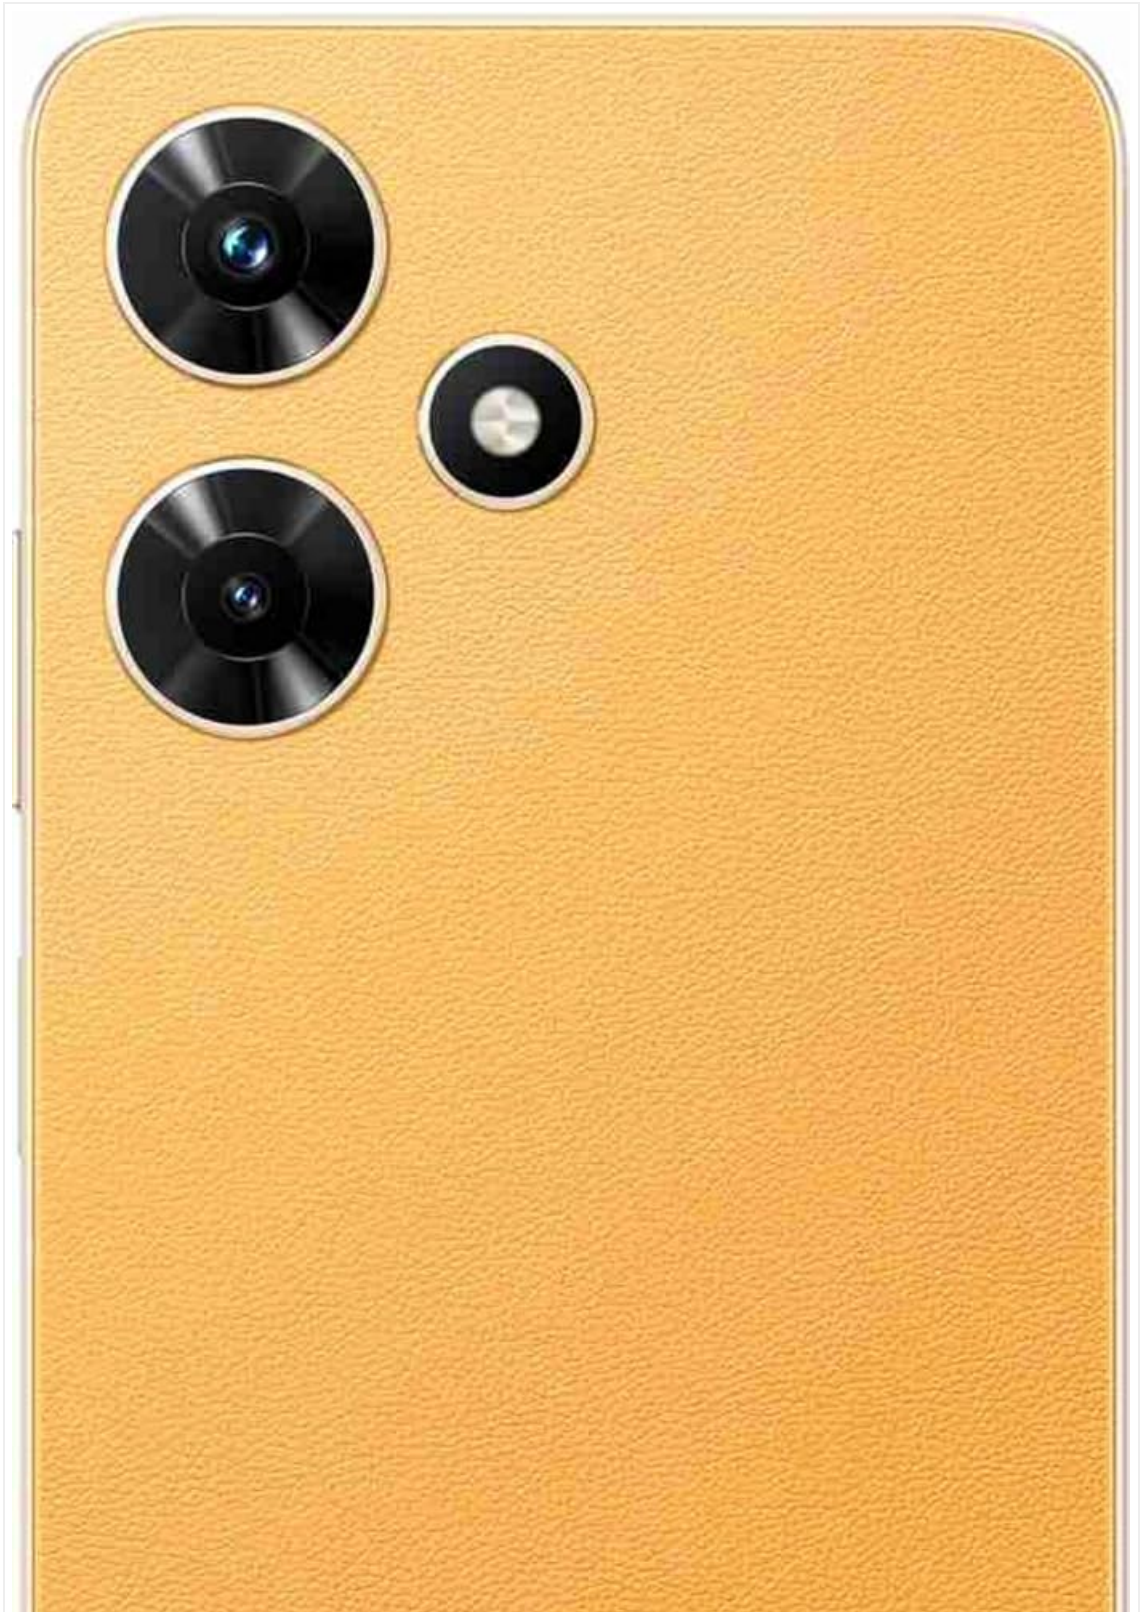

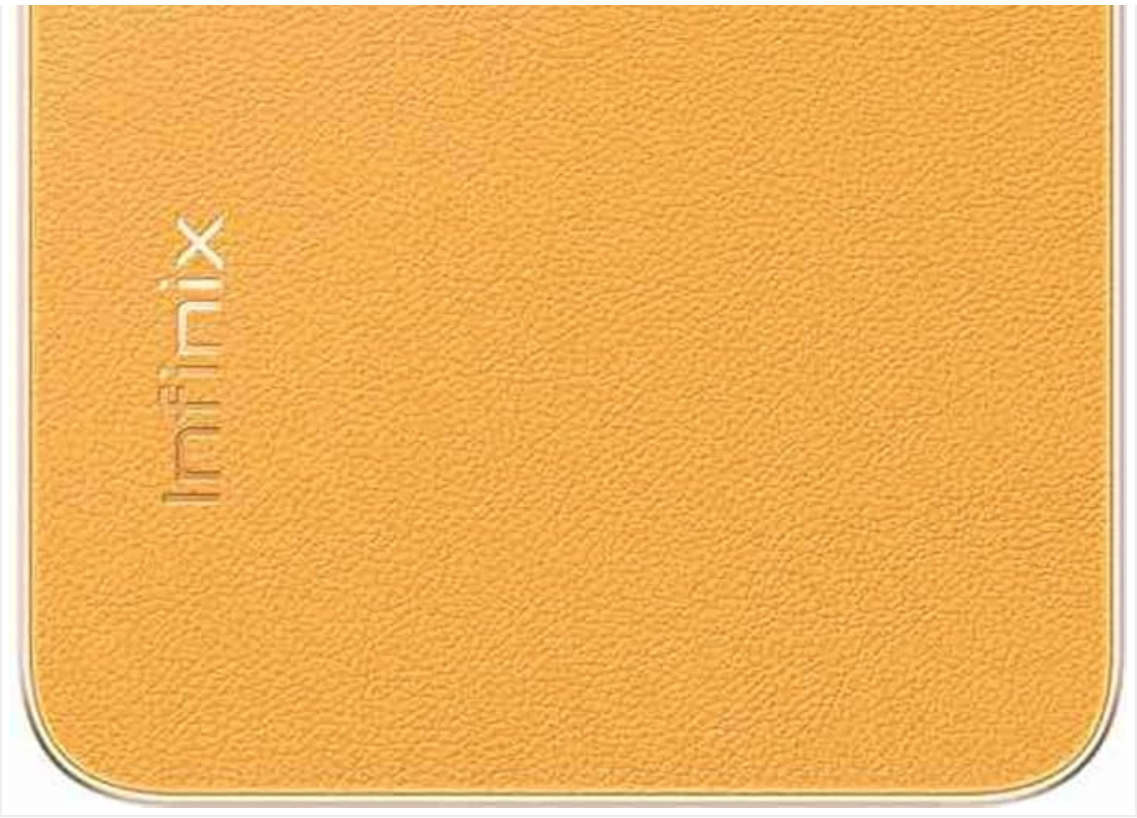


Image Description: Rear view of the Infinix HOT 30i smartphone in Marigold color, featuring the dual camera module and the Infinix branding.

3.3 Side and Top/Bottom Views



Image Description: Side view of the Infinix HOT 30i, showing the power button (with integrated fingerprint sensor) and volume rocker.



Image Description: Top view of the Infinix HOT 30i, showing the smooth top edge of the device.





Image Description: Bottom view of the Infinix HOT 30i, typically featuring the USB-C port, speaker grille, and microphone.

4. Setup and Getting Started

4.1 Inserting SIM Cards and SD Card

1. Locate the SIM tray on the side of your device.
2. Insert the SIM ejector pin into the small hole next to the tray to open it.
3. Place your Nano-SIM cards and/or microSD card into the designated slots. Ensure correct orientation.
4. Gently push the tray back into the device until it clicks into place.

4.2 Charging the Battery

1. Connect the USB Type-C cable to the charging port at the bottom of your phone.
2. Connect the other end of the cable to the provided power adaptor.
3. Plug the adaptor into a power outlet.
4. The charging indicator will appear on the screen. For optimal battery life, fully charge the device before first use.

4.3 Powering On/Off

- **To Power On:** Press and hold the Power button (located on the side) until the Infinix logo appears.
- **To Power Off:** Press and hold the Power button, then select 'Power off' from the options on the screen.
- **To Restart:** Press and hold the Power button, then select 'Restart' from the options.

5. Operating Your Device

5.1 Basic Navigation

Your Infinix HOT 30i features a responsive touchscreen for navigation:

- **Tap:** Touch the screen once to open apps, select items, or press buttons.
- **Swipe:** Drag your finger across the screen to scroll through pages or content.
- **Pinch:** Use two fingers to zoom in or out on photos and web pages.

5.2 Fingerprint Sensor

The Infinix HOT 30i includes a side-mounted fingerprint sensor for secure and quick unlocking.

1. Go to **Settings > Security > Fingerprint**
2. Follow the on-screen instructions to register your fingerprint.
3. Once registered, you can unlock your phone by placing your finger on the sensor.

5.3 Volume Control

Use the Volume Up and Volume Down buttons on the side of the device to adjust media volume, call volume, and notification volume.

6. Camera Features

Capture memorable moments with the advanced camera system of the Infinix HOT 30i.



Image Description: An infographic highlighting key features of the Infinix HOT 30i, including 16GB (extended) RAM, 128GB storage, 90Hz 6.6 HD+ display, 50MP AI Camera Dual Flash Light, 5000mAh battery, 10W Type-C Charge, MediaTek G37 processor, and Side Mounted Fingerprint sensor.

6.1 Rear Camera

The device features a **50MP Main Rear Camera** complemented by an **AI Lens**. This setup allows for high-resolution photos with enhanced detail and intelligent scene recognition for optimized image quality. The LED flash assists in low-light conditions.

6.2 Front Camera

The **5MP Front Camera** is designed for clear selfies and video calls. Utilize various camera modes and filters for personalized self-portraits.

7. Display

Experience vibrant visuals on the Infinix HOT 30i's display.

- **Size:** 16.76 cm (6.6 inch) HD+ Display.
- **Resolution:** HD+ (720 x 1560 pixels).
- **Refresh Rate:** 90 Hz for smoother scrolling and animations.
- **Brightness:** Up to 5000 Nits brightness, enhancing visibility even in bright daylight conditions.

8. Performance and Storage

The Infinix HOT 30i is built for efficient performance and ample storage.

- **Processor:** Powered by the G37 Processor for smooth multitasking and gaming.
- **RAM:** 8 GB RAM, expandable up to 16 GB for enhanced app performance.
- **Internal Storage:** 128 GB ROM, expandable up to 1 TB via microSD card.

9. Battery and Charging

The device is equipped with a long-lasting battery and convenient charging.

- **Battery Capacity:** 5000 mAh battery for extended usage.
- **Charging:** Supports 10W Type-C charging.

10. Connectivity

Stay connected with various communication technologies.

- **Network:** 4G Ready, Cellular.
- **Wireless:** Bluetooth, Wireless (Wi-Fi).
- **Navigation:** GPS (GLONASS).
- **Port:** USB Type-C.

11. Specifications

Detailed technical specifications for the Infinix HOT 30i:

Feature	Specification
Operating System	Android
RAM	8 GB (Expandable up to 16 GB)
Internal Storage	128 GB
Processor	G37 Processor
Display Size	16.76 cm (6.6 inch) HD+
Display Resolution	720 x 1560
Rear Camera	50MP + AI Lens
Front Camera	5MP
Battery Capacity	5000 mAh

Feature	Specification
Charging	10W Type-C
Connectivity	4G, Bluetooth, USB
Special Features	Camera, Front Camera, LED Flash, Side-mounted Fingerprint
Item Weight	191 g

12. Troubleshooting

If you encounter issues with your Infinix HOT 30i, try the following common solutions:

- **Device Unresponsive:** Press and hold the Power button for about 10-15 seconds to force a restart.
- **Battery Draining Quickly:** Check background app usage, reduce screen brightness, or disable unnecessary features like Wi-Fi/Bluetooth when not in use.
- **Network Issues:** Ensure your SIM card is correctly inserted. Try toggling Airplane Mode on and off. Check with your service provider for network status.
- **App Crashing:** Clear the app's cache and data (Settings > Apps > [App Name] > Storage > Clear Cache/Clear Data). If the issue persists, reinstall the app.
- **Slow Performance:** Close unused apps, clear cache, or consider a factory reset as a last resort (back up your data first).

For more complex issues, please refer to the official Infinix support website or contact customer service.

13. Warranty and Support

Your Infinix HOT 30i comes with a manufacturer's warranty. Please refer to the Warranty Card included in your product packaging for detailed terms and conditions.
For technical support, service, or further inquiries, please visit the official Infinix website or contact their customer support channels. Keep your purchase receipt and warranty card handy for any service requests.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question