## Yamaha P71B

# YAMAHA P71 Digital Piano User Manual

Model: P71B

## 1. Introduction

The Yamaha P71 88-Key Weighted Action Digital Piano is an Amazon-exclusive model designed for home use, offering a realistic piano experience with a compact footprint. It features fully-weighted keys and Yamaha Premium piano voices, providing rich sound and expressive playability.

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your Yamaha P71 Digital Piano.



*Figure 1.1: Yamaha P71 Digital Piano, showcasing its sleek black design and 88-key layout with a music rest.*

## 2. Setup

## 2.1 Unpacking and Components

Carefully remove all components from the packaging. Ensure all bundled items are present:

- Yamaha P71 Digital Piano
- Music Rest
- Sustain Pedal
- Power Adapter
- Owner's Manual (this document)

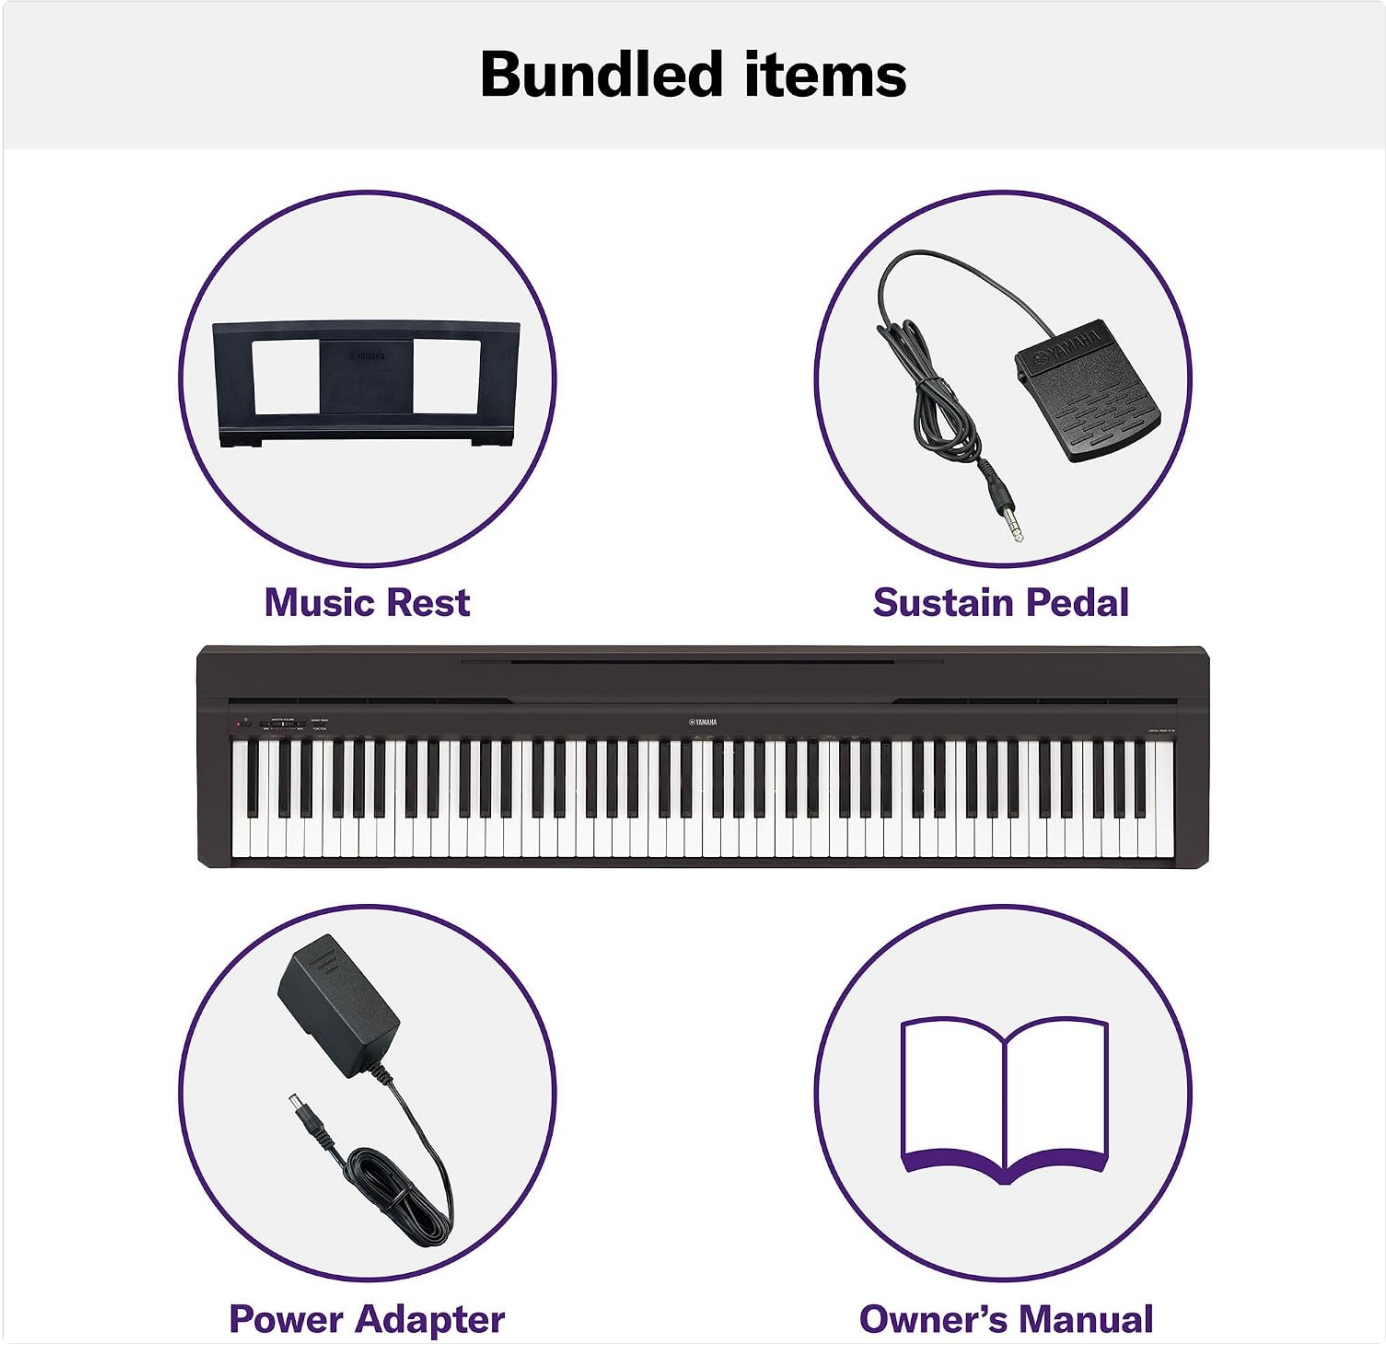



*Figure 2.1: Illustration of the bundled items included with the Yamaha P71 Digital Piano: Music Rest, Sustain Pedal, Power Adapter, and Owner's Manual.*

## 2.2 Connecting Power and Pedal

1. Connect the power adapter to the DC IN jack on the rear of the piano and then to a standard electrical outlet.
2. Connect the included sustain pedal to the SUSTAIN jack.

## 2.3 Optional Connections

- **Headphones:** For private practice, connect standard stereo headphones to the 3.5mm HEADPHONES jack.
- **External Amplifier:** The piano can be connected to an external amplifier for louder sound output.
- **Computer (USB TO HOST):** Use a USB cable to connect the piano to a computer for integration with music software. This allows for MIDI data transfer.

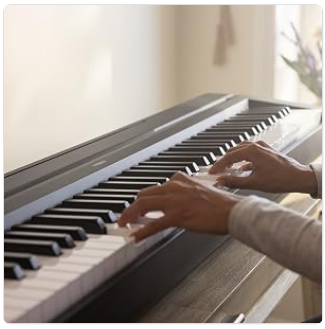


*Figure 2.2: Icon representing the USB TO HOST connection feature, enabling digital communication with a computer.*

## 3. Operating Instructions

### 3.1 Power On/Off

Press the **POWER** button located on the left side of the control panel to turn the instrument on or off.

### 3.2 Adjusting Volume

Use the **VOLUME** slider to adjust the overall output level of the piano.

### 3.3 Selecting Voices (Tones)

The P71 offers 10 different voices. To select a voice, hold down the**FUNCTION** button and press the corresponding key on the keyboard as indicated in the voice list (usually printed above the keys or in a quick reference guide).



*Figure 3.1: A user's hands positioned on the keys of the Yamaha P71, demonstrating active play.*



*Figure 3.2: Icon illustrating the multiple voices feature, allowing selection of various instrument sounds.*

## 3.4 Dual Mode (Layering Voices)

Dual Mode allows you to layer two different voices simultaneously, such as piano and strings, for a richer sound. Refer to the quick reference guide or full manual for specific key combinations to activate and select voices in Dual Mode.



*Figure 3.3: Icon representing the Duo Mode feature, which allows two different voices to be played simultaneously.*

## 3.5 Touch Sensitivity

The P71 features touch-sensitive keys, meaning the volume and tone change based on how hard you strike the keys, mimicking an acoustic piano. This sensitivity can often be adjusted via a function setting.

## 4. Maintenance

### 4.1 Cleaning

- Wipe the surface of the piano with a soft, dry cloth.
- For stubborn dirt, use a slightly damp cloth and then wipe dry immediately.
- Avoid using abrasive cleaners, waxes, or solvents as they can damage the finish.

### 4.2 Storage

- Store the piano in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- Cover the keys with a dust cover when not in use to prevent dust accumulation.

## 5. Troubleshooting

| Problem | Possible Cause | Solution |
|---|---|---|
| No sound | Volume too low, headphones connected, power issue. | Increase volume, disconnect headphones, check power connection. |
| Keys feel unresponsive | Incorrect touch sensitivity setting. | Adjust touch sensitivity setting (refer to full manual). |
| Sustain pedal not working | Pedal not fully inserted, faulty pedal. | Ensure pedal is fully plugged in. Test with another compatible pedal if available. |
| Distorted sound | Volume too high, external speaker issue. | Lower volume. Check connections to external speakers/amplifiers. |

For more detailed troubleshooting, please refer to the comprehensive Owner's Manual available online or contact Yamaha support.

## 6. Specifications

**Model Name:** P71

**Number of Keys:** 88

**Key Type:** Weighted Action

**Dimensions (D x W x H):** 11.5"D x 52.25"W x 6"H (29.21 cm D x 132.72 cm W x 15.24 cm H)

**Item Weight:** 25 Pounds (11.34 kg)

**Voices:** 10

**Connectivity:** USB TO HOST, Auxiliary, 3.5mm Headphones Jack

**Power Source:** Corded Electric

**Special Features:** Built-In Speaker, Duo Mode, Hammer Action, Multiple Voices, Weighted Keys

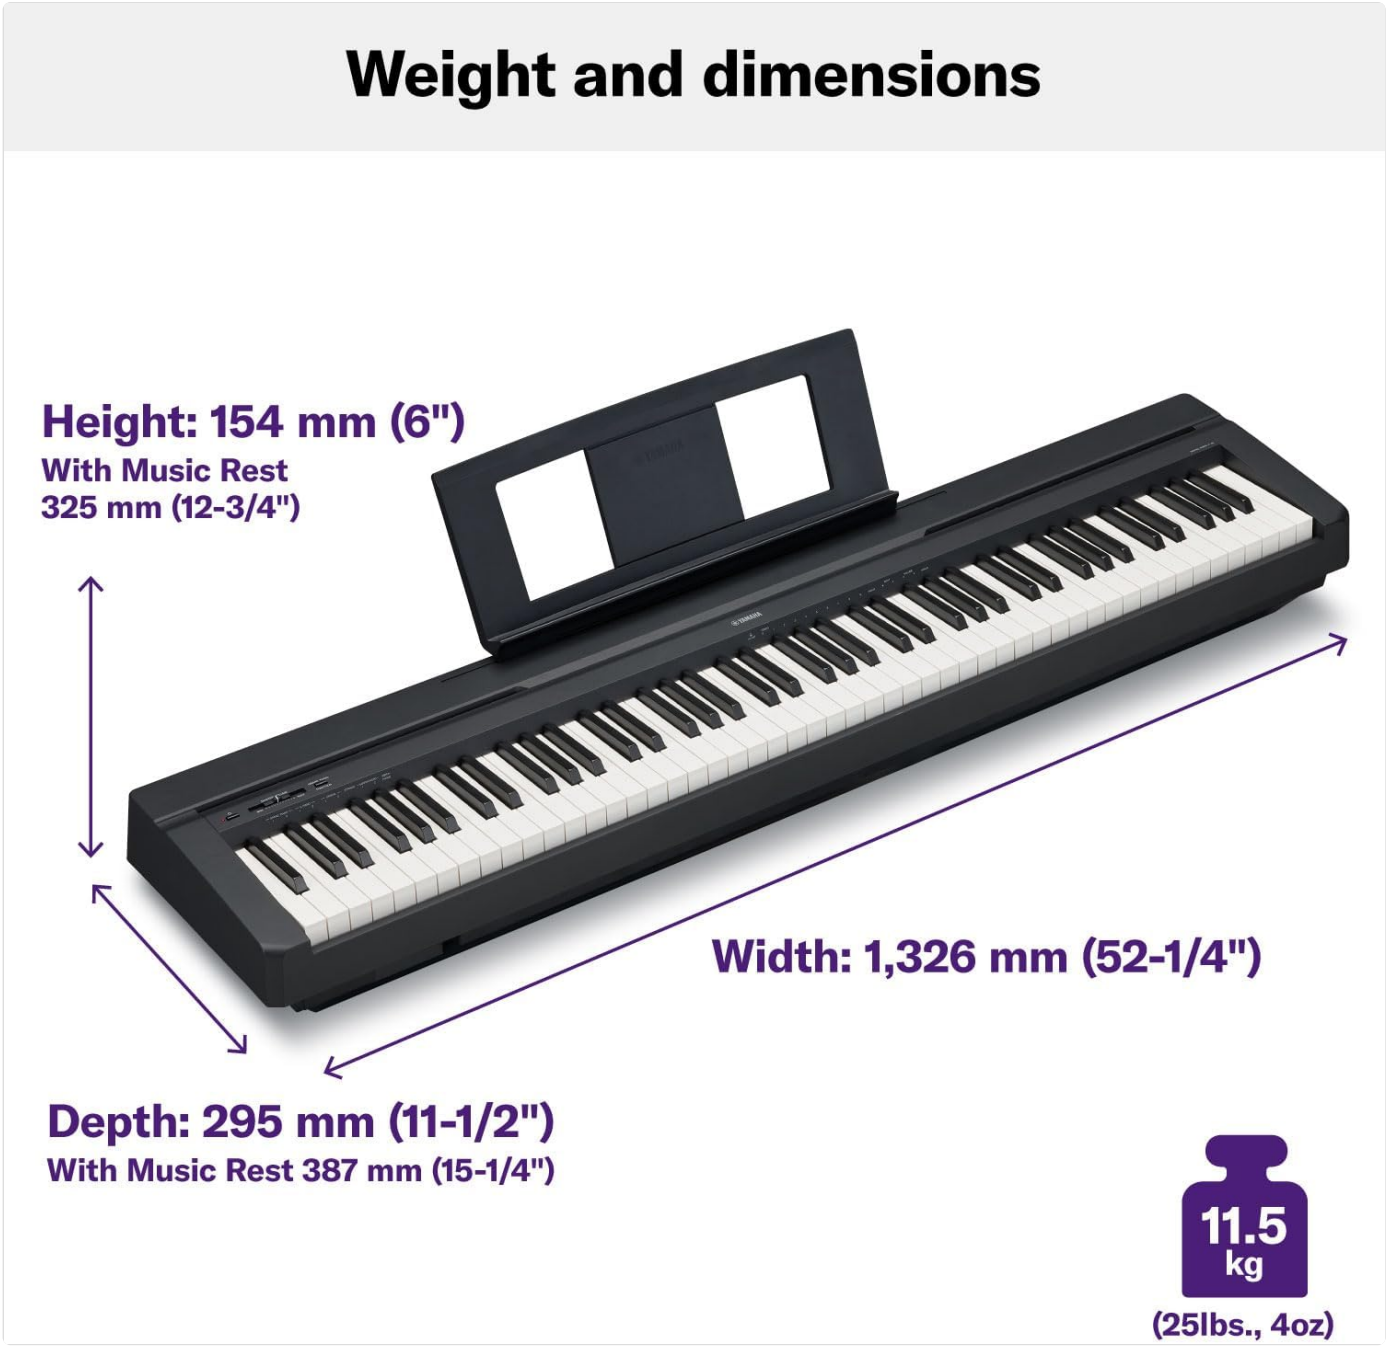



*Figure 6.1: Diagram illustrating the weight and dimensions of the Yamaha P71 Digital Piano.*

## 7. Warranty and Support

For detailed warranty information, please refer to the official Yamaha website or the warranty card included with your product. Keep your proof of purchase for warranty claims.

**Official User Manual:** A comprehensive User Manual in PDF format is available for download. You can access it via this link: Yamaha P71 User Manual (PDF).

**Customer Support:** For technical assistance, spare parts, or service inquiries, please contact Yamaha customer support through their official channels. Visit the Yamaha Store on Amazon for more information.

© 2024 Yamaha Corporation. All rights reserved.
This manual is for informational purposes only. Specifications are subject to change without notice.

### Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**