Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

LUMENA FAN PRIME2

LUMENA FAN PRIME2 Cordless Fan User Manual

Model: FAN PRIME2

1. Introduction

Thank you for purchasing the LUMENA FAN PRIME2 Cordless Fan. This advanced fan is designed to provide powerful and quiet air circulation, suitable for both indoor and outdoor environments. With its long-lasting battery, remote control, and versatile features, the FAN PRIME2 ensures comfort and convenience.
Key features include:

- Cordless operation with an 8,000mAh high-capacity battery.
- Circulator-style airflow for efficient air movement.
- Convenient remote control for easy operation.
- 100-degree left-right oscillation.
- 4-stage timer function.
- Lightweight design (approx. 950g) and adjustable height.
- Quiet DC motor operation (20db).

2. Safety Precautions

To ensure safe operation and prevent damage, please read and follow these instructions carefully:

- Do not insert fingers or foreign objects into the fan guard.
- Keep the fan away from water or other liquids.
- Do not disassemble, repair, or modify the fan yourself. Contact qualified service personnel.
- Use only the provided USB Type-C cable for charging.
- Keep out of reach of children and pets.
- Do not block the air intake or outlet during operation.
- Avoid dropping the fan or subjecting it to strong impacts.

3. Package Contents

Please check that all items are included in the package:

- LUMENA FAN PRIME2 Main Unit
- Remote Control
- USB Type-C Charging Cable
- User Manual (this document)
- Tarp Belt



Image: The LUMENA FAN PRIME2 package showing the main unit, remote, USB cable, manual, and tarp belt.

4. Setup

4.1 Initial Charging

Before first use, fully charge the fan. Connect the provided USB Type-C cable to the charging port on the fan base and to a suitable USB power adapter (not included). The battery LED indicator will show charging status.

4.2 Height Adjustment

The fan's height can be adjusted by up to 140mm to suit your needs. Gently pull or push the telescopic pole to set the desired height.





Image: The LUMENA FAN PRIME2 demonstrating its adjustable height feature, extending up to 140mm.

5. Operating Instructions

5.1 Control Dial & LED Indicators

The fan features a simple control dial on its base with integrated LED indicators for wind speed, timer, and battery status.

- **Wind LED:** Indicates the current fan speed.
- **Timer LED:** Shows the active timer setting.
- **Battery LED:** Displays battery charge level (e.g., red for 0-20%, white for 20-100%).



Image: Close-up of the fan's base showing the control dial and its integrated LED indicators for wind, timer, and battery.

5.2 Power On/Off & Fan Speed Adjustment

To turn on the fan, rotate the control dial clockwise. Continue rotating to cycle through the 4 fan speed levels. To turn off the fan, rotate the dial counter-clockwise until it stops, or press the power button on the remote control.

5.3 Oscillation Function

The fan supports 100-degree left-right oscillation to distribute air widely. Activate or deactivate oscillation using the dedicated button on the remote control or by pressing the control dial on the fan base.

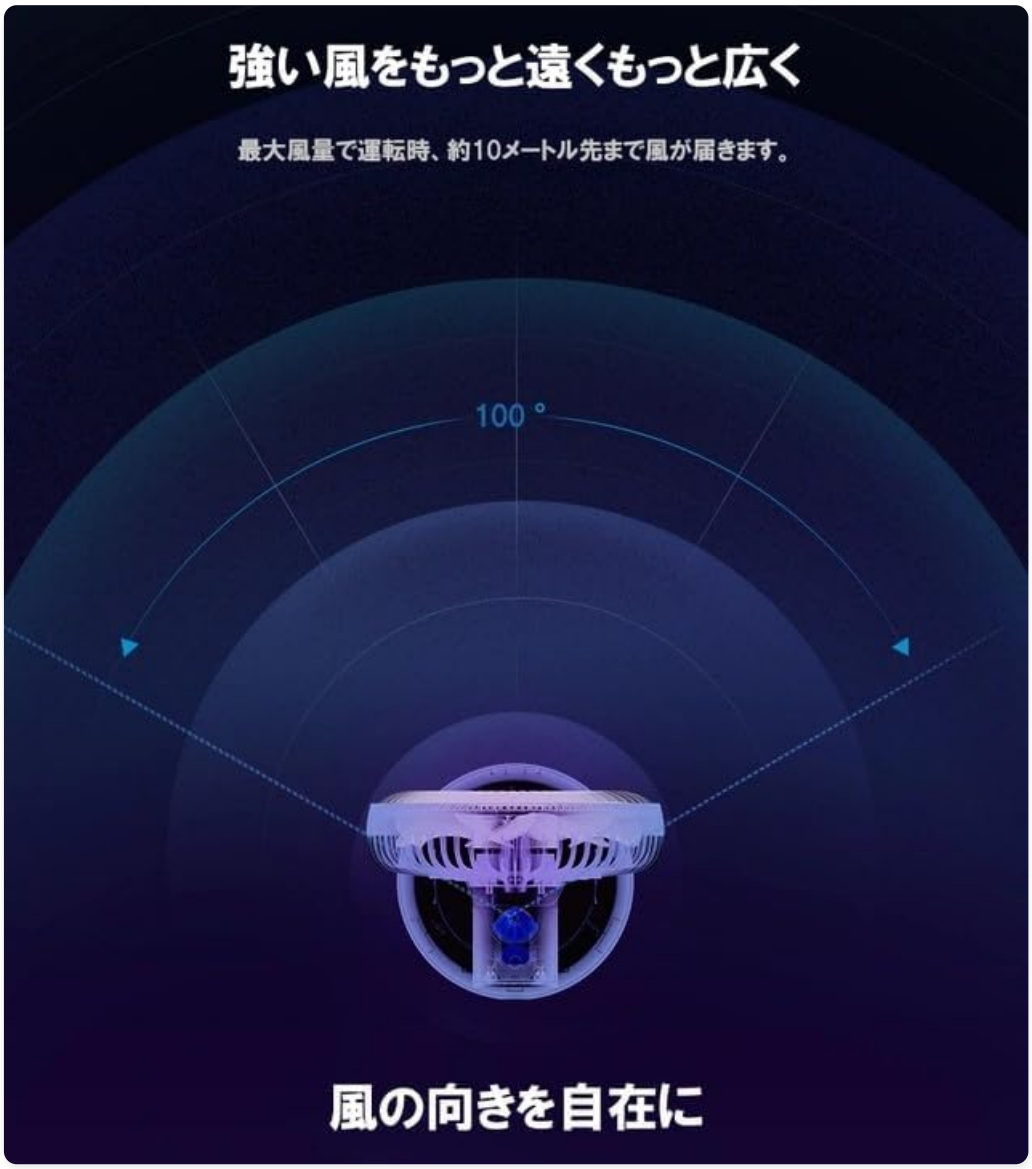


Image: Diagram illustrating the 100-degree oscillation range of the LUMENA FAN PRIME2, showing wide air distribution.

5.4 Timer Function

Set the fan to automatically turn off after a specified period using the timer function. Press the timer button on the remote control or briefly press the control dial to cycle through the 4 timer settings. The Timer LED will indicate the selected duration.

5.5 Remote Control Operation

The included remote control allows convenient operation of all fan functions from a distance.

- **Power Button:** Turns the fan on or off.
- **Fan Speed Button:** Adjusts the fan speed.
- **Oscillation Button:** Toggles the 100-degree oscillation.

- **Timer Button:** Sets the auto-off timer.



Image: The dedicated remote control for the LUMENA FAN PRIME2, showing buttons for timer, fan speed, oscillation, and power.



Image: A composite image showing the LUMENA FAN PRIME2 operating wirelessly with its 8,000mAh battery, and a hand holding the remote control.



Image: The LUMENA FAN PRIME2 in a room setting, highlighting its cordless operation and portability for indoor air circulation or outdoor use.

6. Charging the Battery

The LUMENA FAN PRIME2 is equipped with a powerful Li-ion 3.7V 8,000mAh battery. To charge, connect the USB Type-C cable to the charging port on the fan base and to a USB power source.

- **Full Charge Time:** Approximately 4 hours 30 minutes.
- **Operating Time:** Approximately 3 hours 30 minutes (at maximum speed) to 30 hours (at minimum speed) on a full charge.
- The Battery LED indicator will show the charging status and remaining battery level.

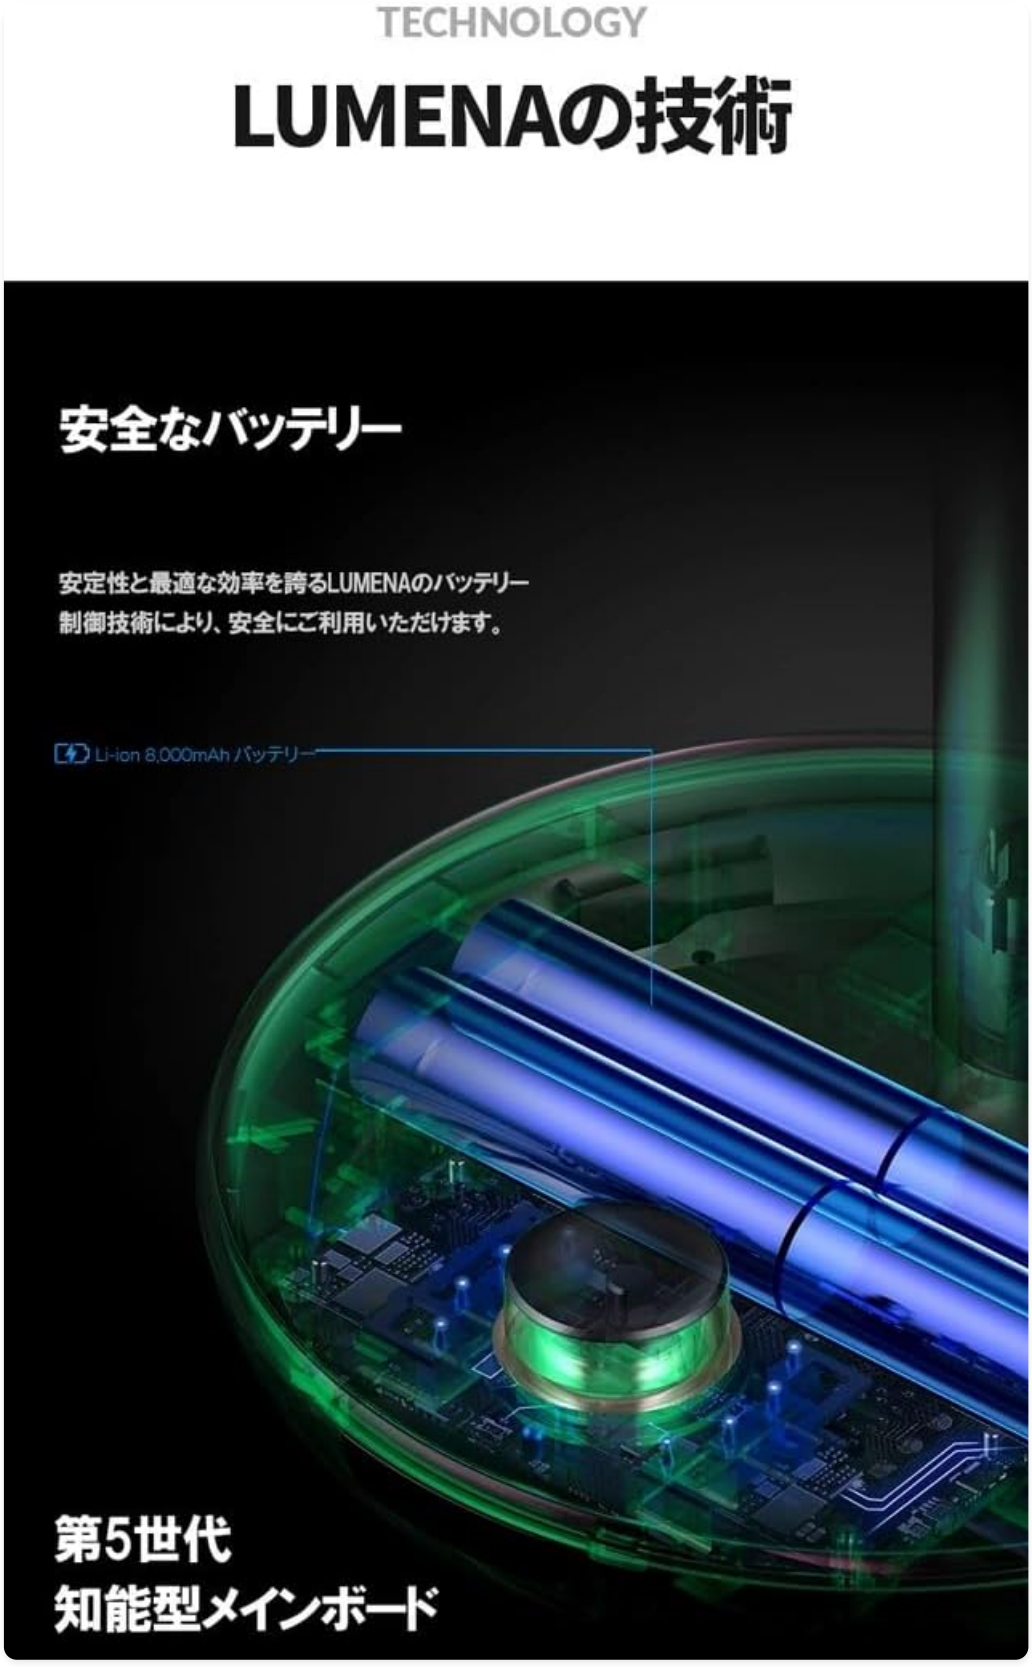


Image: An internal view of the LUMENA FAN PRIME2 highlighting its safe and efficient 8,000mAh Li-ion battery and 5th generation intelligent main board.

7. Maintenance and Care

Regular cleaning will help maintain the fan's performance and extend its lifespan.

- **Cleaning the Fan Guard:** To clean the fan blades and inside the guard, first ensure the fan is turned off and unplugged. Carefully remove the front fan guard. Wipe off any dust or debris from the blades and internal

components with a soft, dry cloth. Do not use abrasive cleaners or immerse the fan in water.

- **Exterior Cleaning:** Wipe the exterior of the fan with a soft, damp cloth.
- **Storage:** When not in use for extended periods, store the fan in a cool, dry place, away from direct sunlight.

8. Troubleshooting

If you encounter issues with your LUMENA FAN PRIME2, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not turn on.	Battery is depleted. Power button not pressed correctly.	Charge the fan fully. Ensure the power button on the dial or remote is pressed firmly.
Weak airflow.	Fan speed is too low. Air intake/outlet blocked. Dirty fan blades.	Increase fan speed. Ensure nothing is obstructing airflow. Clean the fan blades and guard.
Fan makes unusual noise.	Fan is not on a stable surface. Foreign object inside.	Place the fan on a flat, stable surface. Turn off and unplug the fan, then check for and remove any foreign objects.
Remote control not working.	Battery in remote is depleted. Obstruction between remote and fan.	Replace the remote control battery. Ensure a clear line of sight between the remote and the fan.

If the problem persists after trying these solutions, please contact customer support.

9. Specifications

Feature	Specification
Model	FAN PRIME2
Power Consumption	Max 10W
Dimensions (approx.)	20.3 cm (D) x 16.2 cm (W) x 35 cm (H)
Weight (approx.)	950g
Battery Type	Li-ion 3.7V 8,000mAh
Usage Time	Approx. 3 hours 30 minutes (max speed) - 30 hours (min speed)
Full Charge Time	Approx. 4 hours 30 minutes
Fan Speeds	4 levels

Feature	Specification
Oscillation Angle	100 degrees (left/right)
Noise Level	20db (DC motor)
Height Adjustment	Max 140mm
Included Components	USB Type-C Cable, Remote Control, Tarp Belt

10. Warranty and Support

LUMENA products are manufactured under strict quality control. For warranty information, please refer to the warranty card included in your package or contact your retailer. For technical support or inquiries, please visit the official LUMENA website or contact their customer service department.

© 2024 LUMENA. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0C8Y39WHL

More documents and user manuals: **https://manuals.plus/**