Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

7Degobii 8219

7Degobii Battery Operated Picture Light (Model 8219) Instruction Manual

Model: 8219 | Brand: 7Degobii

Introduction

Thank you for choosing the 7Degobii Battery Operated Picture Light, Model 8219. This wireless, rechargeable light is designed to illuminate your artwork with adjustable brightness and color temperature, enhancing the aesthetic of your space. Please read this manual carefully before installation and use to ensure proper operation and longevity of your product.

What's in the Box

- 1 x Battery Operated Picture Light
- 1 x Remote Control
- Mounting Hardware (screws and bracket)
- USB-C Charging Cable (USB power adapter not included)

Key Features

- **3CCT Dimmable Function:** Adjust between three color temperatures (warm, neutral, cool) and dim the brightness from 20% to 100%.
- **Rechargeable Wireless Operation:** Equipped with a built-in 5000mAh lithium battery for cordless use.
- **270° Adjustable Swing Arm:** The light head can be rotated up and down by 270 degrees for optimal illumination angle.
- **Easy Installation:** Comes with a bracket and screws for quick wall mounting without the need for reserved wiring.
- **Energy Efficient LED:** Integrated LED light source provides efficient illumination.

Safety Information

- Do not expose the light to water or high humidity. This product is not water resistant.
- Use only a DC 5V-2A power adapter for charging. Using an incompatible adapter may damage the battery or the device.
- Keep out of reach of children.
- Do not attempt to disassemble or modify the light. This will void the warranty and may cause damage or injury.

- Ensure the mounting surface is stable and can support the weight of the light fixture.

Setup

1. **Choose Location:** Select a suitable wall location above your artwork.
2. **Mounting Bracket:** Position the mounting bracket on the wall. Mark the screw holes.
3. **Drill Holes:** Drill pilot holes if necessary and insert wall anchors.
4. **Secure Bracket:** Attach the mounting bracket to the wall using the provided screws.
5. **Attach Light:** Slide the picture light onto the secured bracket until it clicks into place.



Image: Underside view of the 7Degobii picture light showing the mounting bracket and screw holes for installation.



Image: 7Degobii Model A-Gold 12.6inch Battery Operated Picture Light mounted on a white wall above a wooden console table.

Operating Instructions

Using the Remote Control

The included remote control allows for full functionality of the picture light.

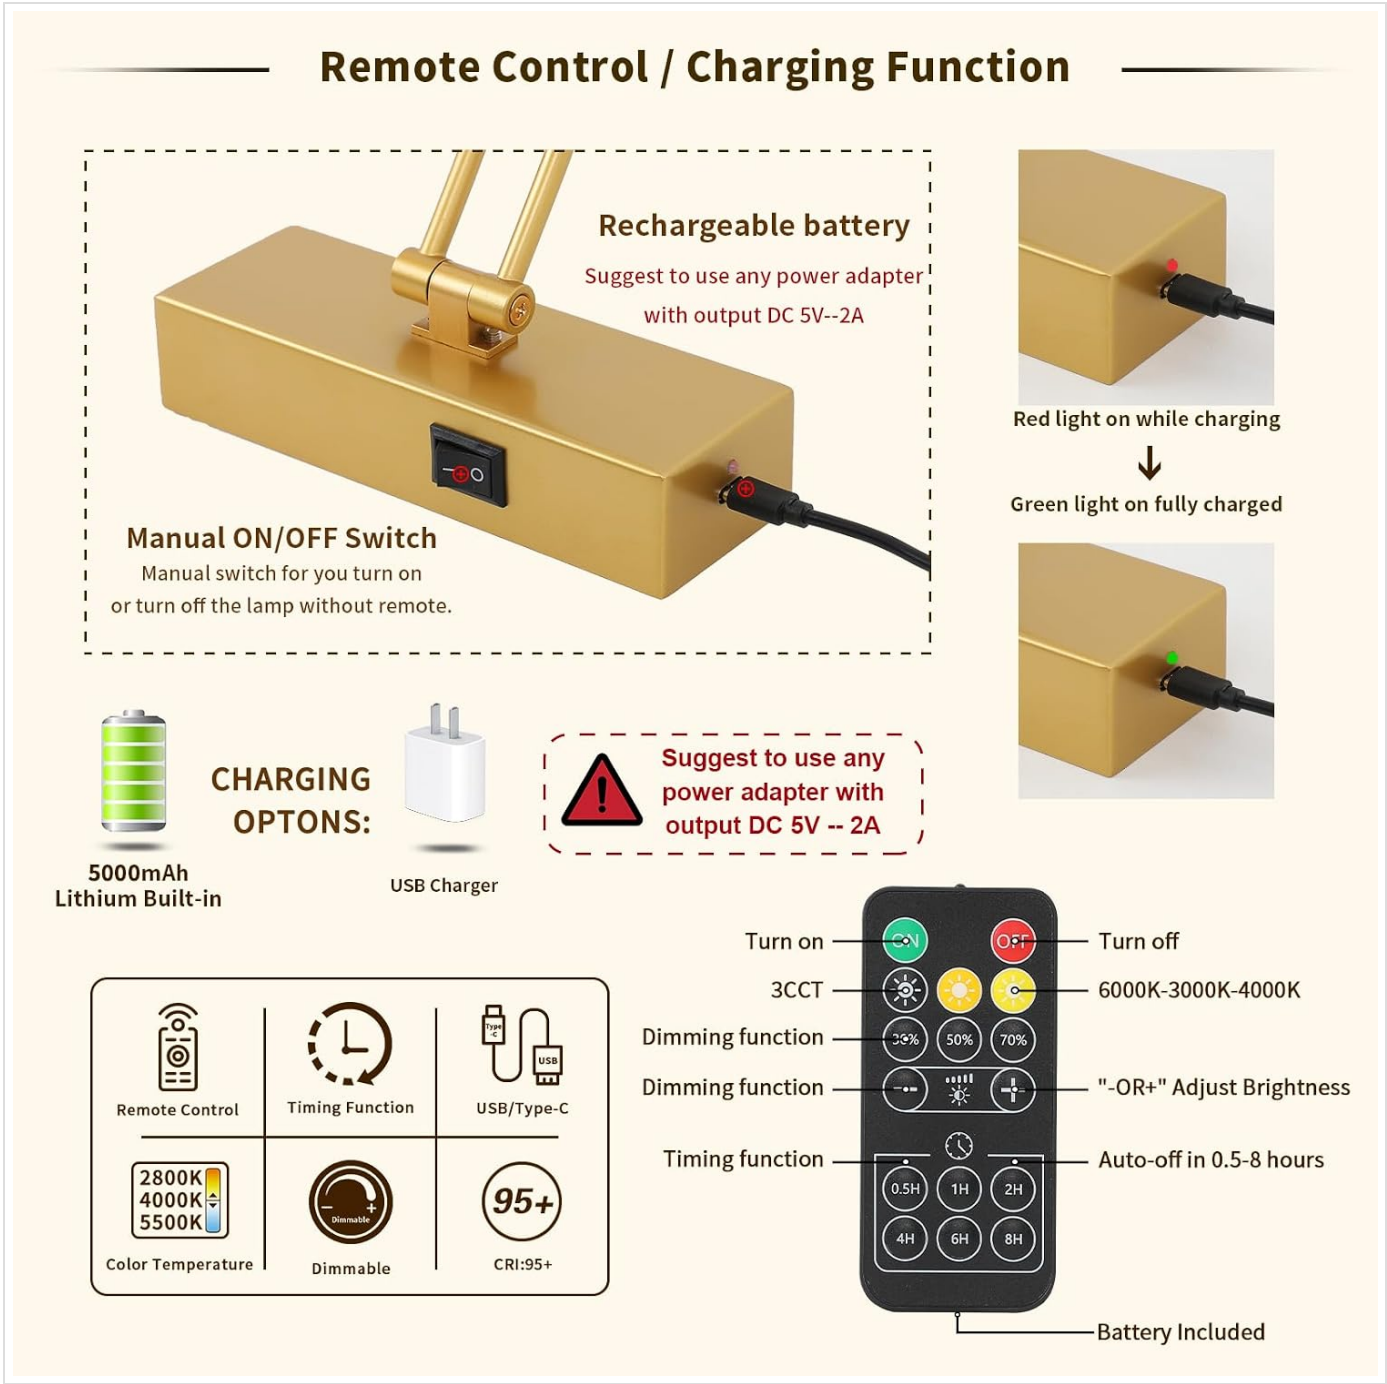


Image: Diagram showing the remote control functions, charging port, and battery indicator lights.

- **Power On/Off:** Press the **ON** button to turn the light on, and the**OFF** button to turn it off.
- **Color Temperature (3CCT):** Press the sun icon buttons to cycle through 6000K (Cool White), 3000K (Warm White), and 4000K (Neutral White).
- **Dimming:** Use the **+** and **-** buttons to adjust brightness. Long press for continuous adjustment from 20% to 100%. Quick press for incremental changes.
- **Preset Brightness:** Use the 30%, 50%, 70% buttons for quick brightness selection.
- **Timing Function:** Press 0.5H, 1H, 2H, 4H, 6H, or 8H to set the light to automatically turn off after the selected duration.



Image: Demonstration of the three color temperature options.

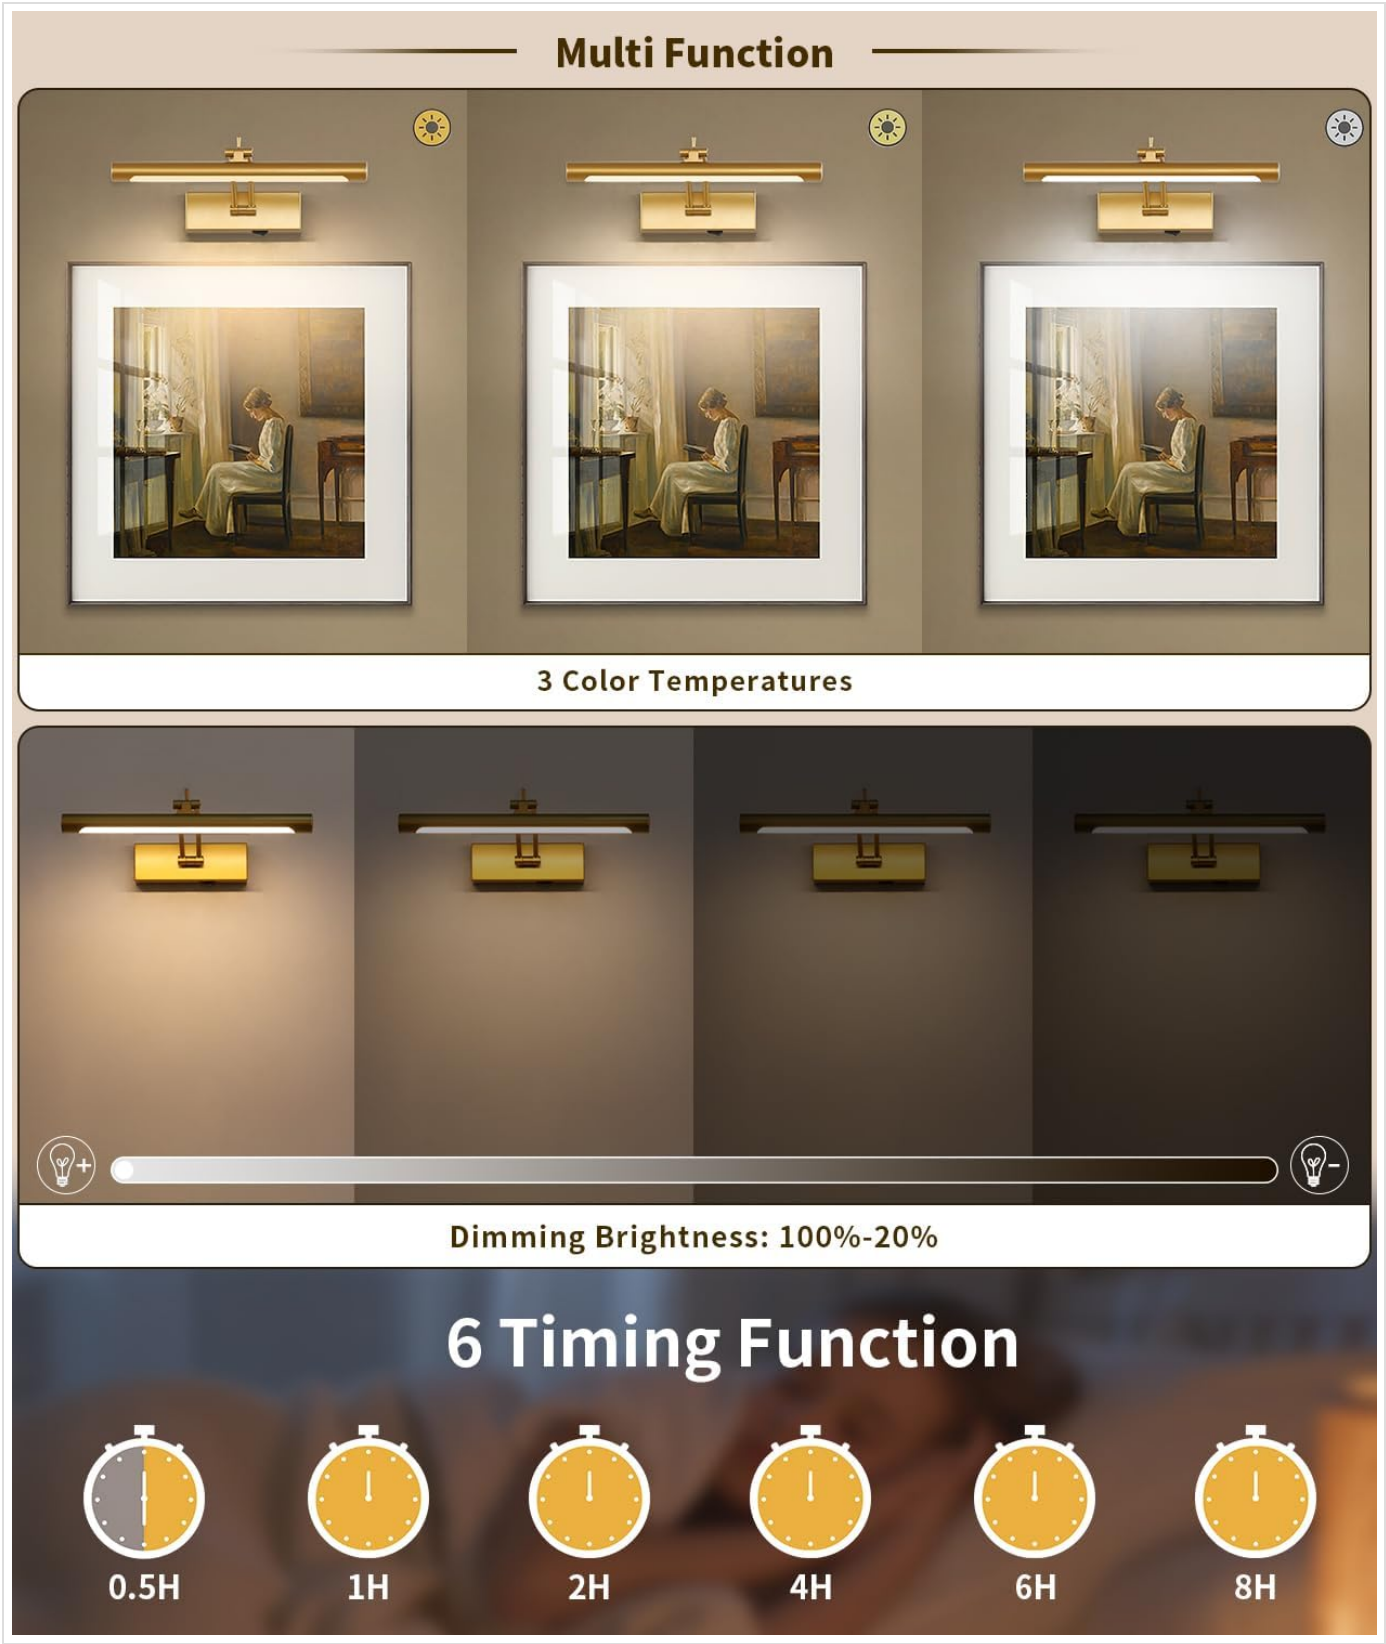


Image: Illustration of the dimming function from 100% to 20%.



Image: Details of the 6 timing functions.

Manual ON/OFF Switch

A manual ON/OFF switch is located on the side of the light fixture for direct control without the remote.

Adjusting the Light Angle

The light features a 270-degree adjustable swing arm. Gently pivot the light bar up or down to direct illumination as needed.

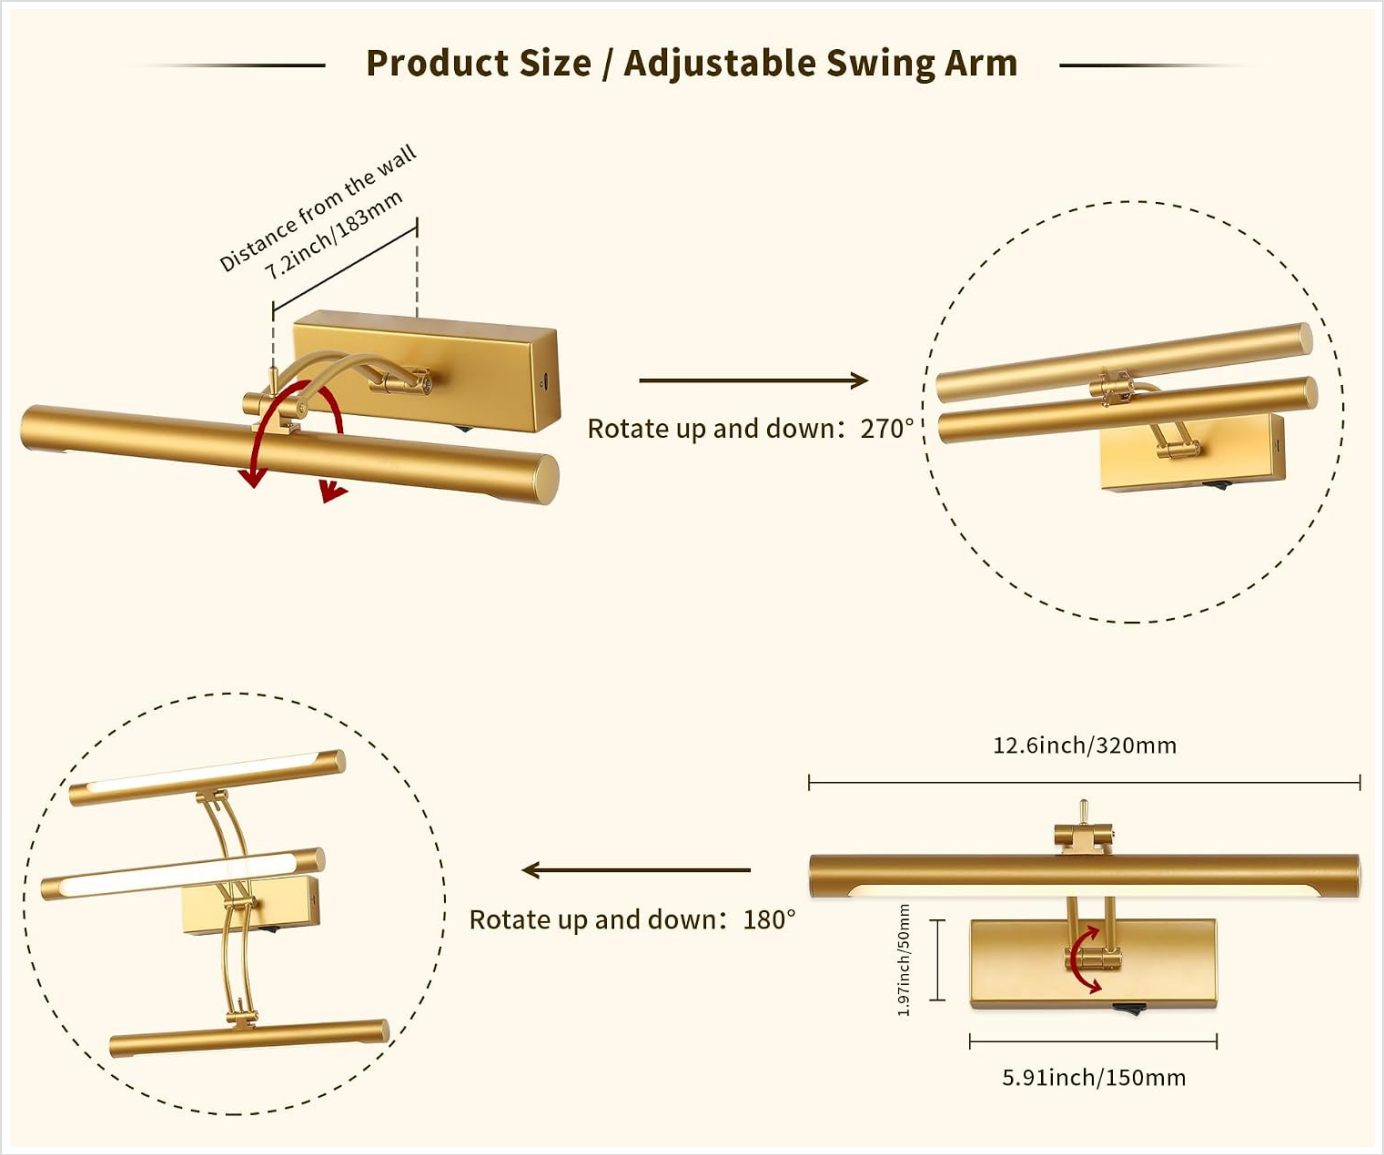


Image: Diagram illustrating the adjustable swing arm.

Your browser does not support the video tag.

Video: Official product video demonstrating the features and use of the 7Degobii Wireless Picture Light.

Charging Instructions

The picture light is equipped with a rechargeable battery. To charge:

1. Locate the USB-C charging port on the side of the light fixture.
2. Connect the provided USB-C cable to the light and to a USB power adapter (DC 5V-2A recommended).
3. A red indicator light will illuminate during charging.
4. The indicator light will turn green when the battery is fully charged.

Note: A USB power adapter is not included. Please use a compatible adapter with an output of DC 5V-2A for optimal charging.

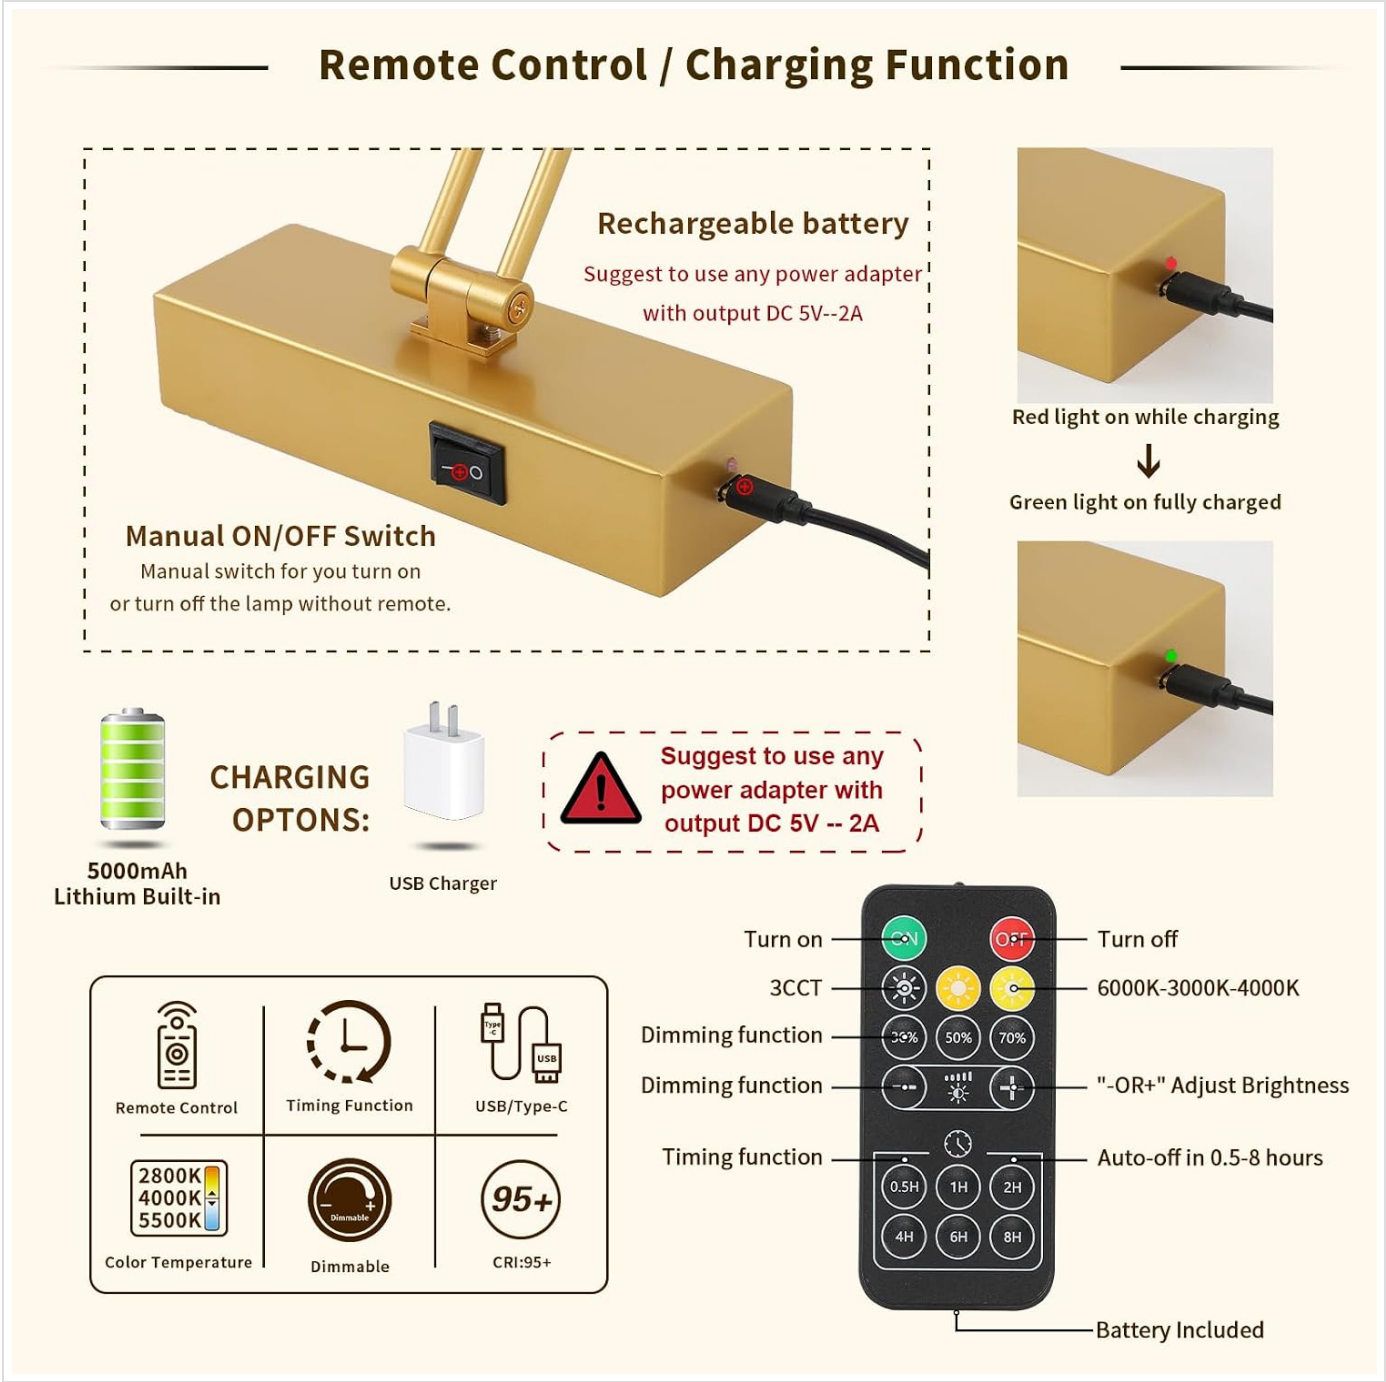


Image: Charging port and indicator lights detail.

Maintenance

- **Cleaning:** Wipe the light fixture with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the light regularly, especially if it will not be used for an extended period.
- **Storage:** Store the light in a cool, dry place when not in use.

Troubleshooting

Problem	Possible Cause	Solution
Light does not turn on.	Battery is depleted. Remote control battery is dead. Manual switch is off.	Charge the light. Replace remote control battery. Ensure manual switch is in the ON position.

Problem	Possible Cause	Solution
Short battery life.	High brightness setting. Frequent use. Battery degradation over time.	Reduce brightness. Charge more frequently. Ensure proper charging with 5V-2A adapter.
Light is wobbly on the wall.	Improper installation of mounting bracket or screws.	Re-check mounting bracket installation. Ensure screws are tightened and wall anchors are secure.
Remote control not working.	Remote battery is dead. Obstruction between remote and light.	Replace remote control battery. Ensure clear line of sight to the light.

Specifications

Feature	Detail
Brand	7Degobii
Model Number	8219
Color	Model A-Gold
Material	Metal, Acrylic
Power Source	Battery Powered (5000mAh Lithium Built-in)
Voltage	3.7 volts
Wattage	2 watts
Brightness	Up to 2000 lumens
Light Source	LED
Control Method	Remote Control, Manual Switch
Dimmable	Yes (20%-100%)
Color Temperature	3CCT (2800K, 4000K, 5500K)
Adjustability	270° Swing Arm
Dimensions (L x W x H)	12.6"L x 7.21"W x 1.97"H
Indoor/Outdoor Usage	Indoor
Water Resistance Level	Not Water Resistant

Warranty and Support

This 7Degobii product comes with a**2-year manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use.
For warranty claims, technical support, or any questions regarding your product, please contact 7Degobii customer service through the retailer's platform where you purchased the item. Please have your purchase receipt and model number (8219) available when contacting support.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0C945FFCL

More documents and user manuals: **https://manuals.plus/**