T4TREAM 48" 4 Drawers Dresser

T4TREAM 48" Farmhouse Dresser User Manual

Model: 48" 4 Drawers Dresser (ASIN: B0C973HTV9)

1. Introduction

Thank you for choosing the T4TREAM 48" Farmhouse Dresser. This manual provides essential information for the safe assembly, operation, and maintenance of your new furniture. Please read it thoroughly before beginning assembly and keep it for future reference.

This dresser combines rustic farmhouse aesthetics with practical storage solutions, featuring four drawers and sliding barn doors that conceal adjustable shelving. It is designed to enhance the organization and style of your bedroom, living room, or other living spaces.



Image 1.1: The T4TREAM 48-inch Farmhouse Dresser in Reclaimed Barnwood finish, showcasing its four drawers and two sliding barn doors.

2. Safety Information

Please observe the following safety precautions to prevent injury or damage to the product:

- Always assemble the dresser on a soft, clean surface to prevent scratches.
- Ensure all parts are securely fastened before use. Periodically check and tighten all connections.
- Do not overload drawers or shelves. Refer to specifications for weight limits.
- For safety, it is highly recommended to anchor the dresser to a wall using the provided anti-tip kit to prevent tipping, especially in homes with children or pets.
- Keep small parts and packaging materials away from children.
- Do not stand or climb on the dresser.

3. Package Contents

Before assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

All parts and accessories are labeled with numbers for easy identification during assembly.

- Dresser panels (top, bottom, sides, back)
- Drawer components (fronts, sides, backs, bottoms)
- Sliding barn door panels
- Metal track and hardware for barn doors
- Drawer slides and handles
- Adjustable shelf and shelf pins
- Assembly hardware (screws, dowels, cam locks, etc.)
- Anti-tip kit
- Instruction manual

4. Setup and Assembly Instructions

Assembly is required for this product. It is recommended to have two people for assembly. Follow the detailed step-by-step instructions provided in the separate assembly guide included in your package. Ensure you have a Phillips head screwdriver and a hammer (not included) ready.

1. Unpack all components and lay them out on a clean, soft surface to prevent damage.
2. Identify each part using the numbered labels and the assembly diagram.
3. Begin by assembling the main frame of the dresser, connecting the side panels to the top and bottom panels.
4. Install the drawer slides onto the interior panels of the dresser.
5. Assemble each drawer by attaching the sides, back, and bottom to the drawer front. Install drawer handles.
6. Insert the assembled drawers into the dresser frame.
7. Attach the metal track for the barn doors to the top front of the dresser.
8. Hang the barn doors onto the track.
9. Install the adjustable shelf inside the barn door compartment using the shelf pins at your desired height.
10. Secure the dresser to the wall using the anti-tip kit as per the instructions.



Image 4.1: The assembled dresser integrated into a bedroom environment.

5. Operating Instructions

5.1. Using the Drawers

The dresser features four smooth-gliding drawers designed for easy access and storage. Two drawers are 12 inches wide, and two are 19.4 inches wide. Each drawer can hold up to 25 lbs.

- To open a drawer, gently pull the handle.
- To close a drawer, push it firmly until it is fully seated.
- Avoid forcing drawers open or closed if they feel stuck. Check for obstructions.

5.2. Operating the Sliding Barn Doors

The two space-saving barn doors slide on a metal track, allowing you to conceal or reveal the interior shelf space.

- To open, gently slide the door along the top track.
- To close, slide the door back to its original position.
- Ensure the track is clear of debris for smooth operation.

5.3. Adjusting the Interior Shelf

The shelf behind the barn doors is adjustable to three different heights and is also removable, providing flexible storage for various item sizes.

1. Empty the shelf of all contents.
2. Carefully remove the shelf by lifting it off its pins.
3. Relocate the shelf pins to the desired height holes on the interior side panels.
4. Place the shelf back onto the pins, ensuring it is level and secure.

FLEXIBLE AND SPACIOUS STORAGE



Image 5.1: Detailed view of the dresser's flexible storage features, including sliding barn doors, an adjustable/removable shelf, and smooth-gliding drawers.

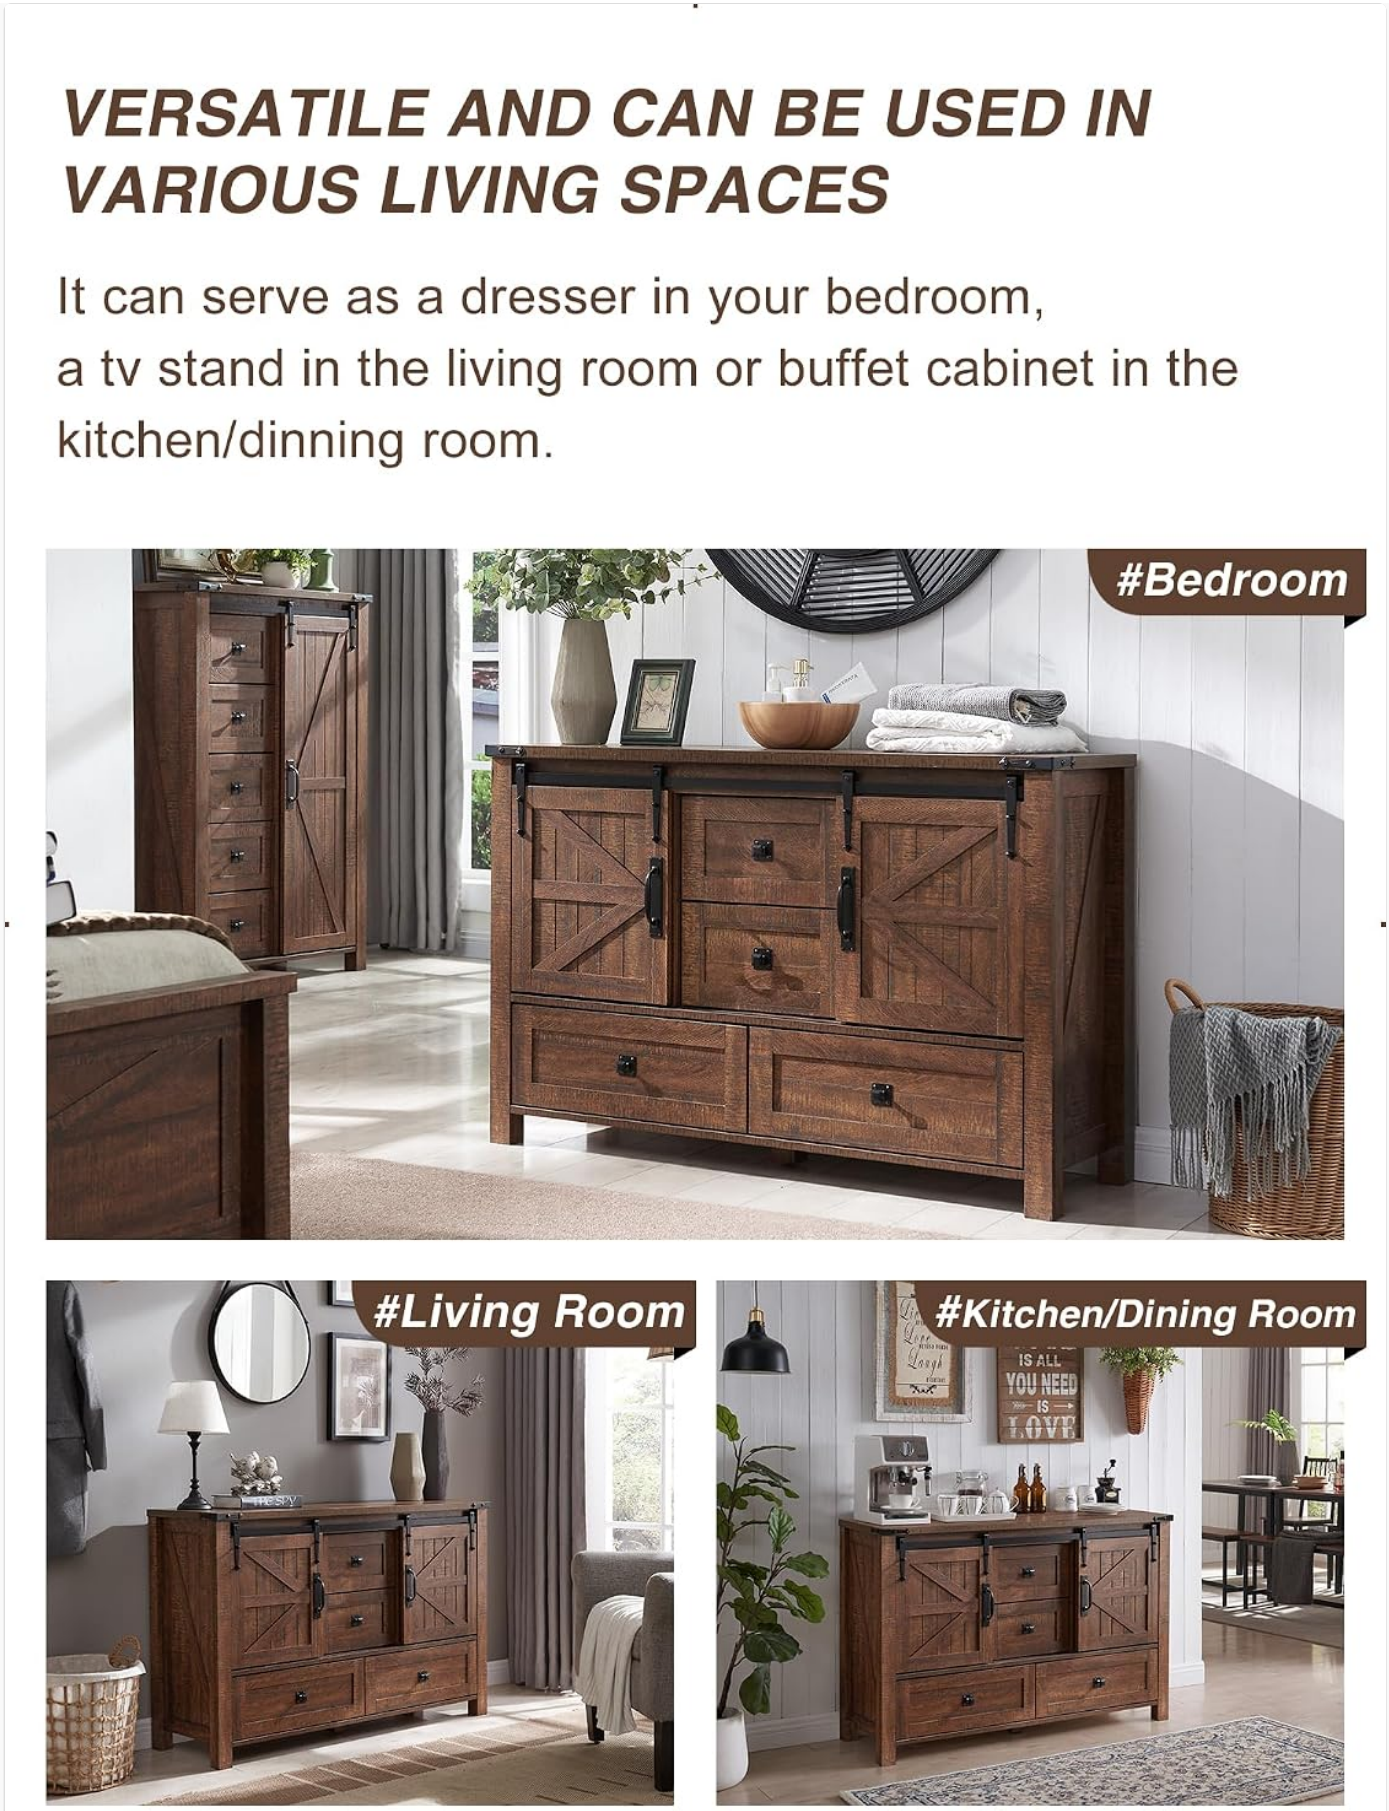


Image 5.2: Overhead view illustrating the various storage zones: spacious tabletop, daily item drawers, hidden customizable space, and larger stocking item drawers.

6. Maintenance and Care

To ensure the longevity and appearance of your T4TREAM dresser, follow these care guidelines:

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish.
- **Spills:** Blot spills immediately with a clean, dry cloth.
- **Sunlight:** Avoid prolonged exposure to direct sunlight to prevent fading.
- **Heat and Moisture:** Keep the dresser away from direct heat sources and excessive moisture. Use coasters under drinks.
- **Hardware:** Periodically check all screws and fasteners to ensure they are tight. Retighten as necessary.

7. Troubleshooting

If you encounter any issues with your dresser, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Drawers stick or don't slide smoothly.	Misaligned drawer slides, debris in tracks, overloaded drawer.	Check drawer slide alignment and ensure they are securely fastened. Clean tracks. Reduce drawer contents.
Barn doors are difficult to slide.	Debris on track, misaligned track, loose hardware.	Clean the metal track. Check that the track is level and securely mounted. Tighten any loose screws.
Dresser feels wobbly or unstable.	Loose assembly hardware, uneven floor.	Ensure all assembly screws and fasteners are tightened. Use shims under legs if floor is uneven. Secure dresser to wall using anti-tip kit.
Missing parts or damaged components upon arrival.	Shipping damage or packing error.	Do not proceed with assembly. Contact T4TREAM customer support immediately with your order details.

8. Specifications

Brand	T4TREAM
Model Name	48" 4 Drawers Dresser
ASIN	B0C973HTV9
Color	Reclaimed Barnwood
Material	Engineered Wood
Product Dimensions (L x W x H)	48"W x 15.57"D x 31.2"H (approx. 121.92 x 39.55 x 79.25 cm)
Drawer Dimensions (Small)	12"W x 12"D x 5.7"H
Drawer Dimensions (Large)	19.4"W x 12"D x 5.7"H
Number of Drawers	4

Weight Capacity (Each Drawer)	Up to 25 lbs
Weight Capacity (Tabletop)	Up to 100 lbs
Mounting Type	Freestanding (Wall anchor recommended)



Image 8.1: The dresser's versatility demonstrated in different room types, including a bedroom, living room, and kitchen/dining area.

9. Warranty and Support

T4TREAM is committed to providing high-quality products and customer satisfaction. While specific warranty details are

not provided in this manual, we stand behind our products.

If you have any questions, concerns, or require assistance with assembly, missing parts, or product issues, please do not hesitate to contact T4TREAM customer support. We aim to provide a satisfactory answer within 24 hours.

Please have your purchase information (e.g., order number, ASIN: B0C973HTV9) ready when contacting support to expedite assistance.

© 2025 T4TREAM. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question