T4TREAM 15.8"D x 31.3"W x 48"H (5 Drawers)

T4TREAM 5-Drawer Dresser with Sliding Barn Door Instruction Manual

Model: 15.8"D x 31.3"W x 48"H (5 Drawers) | Color: Light Rustic Oak

Important Safety Information

Please read and understand all instructions before assembly and use. Keep this manual for future reference.

- **Anti-Tip Kit:** Always install the included anti-tip kit to prevent serious injury from tipping furniture. Secure the dresser to a wall stud using the provided hardware.
- **Adult Assembly Required:** This product requires adult assembly. Keep small parts and assembly hardware away from children.
- **Weight Limits:** Do not exceed the maximum weight capacity for drawers (25 lbs each) and the top surface (100 lbs). Overloading can cause instability and damage.
- **Placement:** Place the dresser on a flat, level surface. Uneven surfaces can affect stability and operation.
- **Careful Handling:** Exercise caution when moving the assembled dresser. It is heavy and may require two people to lift.

Package Contents

Before beginning assembly, ensure all parts and hardware are present. Refer to the detailed parts list in your separate assembly guide. Each component is typically labeled with a number or letter for easy identification.



Image: Overview of dresser dimensions and drawer specifications.

If any parts are missing or damaged, please contact T4TREAM customer support for assistance.

Assembly Instructions

Assembly typically requires 1-2 hours with two adults. A Phillips head screwdriver and hammer may be needed. Do not use power tools unless specified, as overtightening can damage components.

1. **Preparation:** Clear a spacious area for assembly. Lay out all parts on a soft, clean surface to prevent scratches.
2. **Frame Construction:** Follow the step-by-step diagrams in your assembly guide to build the main frame of the dresser. Ensure all cam locks and screws are securely fastened.
3. **Drawer Assembly:** Assemble each drawer according to the instructions, ensuring the drawer slides are correctly oriented.

4. **Sliding Barn Door Mechanism:** Install the metal track and barn door hardware as directed. Ensure smooth movement before proceeding.
5. **Shelf Installation:** Insert the adjustable shelves into the desired positions within the barn door compartment.
6. **Final Checks:** Once assembled, gently test all moving parts. Install the anti-tip kit immediately.



Image: Fully assembled T4TREAM 5-Drawer Dresser.

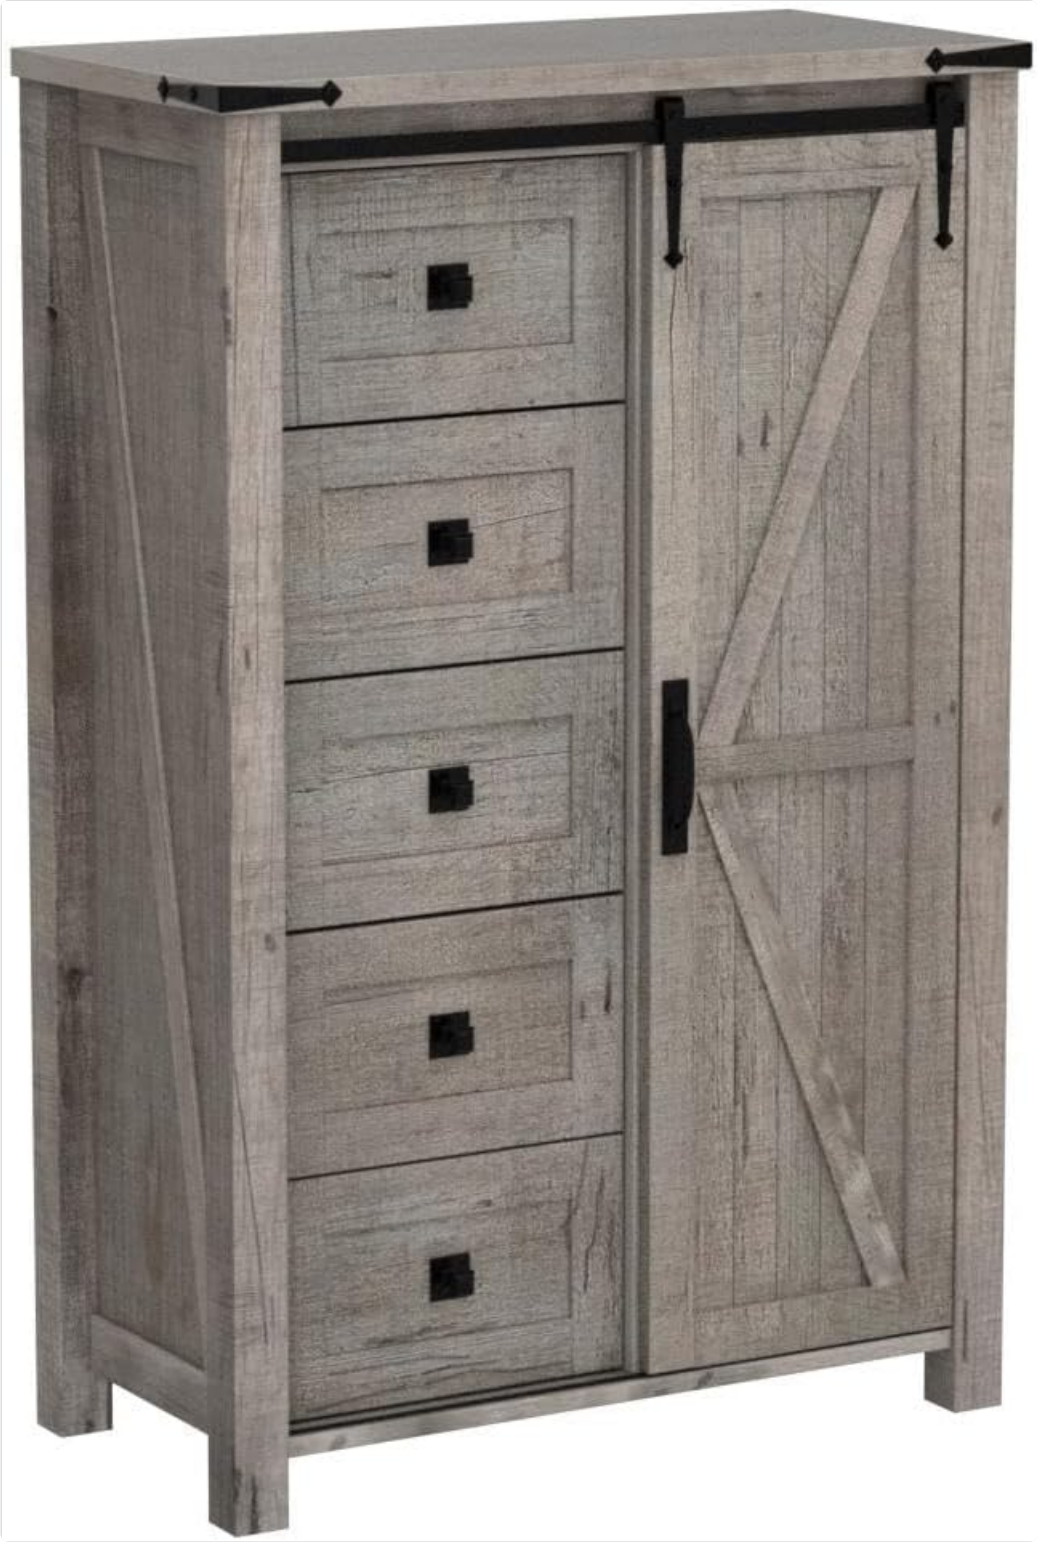


Image: Details of the sliding barn door track, adjustable shelves, and drawer operation.

Operating Your Dresser

Sliding Barn Door

The barn door slides smoothly along the top metal track. To open, gently push the door to the side. To close, pull it back until it covers the desired compartment. Ensure no items obstruct the door's path.

Drawers

Each of the five drawers operates on smooth-gliding rails. Pull the drawer handle to open and push to close. Avoid forcing drawers if they feel stiff; check for obstructions. Do not overload drawers beyond 25 lbs each.

Adjustable Shelves

The compartment behind the sliding barn door contains two adjustable shelves. To adjust a shelf, remove all items, then lift the shelf and reposition the support pins into the desired holes. Ensure the shelf is level and securely seated on all four pins before placing items on it. Shelves can also be removed entirely for larger storage needs.



Image: Dresser with barn door open to show adjustable shelves and drawers.



Sliding Barn Doors

- Space-saving and easy access This rustic & unique appearance that adds character and charm to your space

Adjustable Shelves

- Equipped with 2 adjustable shelves, each with 3 heights adjustable to maximize your space utilization





Smooth-gliding Drawers

- Quiet operation & easy access to your items

Image: Detailed view of the adjustable shelves.

Maintenance and Care

- **Cleaning:** Wipe surfaces with a soft, dry cloth. For stubborn marks, use a slightly damp cloth and mild soap, then dry immediately. Avoid harsh chemicals or abrasive cleaners.
- **Moisture:** Protect the dresser from excessive moisture and direct sunlight, which can cause warping or fading.
- **Hardware:** Periodically check all screws and fasteners to ensure they remain tight. Retighten as necessary to maintain structural integrity.
- **Moving:** When moving the dresser, always lift it rather than dragging it to prevent damage to the legs and frame.

Troubleshooting

Issue	Possible Cause	Solution
Drawers do not slide smoothly.	Misaligned slides, obstructions, loose hardware.	Check that drawer slides are correctly installed and aligned. Remove any obstructions. Tighten all screws on drawer slides.
Sliding barn door sticks or is difficult to move.	Track obstruction, misaligned rollers, loose hardware.	Inspect the track for debris. Ensure rollers are properly seated on the track. Check and tighten all hardware for the barn door mechanism.
Dresser feels unstable or wobbly.	Uneven floor, loose assembly hardware, anti-tip kit not installed.	Ensure the dresser is on a level surface. Retighten all assembly screws. **Install the anti-tip kit immediately if not already done.**
Missing parts or damaged components.	Manufacturing error or shipping damage.	Do not proceed with assembly. Contact T4TREAM customer support with your model number and a description of the issue.

Product Specifications

Feature	Detail
Brand	T4TREAM
Model	5-Drawer Dresser with Sliding Barn Door
Dimensions (Overall)	15.8"D x 31.3"W x 48"H
Drawer Dimensions (Internal)	11.2"W x 12"D x 5.7"H
Material	Engineered Wood
Color	Light Rustic Oak
Weight Capacity (Top Surface)	100 lbs
Weight Capacity (Each Drawer)	25 lbs
Special Features	Sliding Barn Door, 2 Adjustable/Removable Shelves, 5 Drawers
Assembly Required	Yes

Warranty and Customer Support

T4TREAM stands behind the quality of its products. For specific warranty information, please refer to the documentation included with your purchase or visit the official T4TREAM website.

If you encounter any issues, require replacement parts, or have questions regarding assembly or operation, please contact T4TREAM customer support. Have your model number and purchase date ready for faster service.

Contact Information: Please refer to your purchase receipt or the T4TREAM brand store on Amazon for the most current customer service contact details.

© 2023 T4TREAM. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question