Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Petbobi B0C98ZV8Q3

Petbobi Active Rolling Ball User Manual

Model: B0C98ZV8Q3

Brand: Petbobi

1. Product Overview

The Petbobi Active Rolling Ball is an innovative interactive toy designed to keep your dog engaged and active. Featuring self-moving capabilities, flashing LED lights, and two distinct play modes, this USB-rechargeable ball provides mental stimulation and physical exercise for your canine companion. Its durable and washable design ensures long-lasting fun and easy maintenance.



The Petbobi Active Rolling Ball, designed for interactive play and exercise.

2. Setup Guide

2.1 Unboxing and Initial Inspection

Carefully remove all components from the packaging. Ensure you have the Petbobi Interactive Dog Rolling & Flashing Ball Toy and the Type-C Charging Port cable. Inspect the ball for any visible damage before first use.

Your browser does not support the video tag.

Watch this video for a visual guide on unboxing and initial setup of the Petbobi Active Rolling Ball.

2.2 Charging the Ball

1. Unscrew the ball clockwise to open the double shell and remove the inner core.


2. Connect the Type-C charging cable to the charging port on the inner core.
3. Plug the USB end of the cable into a compatible USB power source (e.g., computer, wall adapter).
4. The indicator light will show red during charging. It will turn green when fully charged. A full charge takes approximately 1 hour and provides up to 4 hours of play time.



The internal module of the Petbobi ball features a USB charging port for convenient power replenishment.

2.3 Powering On and Initial Activation

1. After charging, reinsert the inner core into the ball's shell and tighten it securely.
2. Press and hold the ON/OFF button on the inner core for 5 seconds to turn on the toy.
3. Shake the ball to activate it and begin play.

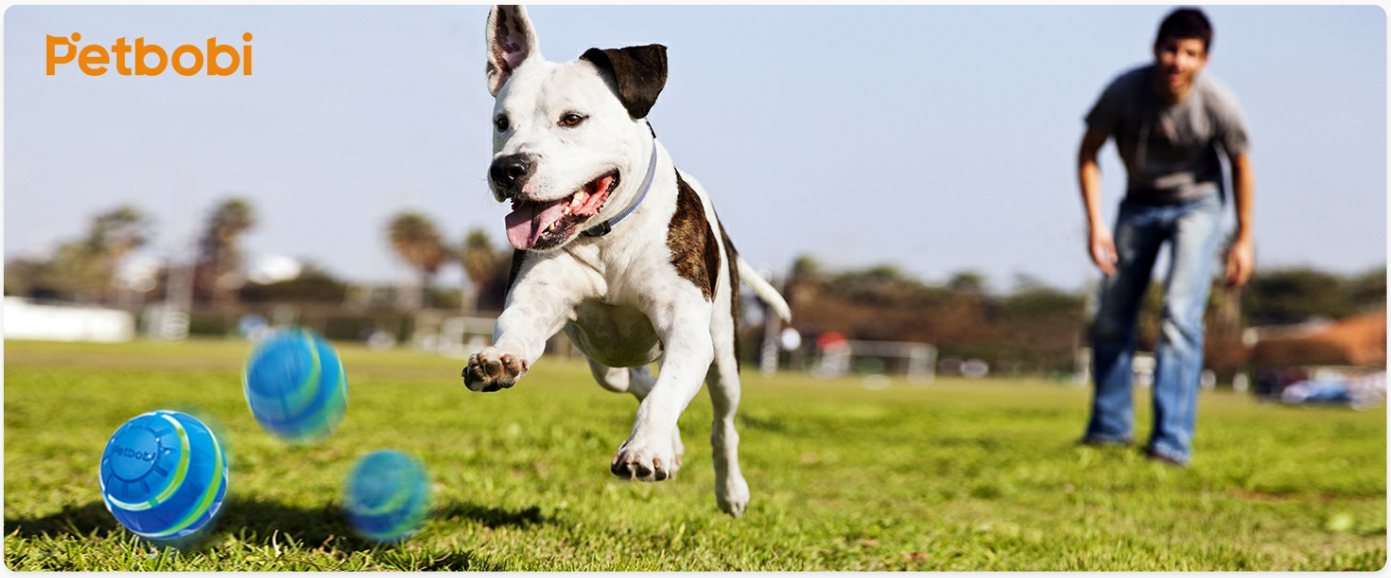

Follow these steps to charge and activate your Petbobi Active Rolling Ball.

3. Operating Instructions

3.1 Mode Selection

The Petbobi Active Rolling Ball offers two distinct modes to suit different play scenarios:

- **High Mode (Green Light):** The ball moves and bounces quickly. Ideal for thin carpets and outdoor lawns.
- **Low Mode (Blue Light):** The ball rolls rhythmically across the floor. Suitable for indoor floors.

Quickly press the ON/OFF button to switch between these modes.



The Petbobi ball features two modes: High Speed for energetic play and Low Speed for rhythmic movement.

3.2 Smart Play Features

The interactive dog ball operates for 10 seconds on its regular program, then enters a hibernation state. If the ball is hidden or untouched, it will automatically roll again after a period to remind your pet to find and play with it. To wake the ball from sleep mode, simply touch it.



The ball's auto-bouncing and flashing lights are designed to capture and maintain your dog's attention.

3.3 Interactive Fun

The ball's self-moving action and simulated dog barking sounds encourage dogs to chase and bite, promoting active play. The flashing LED light is particularly effective in darker environments, instantly attracting your dog's attention and making playtime more exciting.




The Petbobi Active Rolling Ball provides engaging play for dogs in various settings, from sandy beaches to grassy parks and even water.

4. Maintenance

4.1 Cleaning Instructions

The outer shell of the Petbobi Active Rolling Ball is washable to ensure hygiene and reduce the risk of sickness from dirty toys. To clean, unscrew the ball and remove the inner electronic core. Only the outer shell can be washed. Do not submerge or wash the inner electronic core.

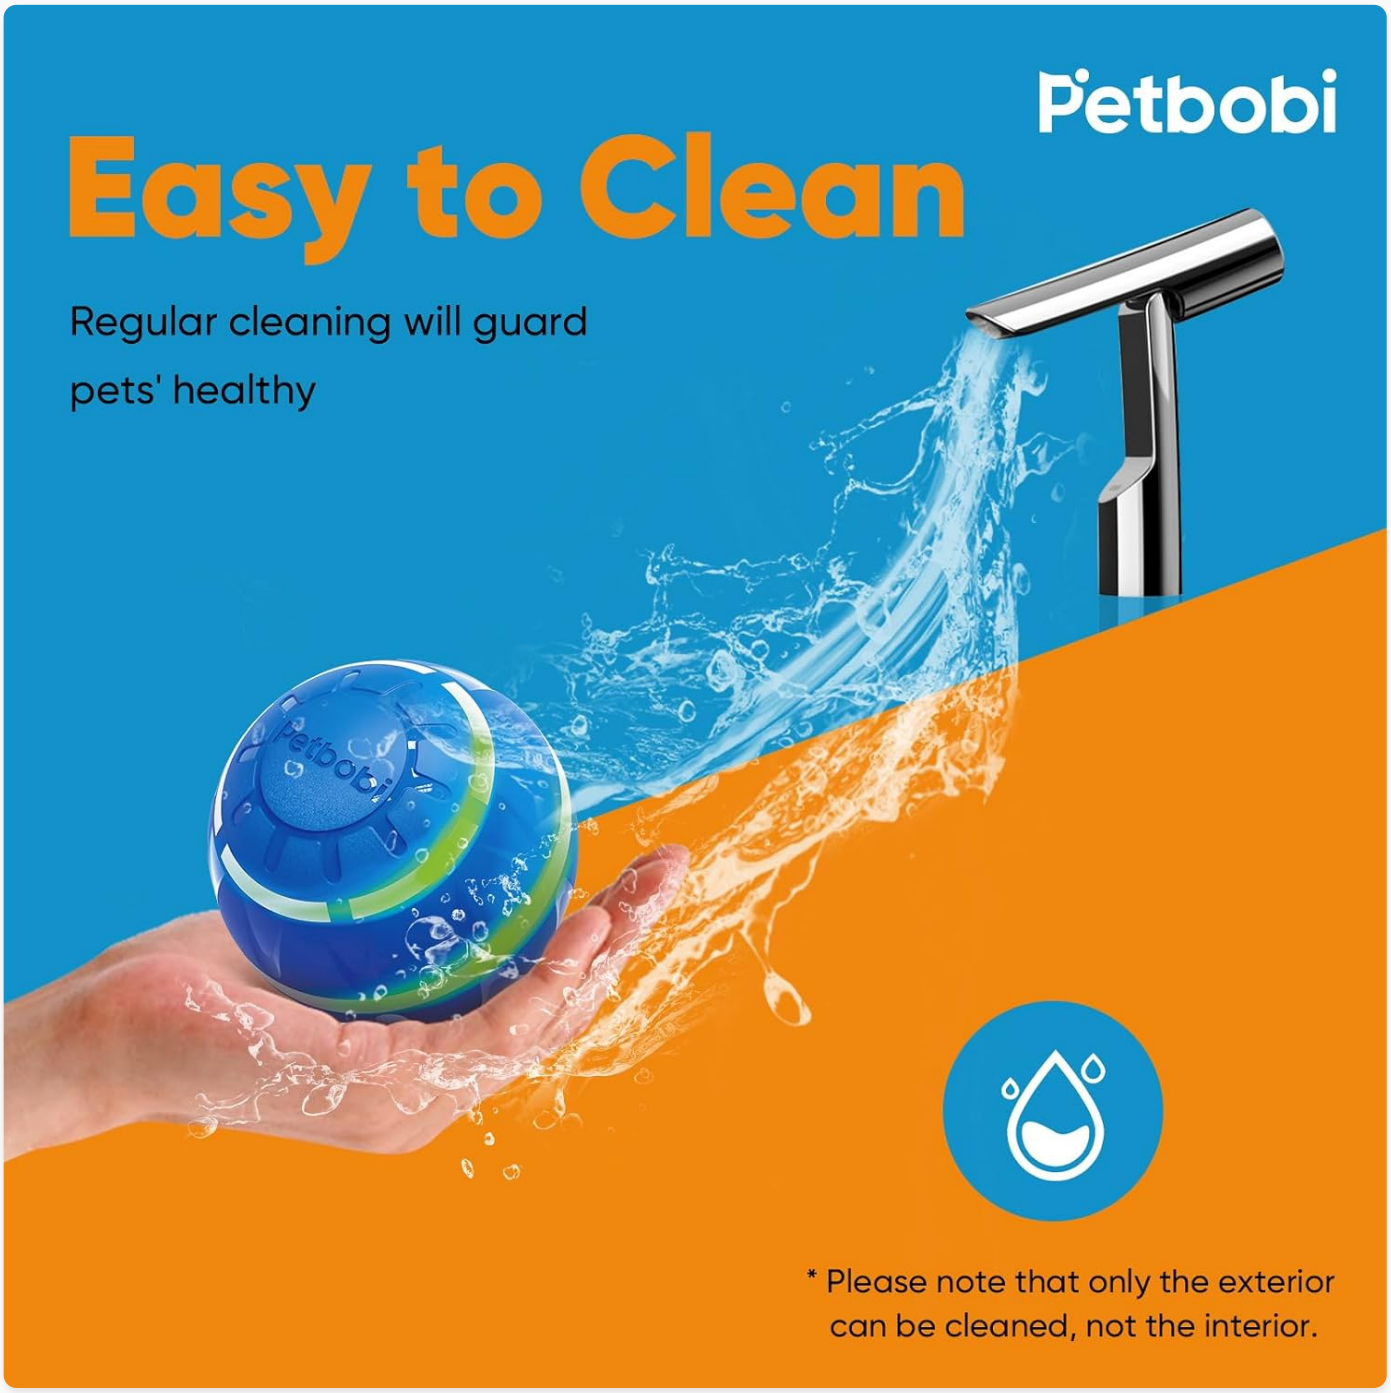

Regular cleaning of the ball's exterior helps maintain your pet's health. Remember, only the exterior can be cleaned, not the interior.

4.2 Durability and Care

The ball's shell is made from durable TPU material, designed to withstand biting and chewing. While robust, regular inspection for wear and tear is recommended. Ensure the ball is properly reassembled after cleaning to maintain its integrity and functionality.



The ball features a thick, durable shell for safety and longevity, designed to withstand chewing.

5. Troubleshooting

If you encounter any issues with your Petbobi Active Rolling Ball, please refer to the following common cautions:

- **Carpet Use:** The ball is not recommended for use on thick, shaggy, or other pile carpets, as this can impede its movement.
- **Noise on Hard Floors:** The ball may produce more noise on wooden floors compared to other surfaces due to its movement and material.
- **Functionality Issues:** If the ball lights up but does not vibrate or move after initial activation, ensure the internal module is correctly seated and the shell is securely closed. Some users have reported issues with the internal mechanism not making proper contact if not fully tightened.
- **Battery Life:** If the ball's movement or lights are weak, ensure it is fully charged.

For any quality issues or persistent problems, please contact customer support for assistance.

6. Product Specifications

Specification	Detail
Item Weight	8.5 ounces
Manufacturer	Petbobi
ASIN	B0C98ZV8Q3
Item Package Dimensions L x W x H	3.43 x 3.39 x 3.31 inches
Item Dimensions LxWxH	3.55 x 3.55 x 3.55 inches
Color	Blue
Size	3.55 in
Material	Thermoplastic Polyurethane
Age Range Description	All Life Stages
Number of Items	1
Style	Dog Bounce Ball
Breed Recommendation	Medium
Specific Uses for Product	Active, Teeth, Outdoor, Indoor, Weight

7. Warranty and Support

The Petbobi Active Rolling Ball comes with a 1-year free replacement service. For any questions or issues that arise during use, please do not hesitate to contact us. We are here to help and ensure your satisfaction with the product.

© 2024 Petbobi. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0C98ZV8Q3

More documents and user manuals: **https://manuals.plus/**