cimetech B0C9C56QXQ

cimetech Ergonomic Wireless Keyboard User Manual

Model: B0C9C56QXQ

Introduction

Thank you for choosing the cimetech Ergonomic Wireless Keyboard. This manual provides detailed instructions for setting up, operating, and maintaining your new keyboard. Please read this manual thoroughly before use to ensure optimal performance and longevity of your device.



Image: The cimetech Ergonomic Wireless Keyboard, showcasing its slim design and the included USB receiver.

Safety Information

- Keep the keyboard away from liquids and excessive moisture.
- Do not expose the keyboard to extreme temperatures.
- Avoid dropping or subjecting the keyboard to strong impacts.
- Do not attempt to disassemble or repair the keyboard yourself. Contact customer support for assistance.

- Dispose of batteries according to local regulations.

Package Contents

Please check the package contents to ensure all items are present:

- 1 x cimetech Ergonomic Wireless Keyboard
- 1 x USB Nano Receiver
- 1 x User Manual (this document)

Setup

1. Battery Installation

The keyboard requires 2 x AA batteries (not included). To install the batteries:

1. Locate the battery compartment on the underside of the keyboard.
2. Slide open the battery compartment cover.
3. Insert two AA batteries, ensuring the correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely.

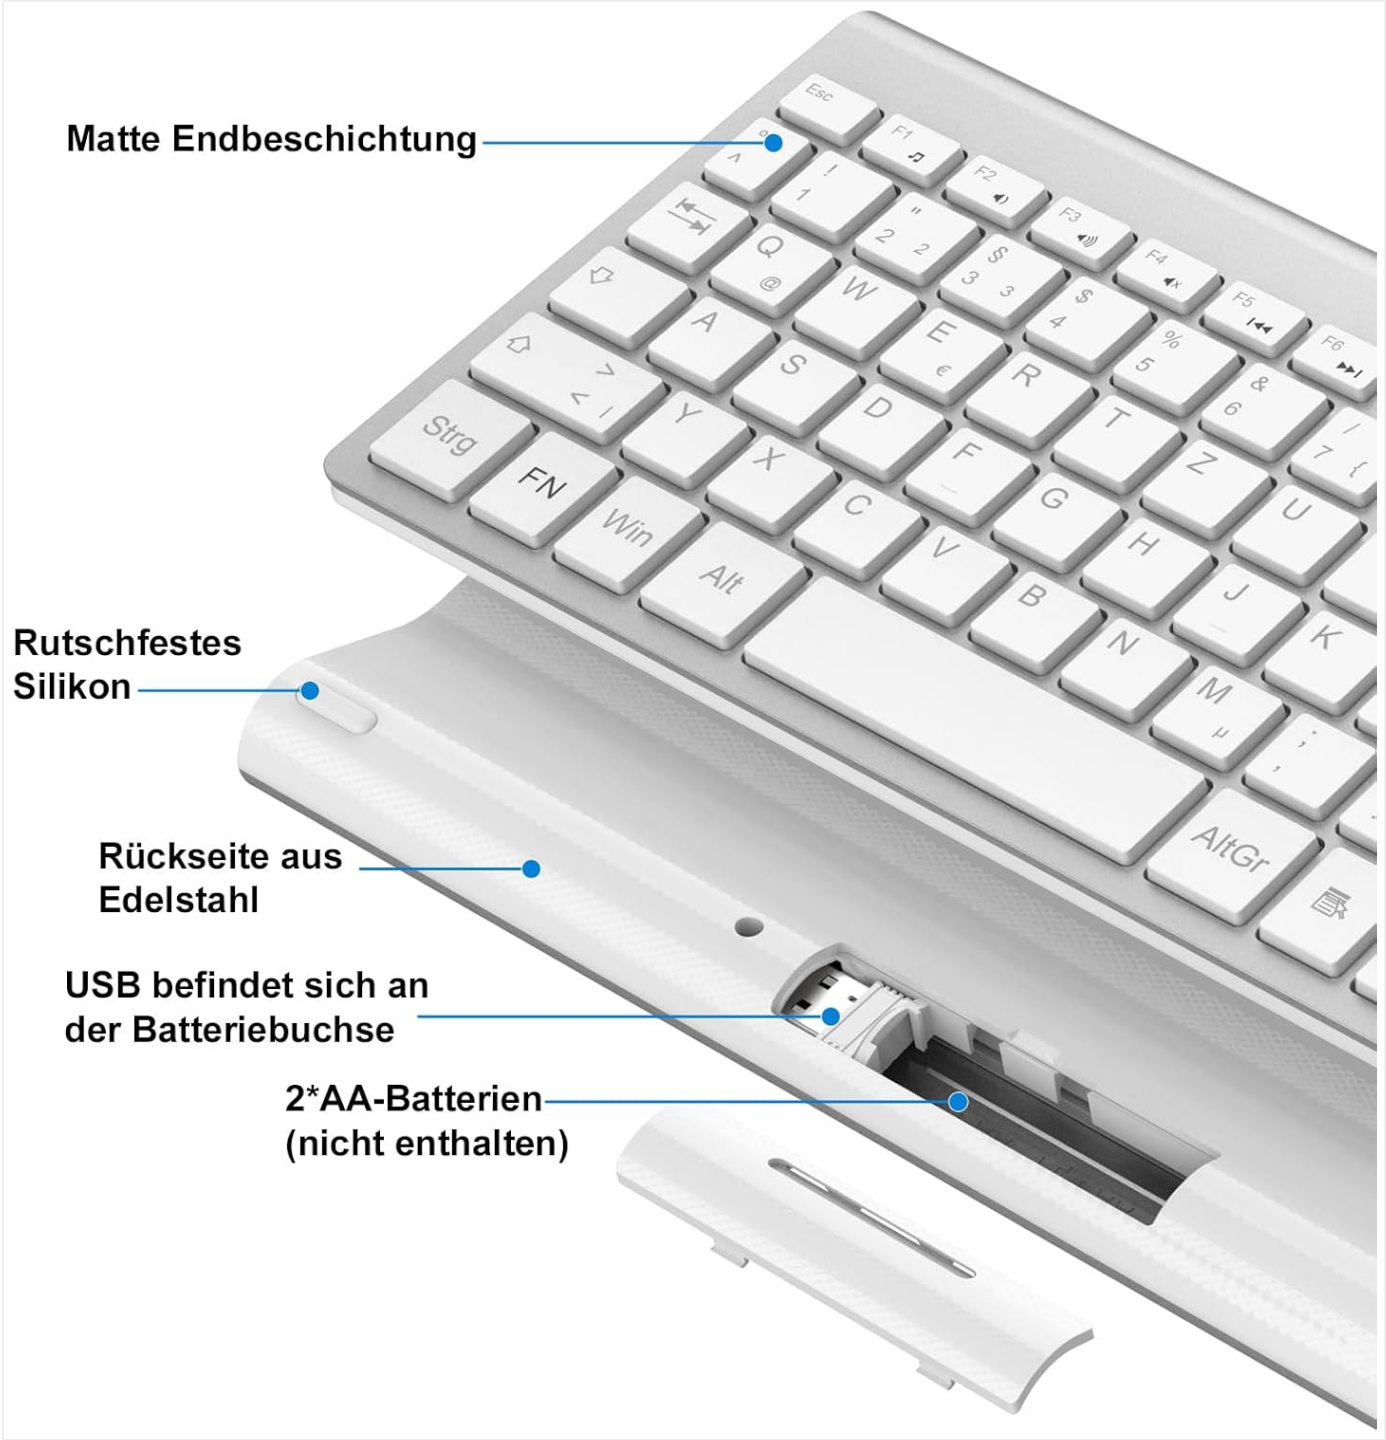


Image: View of the keyboard's underside, showing the battery compartment and the storage slot for the USB receiver.

2. USB Receiver Connection

The USB Nano Receiver is stored in the battery compartment of the keyboard for convenience. To connect the keyboard to your computer:

1. Remove the USB Nano Receiver from its storage slot in the battery compartment.
2. Plug the USB Nano Receiver into an available USB port on your PC, desktop, notebook, or laptop.
3. The system will automatically detect and install the necessary drivers. No manual driver installation is required.



Image: The USB receiver plugged into a laptop's USB port, illustrating the simple setup process.

3. Powering On

Once the batteries are installed and the USB receiver is connected, the keyboard is ready for use. There is an ON/OFF switch located on the back of the keyboard. Ensure it is in the "ON" position.



Image: The keyboard highlighting its power indicator and the ON/OFF switch for battery management.

Operating the Keyboard

1. Basic Functions

The cimetech wireless keyboard features a standard QWERTZ layout, suitable for German language input. Its flat keys with scissor switches provide a sensitive and quiet typing experience.

Deutsch QWERTZ Layout Tastatur

Große Eingabetaste geeignet für Deutschland-Eingabe
Angenehmes Gefühl beim Tippen



Image: Close-up of the keyboard demonstrating the QWERTZ layout, optimized for German input.



Image: Detailed view of the keyboard's keys, illustrating the quiet scissor-switch mechanism for comfortable typing.

2. Multimedia and Function Keys (Fn)

The keyboard includes 12 multimedia function keys (F1-F12) that can be accessed directly without pressing the "Fn" key. These keys provide quick access to common functions:

- **F1-F12:** Various multimedia controls such as volume adjustment, media playback, homepage access, copy, paste, cut, etc. Refer to the icons on the keys for specific functions.

3. Power Saving Mode

To conserve battery life, the keyboard will automatically enter sleep mode after 10 minutes of inactivity. To wake the keyboard, simply press any key.

Maintenance

1. Cleaning

To clean your keyboard:

- Ensure the keyboard is turned off.
- Use a soft, lint-free cloth slightly dampened with water or a mild cleaning solution.
- Do not spray liquid directly onto the keyboard.
- Avoid using abrasive cleaners or solvents.

2. Storage

When not in use for extended periods, turn off the keyboard to save battery life. Store it in a cool, dry place away from direct sunlight.



Image: The keyboard shown in a protective sleeve, emphasizing its portability and ease of storage for various uses.

Troubleshooting

Problem	Possible Solution

Problem	Possible Solution
Keyboard not responding	• Ensure the keyboard is turned ON. • Check if the batteries are correctly installed and have sufficient charge. Replace if necessary. • Ensure the USB Nano Receiver is securely plugged into a working USB port on your computer. • Try plugging the USB Nano Receiver into a different USB port. • Restart your computer.
Keys are sticky or unresponsive	• Clean the keyboard as described in the Maintenance section. • Ensure no debris is lodged under the keys.
Poor wireless connection / Lag	• Ensure the keyboard is within the 10-meter (33 feet) operating range of the USB receiver. • Move the keyboard closer to the USB receiver. • Avoid placing the keyboard near other wireless devices that might cause interference (e.g., Wi-Fi routers, cordless phones).

Specifications

- **Model:** B0C9C56QXQ
- **Connectivity:** 2.4G Wireless (via USB Nano Receiver)
- **Operating Range:** Up to 10 meters (33 feet)
- **Layout:** QWERTZ (German Layout)
- **Key Type:** Scissor Switch
- **Material:** Stainless steel and ABS
- **Dimensions:** Approximately 36 x 13 x 0.6 cm (14.5 x 5.3 x 0.23 inches)
- **Weight:** Approximately 500 g
- **Power:** 2 x AA Batteries (not included)
- **Compatibility:** PC, Desktop, Notebook, Laptop (Windows OS). **Note: Not compatible with Mac systems.**
- **Special Features:** Ergonomic design, splash-proof flat keys, 12 direct multimedia keys, automatic power-saving mode, non-slip pads.



Image: The product packaging, displaying various specifications, certifications, and manufacturer details.

Warranty and Support

For any product-related issues, questions, or support needs, please contact cimetech customer service. Refer to the contact information provided with your purchase or visit the official cimetech website for support details.
Please retain your proof of purchase for warranty claims.

© 2024 cimetech. All rights reserved.
This manual is subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How can I fix the issue where the Shift key on my cimetech KF10 (B0C9C56QXQ) keyboard does not work for certain letters like 'D' or 'C'?

To resolve the issue where the Shift key (referred to as the 'swift' key in your request) is not working for specific letters on your cimetech KF10 (B0C9C56QXQ) keyboard, please follow these troubleshooting steps:Check...

Read full answer