Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

onerbl N280

onerbl AC/DC Adapter User Manual

For NEQUARE Model N280 Cordless Stick Vacuum Cleaner

1. Introduction

This manual provides essential information for the safe and effective use of your onerbl AC/DC Adapter. This adapter is specifically designed as a replacement power supply for the NEQUARE Model N280 cordless stick vacuum cleaner. Please read this manual thoroughly before use and retain it for future reference.

2. Safety Information

To prevent electric shock, fire, or damage to the product, please observe the following safety precautions:

- **Indoor Use Only:** This adapter is designed for indoor use. Do not expose it to rain or moisture.
- **Voltage Compatibility:** Ensure the wall outlet voltage (AC 100-240V, 50/60Hz) matches the adapter's input requirements.
- **Proper Connection:** Always connect the adapter to the device before plugging it into a wall outlet. Disconnect from the wall outlet before disconnecting from the device.
- **Avoid Damage:** Do not use the adapter if the cord or plug is damaged. Do not bend, twist, or pull the cord excessively.
- **Ventilation:** Ensure adequate ventilation around the adapter during use. Do not cover it with cloth or place it in an enclosed space.
- **Overload Protection:** The adapter features built-in over voltage, over heat, short-circuit, and over-current protection. However, avoid overloading the circuit.
- **Children and Pets:** Keep the adapter out of reach of children and pets.



Image: This diagram illustrates the multiple protection features of the adapter, including short-circuit, over-voltage, and over-current protection, ensuring electrical safety.

3. Product Overview

The onerbl AC/DC Adapter is a high-quality replacement power supply designed for specific cordless vacuum cleaner models. It provides stable and efficient power for charging and operation.



Image: The onerbl AC/DC adapter unit with its integrated power cord, ready for connection.



Image: This image displays the physical dimensions of the adapter unit, measuring approximately 3.1 inches in length, 2.1 inches in width, and 1.2 inches in thickness.



Image: A close-up of the adapter's label, indicating its model, input voltage range (100-240V AC, 50/60Hz), and a 'CAUTION INDOOR USE ONLY' warning. The cable length is specified as 76 inches.

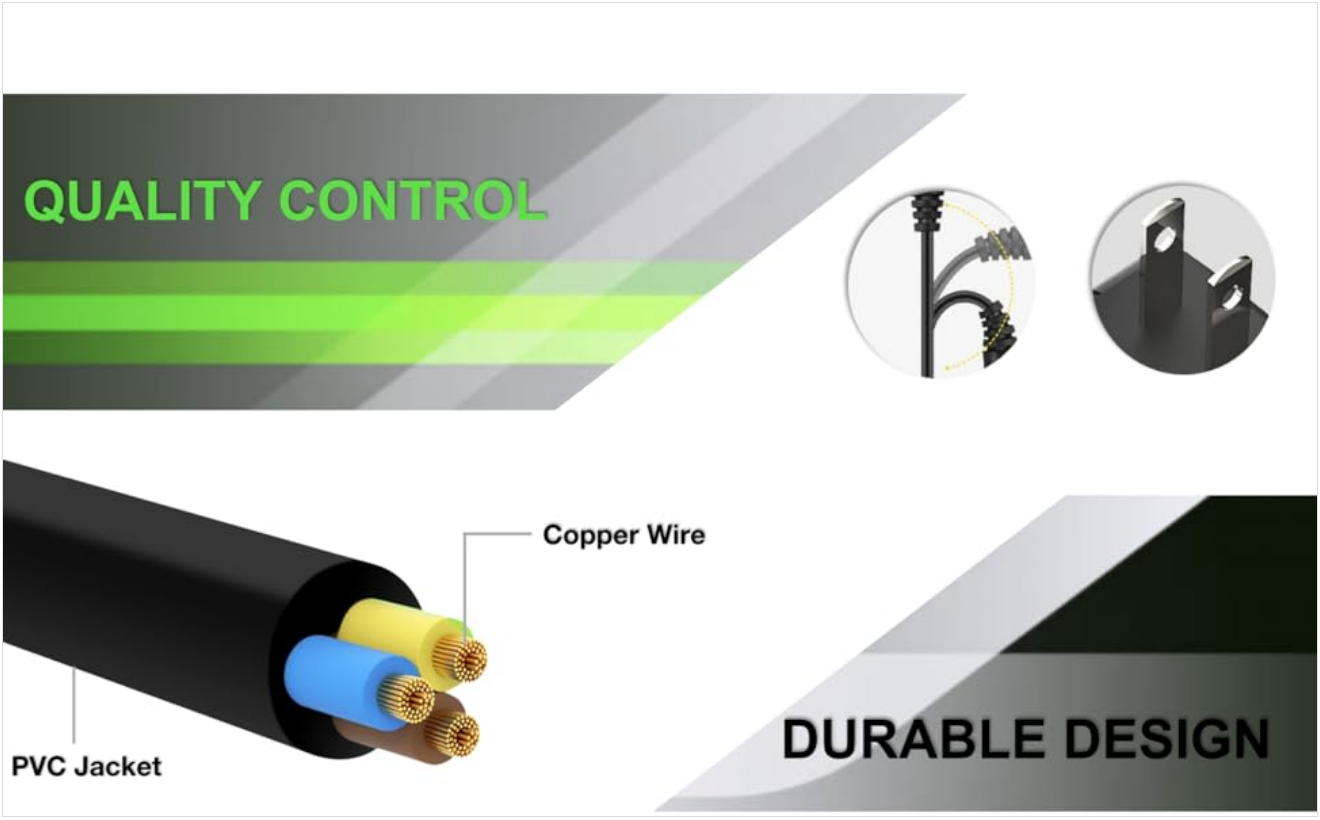


Image: This graphic highlights the durable design of the adapter's cable, featuring copper wire conductors encased in a PVC jacket, and a robust plug construction.

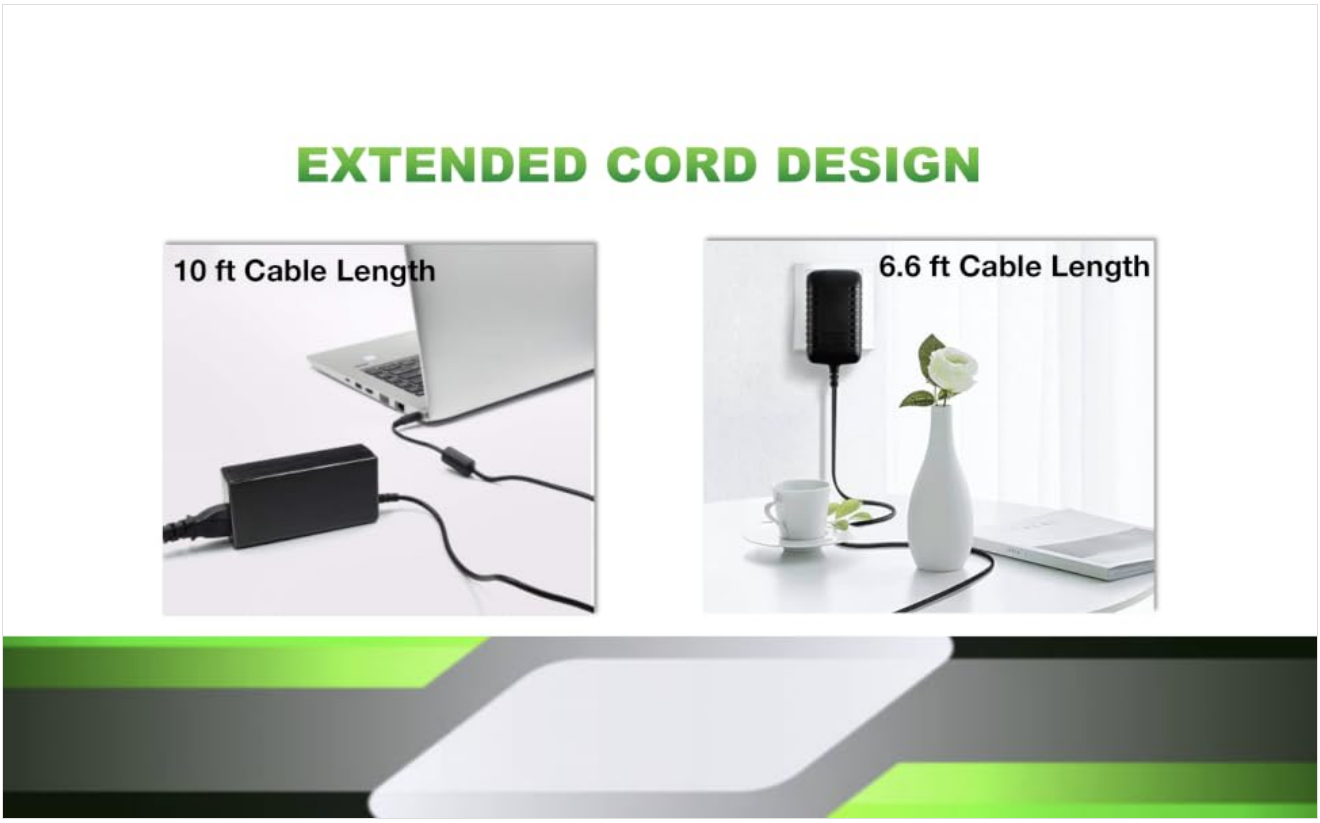


Image: This image illustrates the extended cord design, showing examples of a 10 ft cable length (with a laptop) and a 6.6 ft cable length (plugged into a wall outlet).

4. Setup

Follow these steps to set up your onerbl AC/DC Adapter:

1. **Verify Compatibility:** Confirm that your device is the NEQUARE Model N280 cordless stick vacuum cleaner. This adapter is specifically designed for this model.
2. **Inspect Adapter:** Before use, visually inspect the adapter and its cable for any signs of damage. Do not use if damaged.
3. **Connect to Device:** Plug the DC output connector of the adapter securely into the charging port of your NEQUARE N280 vacuum cleaner.
4. **Connect to Power Outlet:** Insert the AC input plug of the adapter into a standard wall power outlet (AC 100-240V, 50/60Hz).
5. **Charging Indication:** Your vacuum cleaner should indicate that it is charging, typically via an LED indicator. Refer to your vacuum cleaner's manual for specific charging indications.



Image: The AC/DC adapter is shown correctly plugged into a standard wall outlet, demonstrating a typical setup scenario.

5. Operating Instructions

Once connected, the adapter will supply power to your NEQUARE N280 vacuum cleaner for charging its internal battery. The adapter is designed for continuous use during charging cycles.

- **Charging:** Allow the vacuum cleaner to charge fully before its first use and whenever the battery is low.
- **Disconnection:** When charging is complete or if the adapter is not in use, unplug the adapter from the wall outlet first, then disconnect it from the vacuum cleaner.
- **Temperature:** The adapter may become warm during operation. This is normal. If it becomes excessively hot, disconnect it immediately and contact support.

6. Maintenance

Proper maintenance ensures the longevity and safe operation of your adapter:

- **Cleaning:** Disconnect the adapter from power before cleaning. Use a soft, dry cloth to wipe the exterior. Do not use liquid cleaners or solvents.
- **Storage:** Store the adapter in a cool, dry place when not in use. Avoid wrapping the cable too tightly around the adapter.
- **Cable Care:** Regularly check the power cord for any cuts, fraying, or damage. Replace the adapter if the cord is compromised.

7. Troubleshooting

If you encounter issues with your adapter, refer to the following common solutions:

Problem	Possible Cause	Solution
Adapter not charging device	No power from outlet; loose connection; damaged adapter/cable; incompatible device.	Check wall outlet with another device. Ensure all connections are secure. Inspect adapter and cable for damage. Confirm device is NEQUARE N280.
Adapter is excessively hot	Poor ventilation; internal fault.	Ensure adapter is in a well-ventilated area. Disconnect immediately and cease use. Contact manufacturer support.
Device not turning on after charging	Battery issue with device; device fault.	This may indicate an issue with the vacuum cleaner's battery or internal components, not the adapter. Refer to your vacuum cleaner's manual.

8. Specifications

- **Input:** AC 100-240V, 50/60Hz (Worldwide AC Input)
- **Output:** 29.6V DC, 2.5Ah (2500mAh)
- **Wattage:** 280W
- **Compatible Devices:** NEQUARE Model N280 Cordless Stick Vacuum Cleaner
- **Special Features:** Over Voltage Protection, Over Heat Protection, Short-Circuit Protection, Over-Current Protection
- **Cable Length:** Approximately 6.6 ft (76 inches)
- **Item Weight:** 8 ounces
- **Manufacturer:** Shenzhen Waweis Technology Co., Ltd

9. Warranty and Support

This onerbl AC/DC Adapter comes with a standard warranty against manufacturing defects. For specific warranty details, return policies, or technical support, please refer to the product packaging or contact the seller directly through your purchase platform. Please have your purchase information readily available when contacting support.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0C9GMTLN6

More documents and user manuals: **https://manuals.plus/**