Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

onerbl TK3802

onerbl 16.8V AC/DC Adapter for LifePro Sonic TK3802 Massage Gun - Instruction Manual

Introduction

This instruction manual provides important information regarding the safe and proper use of your onerbl 16.8V AC/DC Adapter. This adapter is designed as a replacement power supply for devices requiring a 16.8V DC input, such as the LifePro Sonic LPSNC-BLU TK3802 Handheld Percussion Massage Gun. Please read this manual thoroughly before use and retain it for future reference.



Image: Front and side view of the onerbl 16.8V AC/DC Adapter, showing the two-prong plug and the adapter body with ventilation grooves.

Safety Information

To ensure safe operation and prevent damage, observe the following safety precautions:

- Use this adapter only with devices that specify a 16.8V DC input and compatible connector. Using it with incompatible devices may cause damage or malfunction.
- Ensure the adapter is connected to a properly grounded AC outlet (100-240V, 50/60Hz).
- Do not expose the adapter to water, moisture, or extreme temperatures.
- Avoid dropping or subjecting the adapter to strong impacts.
- Do not attempt to open, modify, or repair the adapter. Refer servicing to qualified personnel.
- Keep the adapter away from children and pets.
- Unplug the adapter from the power outlet when not in use for extended periods.
- If the adapter shows signs of damage (e.g., frayed cord, cracked casing), discontinue use immediately.



Image: The adapter features built-in protections against short-circuit, over-voltage, and over-current to safeguard connected devices and the power supply itself.

Product Features

- **Universal Input:** AC 100-240V, 50/60Hz, suitable for worldwide use.
- **Output:** 16.8V DC.
- **Safety Protections:** Includes over-voltage protection, over-heat protection, short-circuit protection, and over-current protection.
- **Durable Design:** Constructed with quality materials for reliable performance.



Image: Illustration of the power cord's internal structure, highlighting the copper wire and PVC jacket for durability and efficient power transmission.

Setup and Installation

1. **Verify Compatibility:** Before connecting, ensure your device requires a 16.8V DC input and has a compatible power port. This adapter is specifically designed for the LifePro Sonic LPSNC-BLU TK3802 Handheld Percussion Massage Gun.
2. **Connect to Device:** Insert the DC output plug of the adapter firmly into the power input port of your device.
3. **Connect to Power Outlet:** Plug the AC input prongs of the adapter into a standard wall outlet (100-240V AC).
4. **Power On Device:** Once connected, you can power on your device as usual.



Image: The AC adapter is shown connected to a power strip, illustrating a typical setup for charging or powering a compatible electronic device.

Operating Instructions

The onerbl 16.8V AC/DC Adapter operates automatically once connected. It provides a stable 16.8V DC output to your compatible device. There are no user-adjustable settings on the adapter itself.

- Ensure the adapter is securely plugged into both the wall outlet and your device.
- Monitor your device's charging indicator (if applicable) to confirm it is receiving power.
- Disconnect the adapter by first unplugging it from the wall outlet, then from your device.



Image: This adapter is suitable for a wide range of applications, including powering various electronic devices such as routers, cameras, and other small appliances requiring 16.8V DC.

Maintenance

Proper maintenance ensures the longevity and safe operation of your adapter:

- **Cleaning:** Disconnect the adapter from all power sources before cleaning. Use a soft, dry cloth to wipe the exterior. Do not use liquid cleaners or solvents.
- **Storage:** Store the adapter in a cool, dry place away from direct sunlight and extreme temperatures. Avoid tightly coiling the cable to prevent damage.
- **Inspection:** Periodically inspect the cable and adapter casing for any signs of wear, cuts, or damage. If damage is observed, discontinue use.

Troubleshooting

If you encounter issues with your adapter, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device not receiving power.	Adapter not fully plugged in. Wall outlet is not active. Device power port issue. Adapter is faulty.	Ensure both ends of the adapter are securely connected. Test the wall outlet with another device. Check the device's power port for damage. If other solutions fail, the adapter may need replacement.

Problem	Possible Cause	Solution
Adapter feels excessively hot.	Overload or ventilation issue. Internal fault.	Disconnect immediately. Ensure the adapter is not covered and has adequate airflow. Discontinue use and replace if overheating persists.
Sparking when plugging in.	Normal inrush current (small spark). Faulty outlet or adapter.	A small, brief spark is normal. If sparking is continuous, loud, or accompanied by smoke, unplug immediately and do not use.

SPECIFICATIONS

Brand	onerbl
Model Number	TK3802
Input	AC 100-240V, 50/60Hz
Output	DC 16.8V
Color	Black
Connector Type	AC input (US 2-prong plug)
Cable Length	Approximately 76 inches (6.33 feet)
Item Weight	8 ounces
Manufacturer	Shenzhen Waweis Technology Co., Ltd

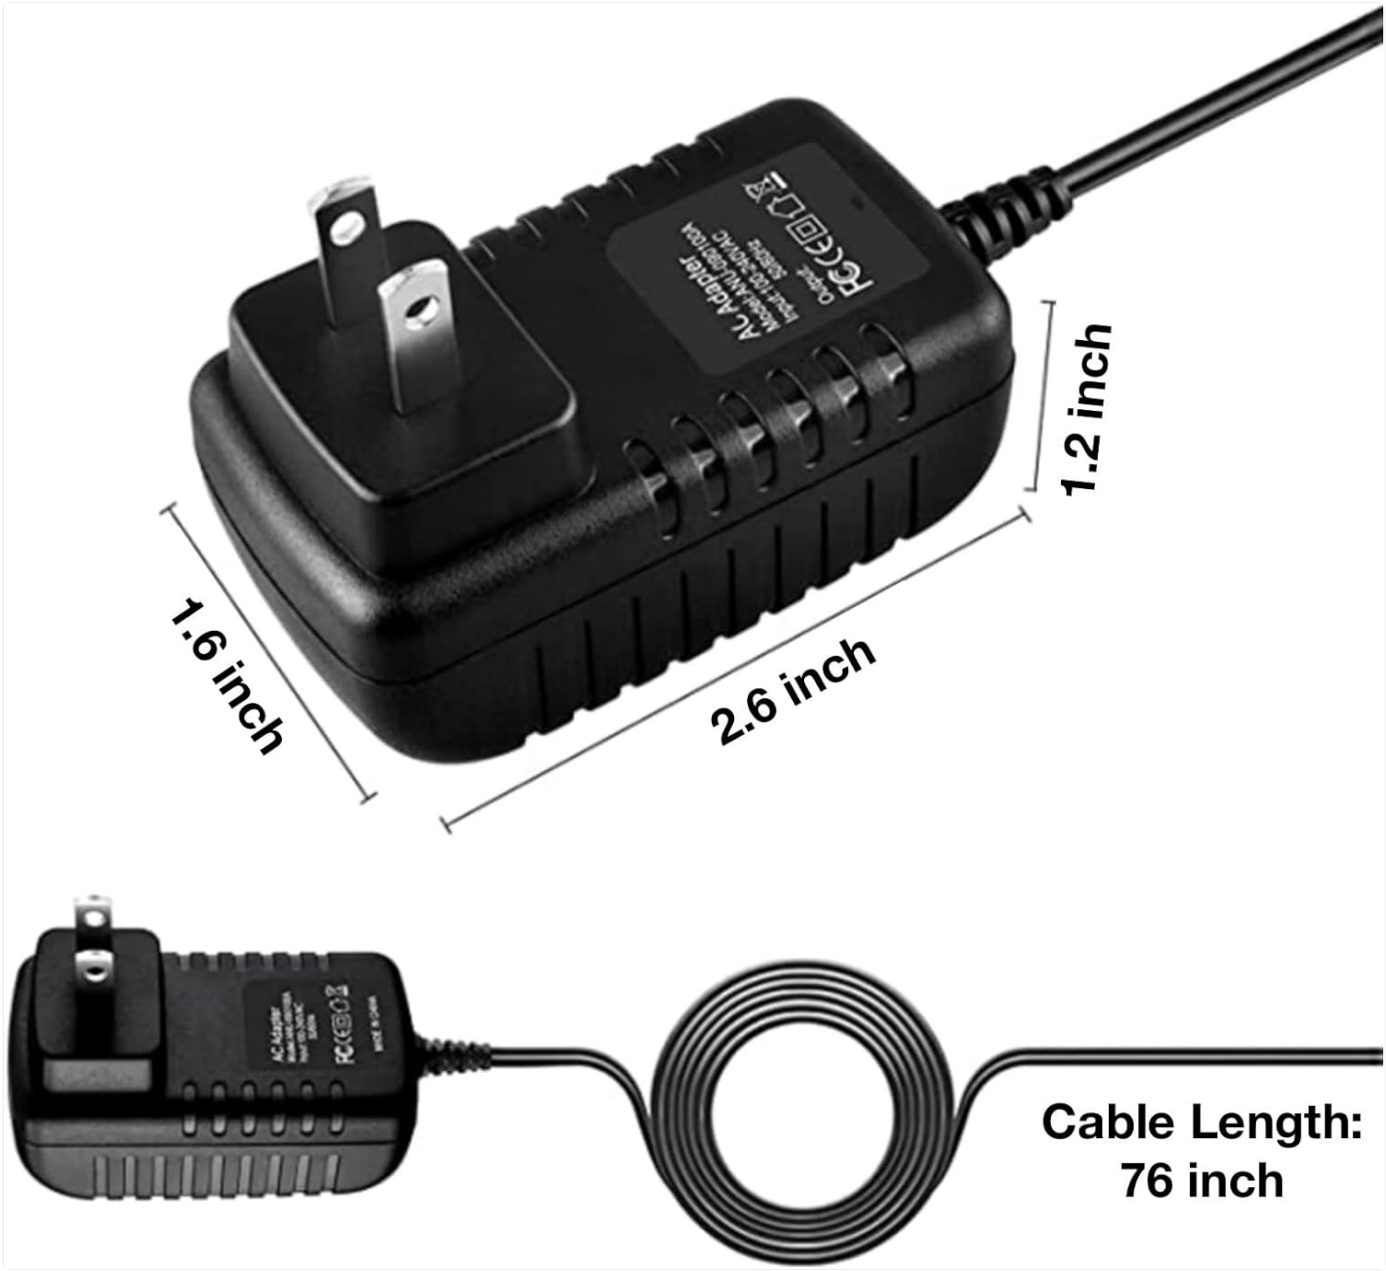


Image: Detailed dimensions of the adapter body and the cable length, which is approximately 76 inches.

Warranty and Support

For warranty information or technical support, please refer to the seller's policies on the platform where the product was purchased. Keep your purchase receipt as proof of purchase.

For general inquiries or assistance, you may contact the manufacturer, Shenzhen Waweis Technology Co., Ltd, or the brand onerbl, through their official support channels if available.

© 2023 onerbl. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0C9GMTLP4

More documents and user manuals: **https://manuals.plus/**