1PLUS S10

1PLUS S10 Electric Scooter User Manual

Model: S10

Important Safety Information

Before operating your 1PLUS S10 Electric Scooter, please read this manual thoroughly to ensure safe and proper use. Failure to follow these instructions may result in serious injury or damage to the scooter.

- Always wear a helmet and appropriate safety gear (knee pads, elbow pads) when riding.
- Do not ride in wet conditions, heavy rain, or through puddles.
- Ensure all bolts and fasteners are tightened before each ride.
- Observe local traffic laws and regulations.
- Do not allow children under the age of 16 to operate the scooter.
- Avoid riding on steep inclines or uneven terrain.
- Maintain a safe distance from other vehicles and pedestrians.
- Do not perform stunts or sudden maneuvers.

Product Overview

The 1PLUS S10 Electric Scooter is designed for adult commuting, offering a blend of power, portability, and advanced features for an efficient and enjoyable ride.



Image: The 1PLUS S10 Electric Scooter, showcasing its sleek design and the accompanying mobile application interface on a smartphone.

Key Features

- **Powerful Motor:** Upgraded 600W electric brushless motor for speeds up to 19mph.
- **Long Range Battery:** Max travel range of up to 20 miles under specific conditions.
- **Portable & Folding Design:** One-step folding system for easy portability and storage.
- **10-inch Solid Tires:** Designed for convenience and comfort, requiring no inflation or maintenance.
- **Innovative Technology:** Ultra-bright LED display, Bluetooth capabilities, cruise control, and smart mobile app connectivity.
- **Double Braking System:** Features a disc braking and eABS regenerative anti-lock braking for enhanced safety.

Package Contents

Please check the box for the following items:

- 1PLUS S10 Electric Scooter
- Power Adapter/Charger
- User Manual
- Assembly Tools (if required)

If any items are missing or damaged, please contact customer support immediately.

Setup Guide

1. Unfolding the Scooter

1. Place the scooter on a flat surface.
2. Locate the folding mechanism near the base of the handlebar stem.
3. Release the latch and carefully lift the handlebar stem until it locks into the upright position. Ensure it clicks securely.

2. Handlebar Assembly

1. Attach the handlebars to the stem, ensuring the cables are not pinched.
2. Tighten the screws firmly using the provided tools.

3. Initial Charging

1. Before first use, fully charge the scooter's battery.
2. Connect the charger to the charging port on the scooter and then to a power outlet.
3. The charging indicator light will change when fully charged (approx. 5 hours).

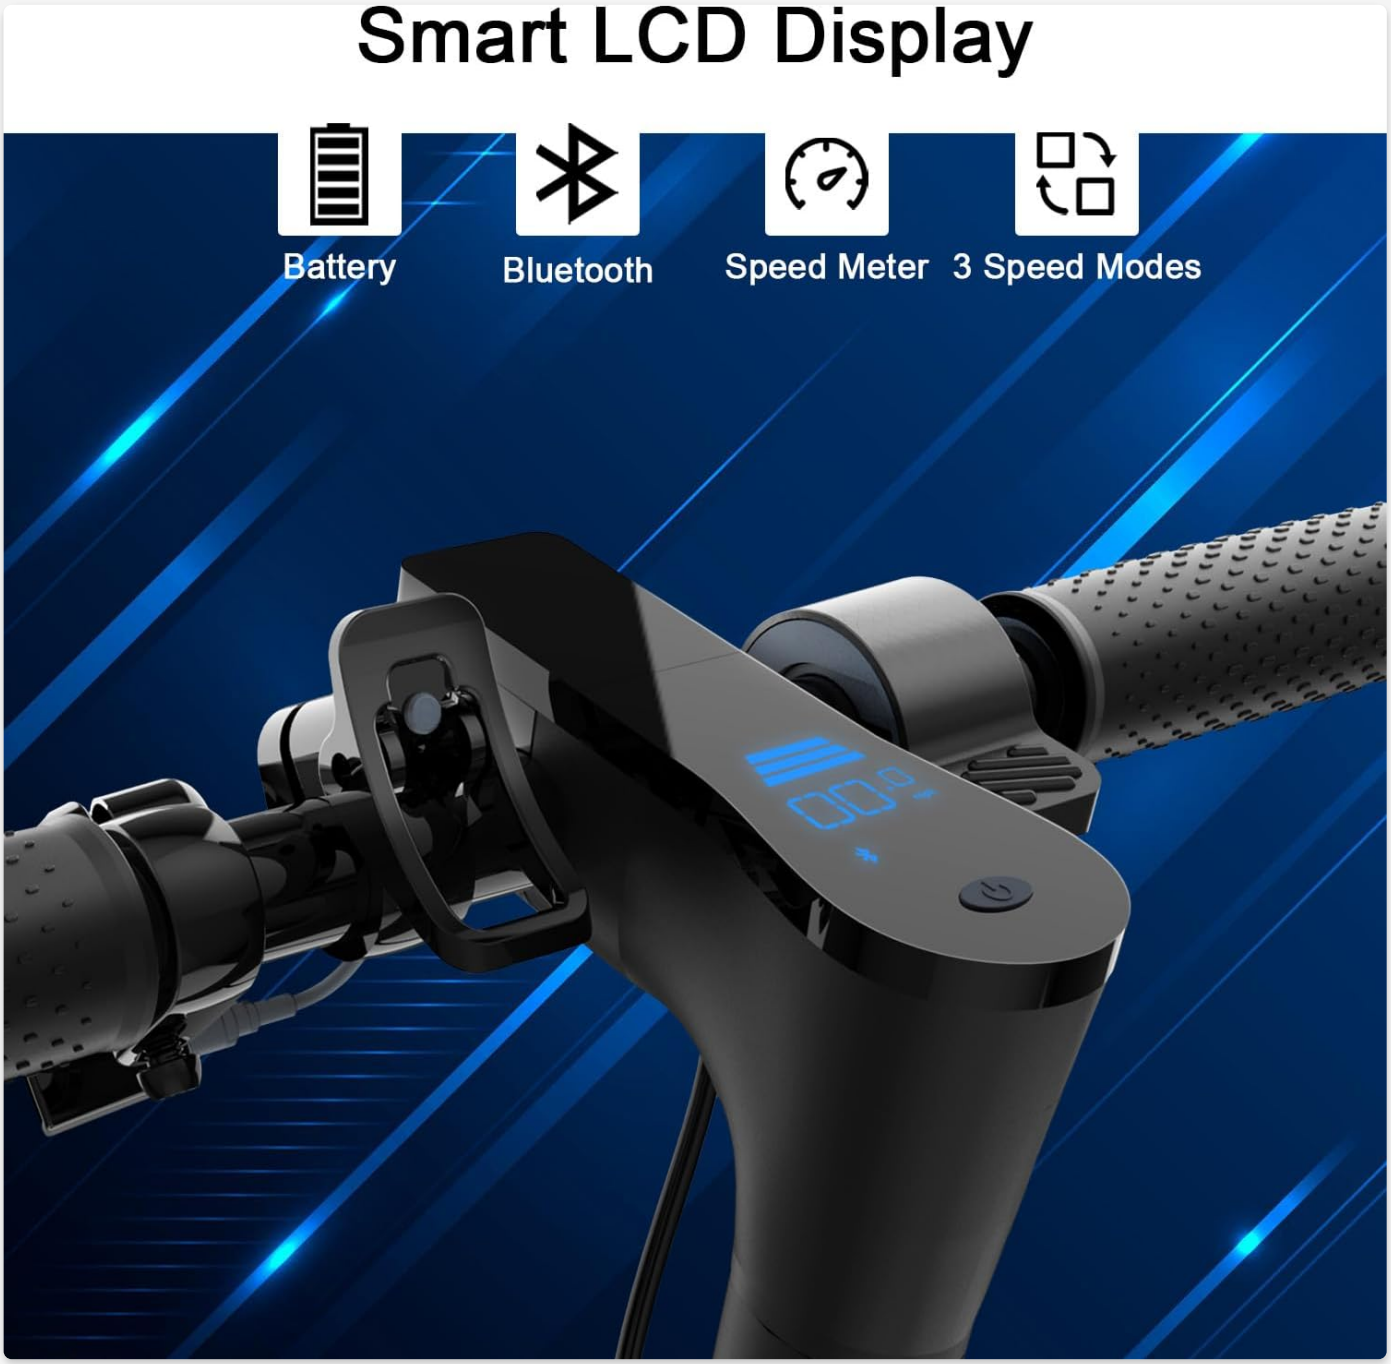


Image: A person demonstrating the unfolding process of the 1PLUS S10 Electric Scooter, highlighting its portable design.

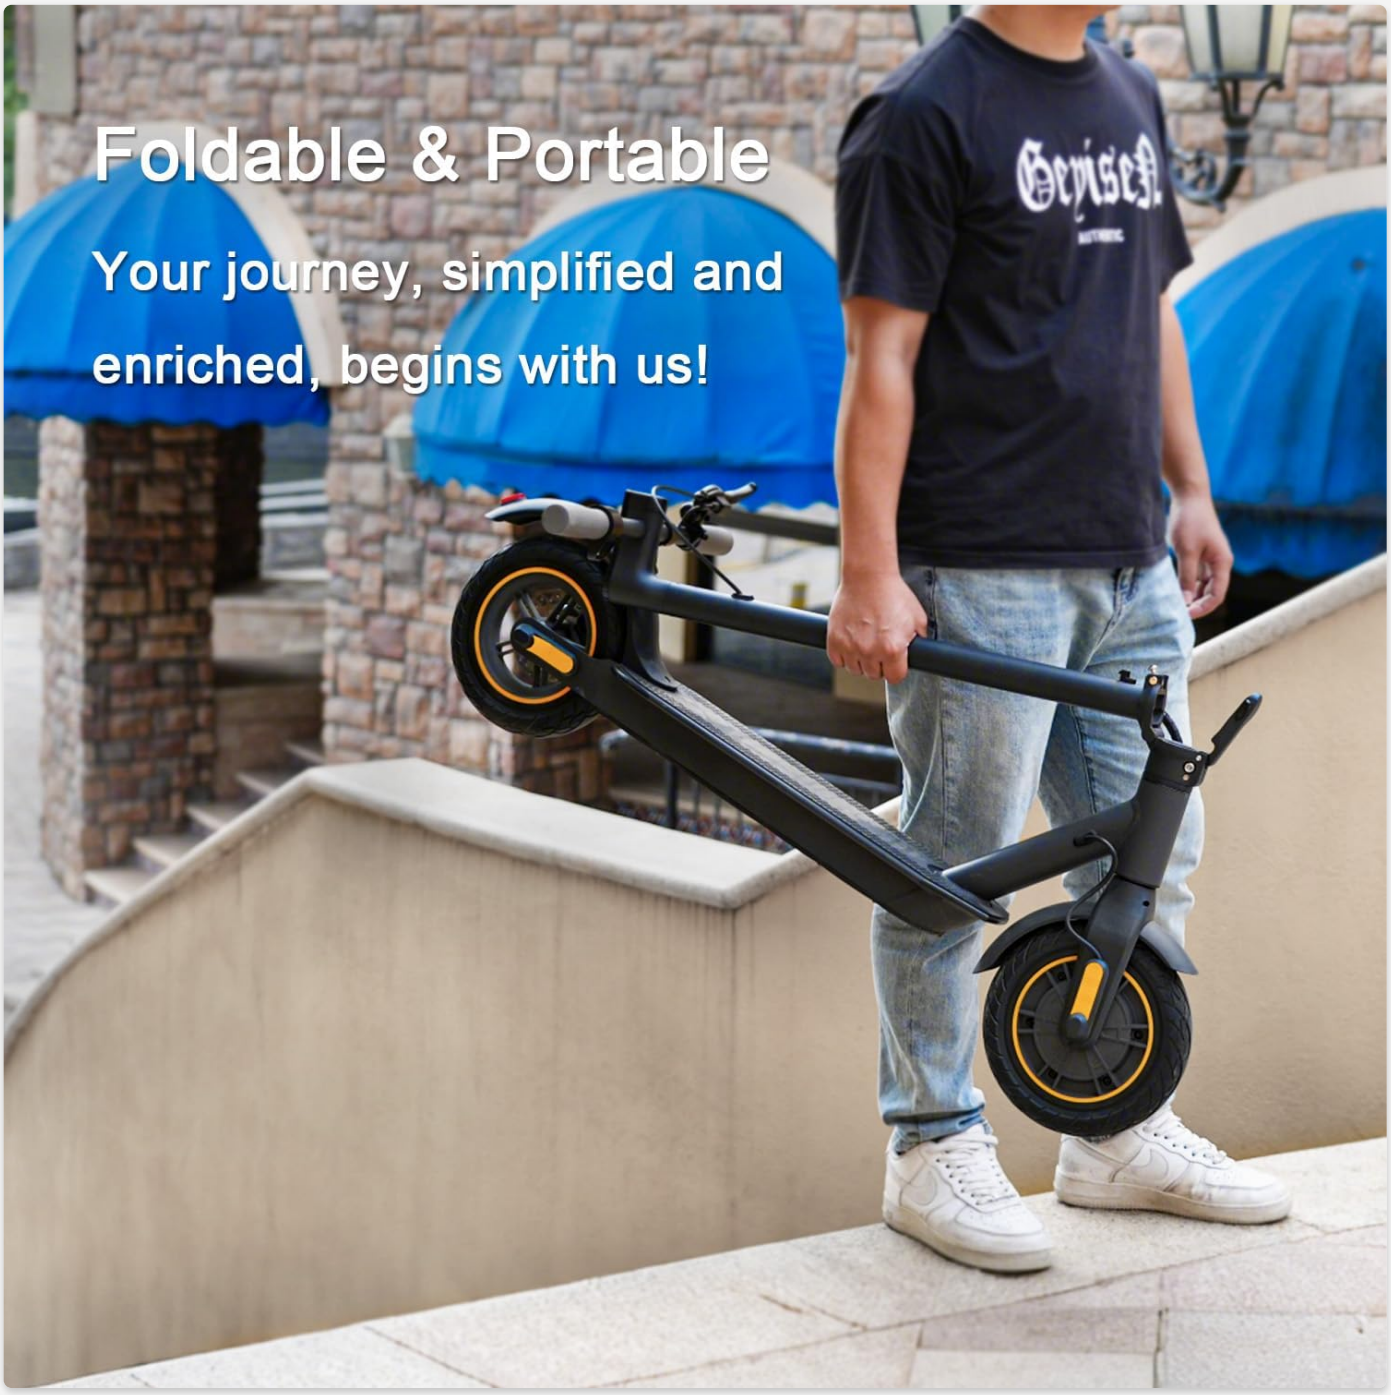


Image: A person easily carrying the 1PLUS S10 Electric Scooter in its folded state, emphasizing its portability for transport.

Operating Instructions

1. Powering On/Off

- To power on, press and hold the power button on the display until the screen illuminates.
- To power off, press and hold the power button again until the display turns off.

2. Riding Modes

- The scooter features multiple riding modes (e.g., Eco, Standard, Sport).
- Press the mode button (refer to display icons) to cycle through available modes.
- Each mode offers different speed and power characteristics.

3. Braking System

- The 1PLUS S10 is equipped with a dual braking system: disc braking and eABS regenerative anti-lock braking.
- To brake, gently squeeze the brake lever on the handlebar. Apply even pressure for smooth deceleration.
- Avoid sudden or harsh braking, especially at high speeds.

4. Using the Mobile App

- Download the official 1PLUS app from your smartphone's app store.
- Connect your scooter via Bluetooth as per the app's instructions.
- The app allows you to check battery status, track mileage, activate cruise control, and adjust settings.



Image: Close-up of the 1PLUS S10 Electric Scooter's smart LCD display and a smartphone screen showing the connected mobile app, indicating battery, range, and control options.



Image: A person riding the 1PLUS S10 Electric Scooter, demonstrating the auto headlights and taillights for visibility in low-light conditions.

Maintenance

1. Tire Care (Solid Tires)

- The 1PLUS S10 features solid tires, eliminating the need for inflation or puncture repairs.
- Regularly inspect tires for any signs of wear, cracks, or embedded debris.
- Clean the tires periodically to remove dirt and grime.

2. Battery Maintenance

- Charge the battery fully after each use, especially if storing for extended periods.
- Avoid completely draining the battery, as this can reduce its lifespan.

- Store the scooter in a cool, dry place away from direct sunlight and extreme temperatures.

3. Cleaning and Storage

- Wipe down the scooter with a damp cloth. Do not use high-pressure water or immerse the scooter in water.
- For stubborn dirt, use a mild detergent.
- When storing, ensure the scooter is clean and dry. Fold it for compact storage.



Image: A detailed view of the 1PLUS S10 Electric Scooter's 600W motor and solid rear wheel, illustrating its robust construction.

Troubleshooting

Refer to the table below for common issues and their solutions.

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Scooter does not power on	Low battery; Loose connections; Power button malfunction	Charge the battery; Check all cable connections; Contact support if issue persists
Reduced range/speed	Low battery; Overload; Riding uphill; Extreme temperatures	Fully charge battery; Ensure rider weight is within limits; Avoid steep inclines; Ride in moderate temperatures
Brakes feel loose/tight	Brake cable adjustment needed; Worn brake pads	Adjust brake cable tension; Inspect and replace brake pads if worn (contact support for guidance)
Unusual noises during operation	Loose components; Debris in wheels/motor	Inspect all parts for looseness and tighten; Check wheels and motor for obstructions; Contact support if noise persists

Specifications

Detailed technical specifications for the 1PLUS S10 Electric Scooter:

Feature	Specification
Brand	1PLUS
Model Name	S10
Motor Power	600W Peak
Max Speed	Up to 19 mph
Max Range	Up to 20 miles
Tire Type	10-inch Solid Tires
Weight Limit	220 Pounds
Product Dimensions	42"L x 5.9"W x 20"H
Charging Time	Approx. 5 Hours
Braking System	Dual Braking (Disc & eABS Regenerative)
Frame Material	Aluminum

Warranty and Support

Warranty Information

The 1PLUS S10 Electric Scooter comes with a 2-year manufacturer warranty. Please refer to the specific warranty details provided with your purchase for terms and conditions regarding different parts.

Customer Support

For technical assistance, warranty claims, or any questions regarding your 1PLUS S10 Electric Scooter, please contact our customer support team. Refer to the contact information provided on the product packaging or our official website.

© 2025 1PLUS. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question