Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ALLIMITY CV-MW732-SH

ALLIMITY Replacement Remote Control User Manual

For BENQ Projectors: MX731, MW732, MH733, MW727, MX808ST, MW809ST, DX808ST, DX825ST, DX826ST, MX825ST

1. Introduction

This user manual provides comprehensive instructions for the ALLIMITY Replacement Remote Control, designed specifically for a range of BENQ Projector models. This remote serves as a direct replacement for your original or broken remote, offering seamless functionality without the need for complex setup or programming.
The remote control is compatible with the following BENQ Projector models:**MX731, MW732, MH733, MW727, MX808ST, MW809ST, DX808ST, DX825ST, DX826ST, MW826ST, MX825ST**.



Figure 1: Front view of the ALLIMITY Replacement Remote Control.

2. Setup and First Use

The ALLIMITY Replacement Remote Control is designed for immediate use. No programming or pairing is required. Simply install the batteries, and the remote will be ready to operate your compatible BENQ Projector.

2.1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two (2) AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover by sliding it back into place until it clicks securely.



Figure 2: Battery compartment with AAA battery insertion guide.

Important: Always use new alkaline batteries for optimal performance. Do not mix old and new batteries, or different types of batteries.

3. Operating the Remote Control

This remote control provides full functionality for your compatible BENQ Projector. Below is a general guide to the common buttons and their functions. Refer to your projector's specific user manual for detailed information on each function.

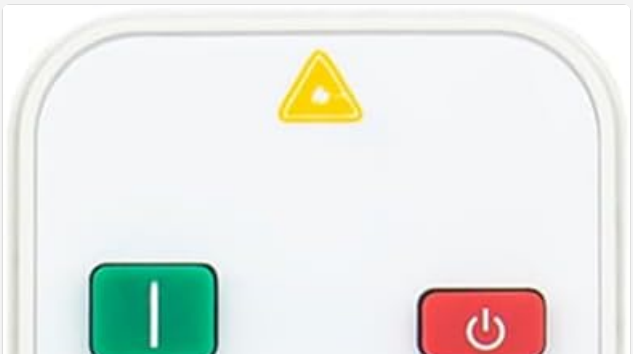




Figure 3: Layout of the remote control buttons.

3.1. Key Functions Overview

- **ON / OFF:** Power buttons to turn the projector on or off.
- **SOURCE:** Cycles through available input sources (e.g., HDMI 1, HDMI 2, PC I, Video, MHL, Network).
- **Navigation Pad (Up, Down, Left, Right, OK):** Used to navigate menus and confirm selections.
- **BACK:** Returns to the previous menu or screen.
- **MENU:** Opens the projector's main menu.
- **AUTO:** Automatically adjusts the image settings.
- **FREEZE:** Pauses the current image display.
- **ECO BLANK:** Activates or deactivates the Eco Blank mode, which dims the lamp to save energy.
- **Media Control Buttons (Play/Pause, Stop, Rewind, Fast Forward, Previous, Next):** For controlling media playback if supported by the projector.
- **ZOOM (+/-):** Adjusts the digital zoom of the projected image.
- **PAGE (Up/Down):** Used for navigating pages in presentations or documents.
- **ASPECT:** Changes the aspect ratio of the projected image.
- **MODE:** Cycles through different display modes.
- **INFO:** Displays information about the current input or projector status.
- **QUICK INSTALL:** Provides quick access to installation settings.
- **SMART ECO:** Activates or deactivates Smart Eco mode for optimized lamp life and energy saving.

4. Maintenance and Care

To ensure the longevity and proper functioning of your remote control, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the remote control with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Drops:** Protect the remote from physical impact. Dropping the remote can damage internal components.

5. Troubleshooting

If you experience issues with your ALLIMITY Replacement Remote Control, please refer to the following common solutions:

Problem	Possible Cause / Solution
Remote is not working.	◦ Check if the batteries are inserted correctly with the correct polarity (+/-). ◦ Replace old batteries with new alkaline batteries. ◦ Ensure there are no obstructions between the remote and the projector's IR receiver. ◦ Confirm the remote is pointed directly at the projector's IR receiver.

Problem	Possible Cause / Solution
Some buttons are not responding.	◦ This remote is a replacement and may not support all functions of your original remote if your projector model has unique features. ◦ Ensure the batteries have sufficient power. ◦ Clean the remote's surface and buttons to remove any dirt or debris that might be obstructing button presses.
Remote works intermittently.	◦ Batteries may be low. Replace them. ◦ Ensure a clear line of sight to the projector. ◦ Avoid strong light sources (e.g., direct sunlight, fluorescent lights) that might interfere with the IR signal.

6. Product Specifications

Feature	Detail
Brand	ALLIMITY
Model Number	CV-MW732-SH
Compatible Projector Models	MX731, MW732, MH733, MW727, MX808ST, MW809ST, DX808ST, DX825ST, DX826ST, MW826ST, MX825ST
Product Dimensions	6.5 x 1.38 x 0.72 inches
Item Weight	1.59 ounces
Color	White
Special Feature	No Programming Required
Max Number of Supported Devices	13 (referring to compatible projector models)
Power Source	2 x AAA Batteries (not included)

7. Warranty and Support

For information regarding warranty coverage, returns, or technical support, please contact the seller or manufacturer directly through the platform where the product was purchased. Keep your purchase receipt as proof of purchase.
For general inquiries or further assistance, you may visit the ALLIMITY brand page or contact their customer service if available.

© 2023 ALLIMITY. All rights reserved. Product specifications are subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0C9QHV96W

More documents and user manuals: **https://manuals.plus/**