HomeSpot HS-JQ290N

HomeSpot True Wireless Earbuds User Manual

Model: HS-JQ290N

Introduction

Thank you for choosing HomeSpot True Wireless Earbuds. These earbuds are designed to provide an immersive audio experience with advanced Active Noise Cancellation (ANC) technology, intuitive touch controls, and extended battery life. This manual will guide you through the setup, operation, and maintenance of your new earbuds to ensure optimal performance and longevity.

Safety Information

Please read all safety warnings and instructions carefully before using this product. Keep this manual for future reference.

- Do not expose the earbuds or charging case to extreme temperatures, humidity, or liquids.
- Avoid dropping, impacting, or disassembling the device.
- Do not use abrasive cleaners or harsh chemicals to clean the earbuds or case.
- Prolonged exposure to loud volume levels may cause hearing damage. Adjust volume to a safe level.
- Keep out of reach of children and pets.

Package Contents

Verify that all items are present in your package:

- HomeSpot True Wireless Earbuds (Left and Right)
- Charging Case
- USB Charging Cable (Type-C)
- User Manual
- Multiple sizes of ear tips (S, M, L)

Product Overview



Figure 1: HomeSpot True Wireless Earbuds and Charging Case. The charging case features a digital display indicating battery levels for both the case and individual earbuds.

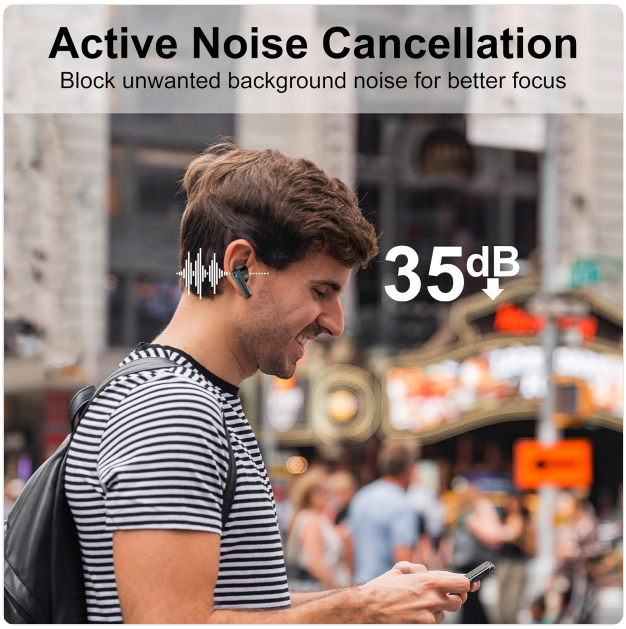


Figure 2: Active Noise Cancellation (ANC) feature. These earbuds can block out unwanted background noise up to -35dB, enhancing your listening experience.



Figure 3: Extended Battery Life. Enjoy over 7 hours of playtime with ANC off, and over 4 hours with ANC on. The charging case extends total playtime up to 30+ hours.



Figure 4: Internal Components. Featuring Bluetooth 5.3 technology and 13mm dynamic drivers for supreme sound quality and stable connectivity.

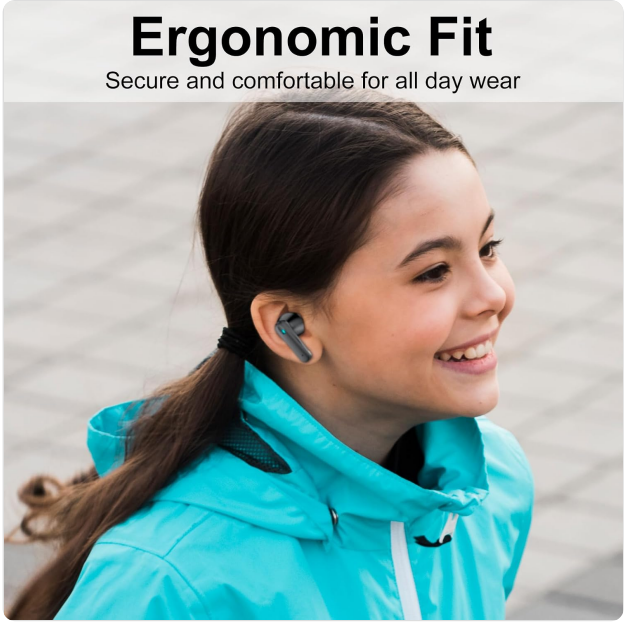


Figure 5: Ergonomic Fit. The earbuds are designed for secure and comfortable wear, suitable for all-day use.

Setup

1. Charging the Earbuds and Case

Before first use, fully charge the earbuds and the charging case.

1. Place the earbuds into the charging case. Ensure they are correctly seated; magnetic contacts will hold them in place.
2. Connect the USB-C charging cable to the charging port on the case and the other end to a USB power adapter (not included) or a computer's USB port.
3. The digital display on the charging case will show the battery percentage of the case and the charging status of each earbud.
4. A full charge typically takes approximately 2 hours for the case and earbuds.

2. Bluetooth Pairing

Pair your HomeSpot True Wireless Earbuds with your device (smartphone, tablet, computer, etc.) for the first time.

1. Ensure the earbuds are charged and inside the charging case.
2. Open the charging case lid. The earbuds will automatically enter pairing mode, indicated by a flashing LED light on the earbuds.
3. On your device, go to the Bluetooth settings and turn Bluetooth on.
4. Search for available devices. Select "HomeSpot Earbuds" (or similar name) from the list.
5. Once connected, the earbud LED lights will turn off or show a steady light, and your device will confirm the connection.
6. For subsequent uses, the earbuds will automatically connect to the last paired device when removed from the case, provided Bluetooth is enabled on the device.

Operating Instructions

Power On/Off

- **Power On:** Open the charging case lid, or take the earbuds out of the case. They will power on automatically.

- **Power Off:** Place the earbuds back into the charging case and close the lid. They will power off automatically and begin charging.

Active Noise Cancellation (ANC) / Ambient Mode

The earbuds feature Active Noise Cancellation to reduce ambient noise and an Ambient mode to allow you to hear your surroundings.

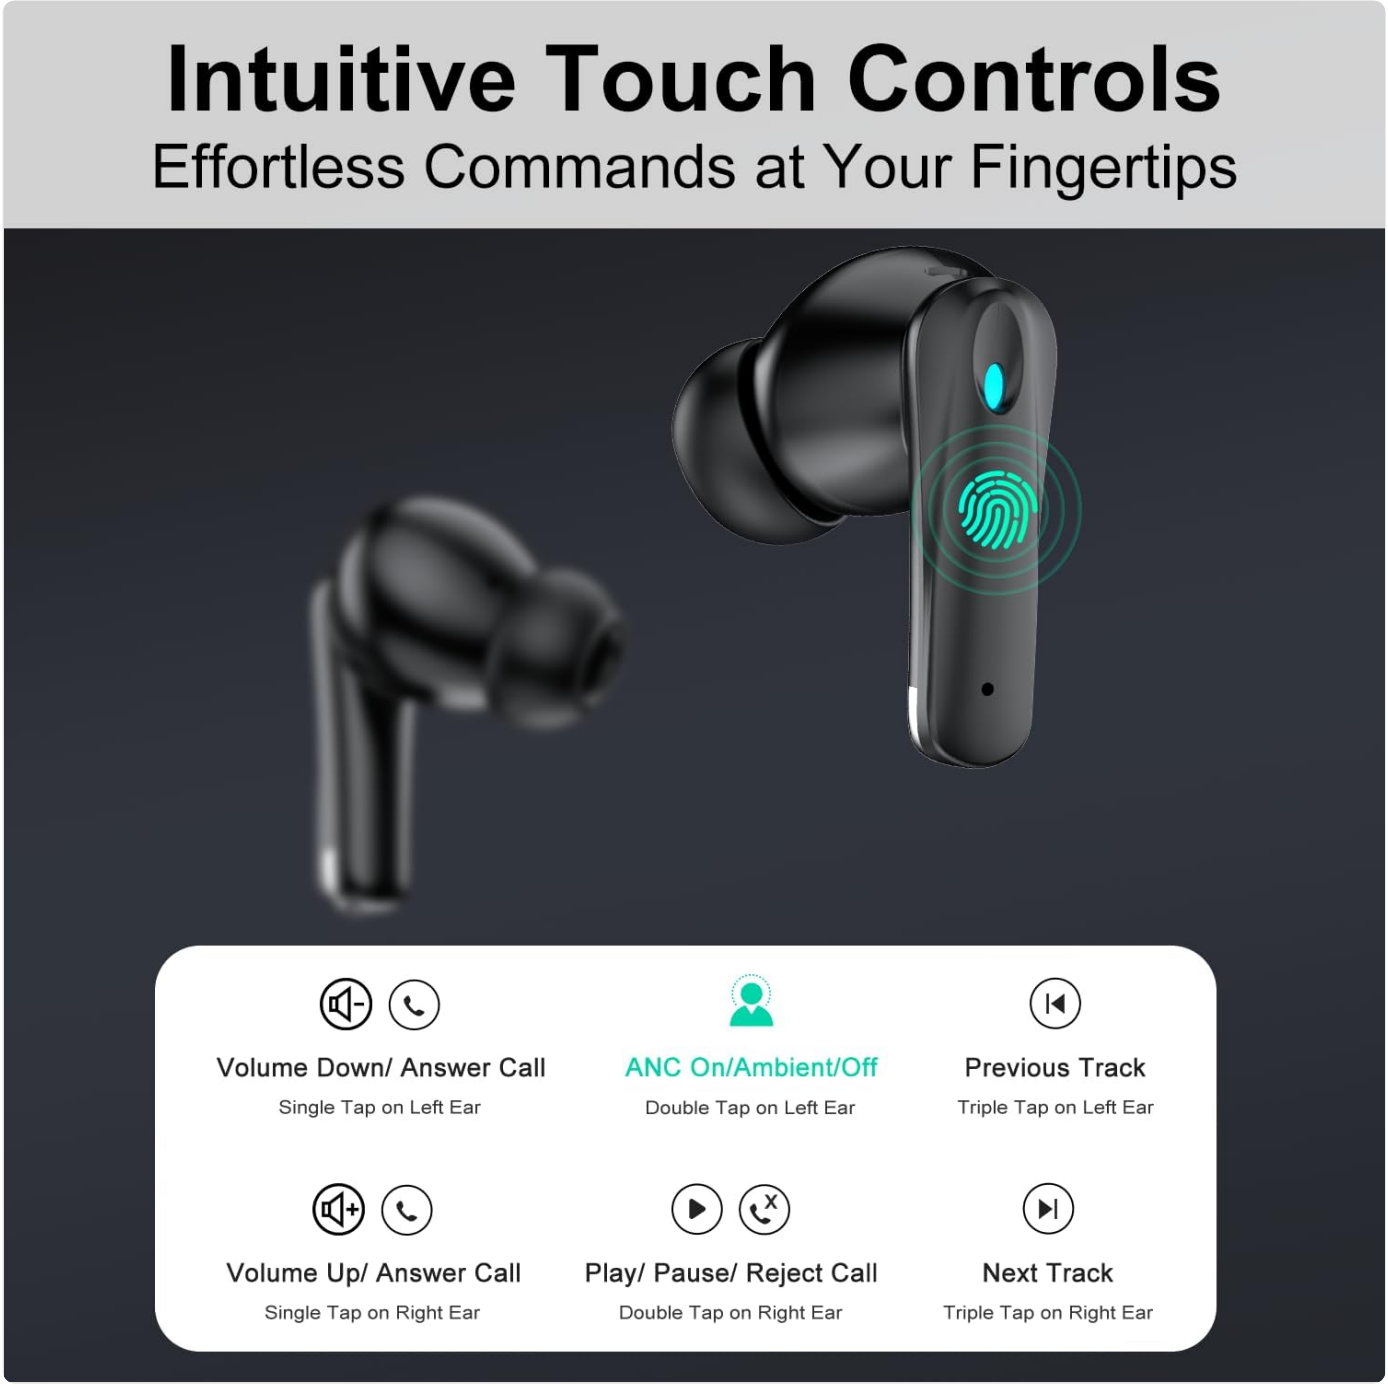


Figure 6: Intuitive Touch Controls. Effortlessly manage your audio experience with simple taps.

- **Toggle ANC/Ambient Modes:** Double tap the **Left Earbud**. Cycle through ANC On, Ambient Mode, and ANC Off.

Touch Controls

The earbuds are equipped with intuitive touch controls for easy management of music playback and calls.

Action	Left Earbud	Right Earbud

Action	Left Earbud	Right Earbud
Play/Pause Music	Double Tap	Double Tap
Volume Down	Single Tap	N/A
Volume Up	N/A	Single Tap
Next Track	N/A	Triple Tap
Previous Track	Triple Tap	N/A
Answer/End Call	Single Tap	Single Tap
Reject Call	Double Tap	Double Tap
Activate Voice Assistant	Long Press (2 seconds)	Long Press (2 seconds)

Maintenance

Proper maintenance ensures the longevity and performance of your earbuds.

- **Cleaning:** Regularly clean the earbuds, ear tips, and charging contacts with a soft, dry, lint-free cloth. For earwax buildup, gently use a small brush or cotton swab. Do not use liquids or sprays.
- **Storage:** When not in use, always store the earbuds in their charging case to protect them from dust, damage, and to keep them charged.
- **Battery Care:** Avoid fully discharging the battery frequently. For long-term storage, charge the case and earbuds to about 50% every few months.
- **Water Resistance:** The earbuds are water resistant, but not waterproof. Avoid submerging them in water or exposing them to heavy rain. Dry them thoroughly if they get wet before placing them back in the charging case.

Troubleshooting

If you encounter issues with your HomeSpot True Wireless Earbuds, refer to the following common problems and solutions:

Problem	Possible Solution
Earbuds not pairing or connecting.	◦ Ensure Bluetooth is enabled on your device. ◦ Make sure the earbuds are charged and out of the case. ◦ Forget "HomeSpot Earbuds" from your device's Bluetooth list and try pairing again. ◦ Restart your device and the earbuds (by placing them back in the case and taking them out). ◦ Ensure no other Bluetooth devices are interfering.

Problem	Possible Solution
Only one earbud is working.	◦ Place both earbuds back into the charging case, close the lid, wait a few seconds, then open the lid and take them out. ◦ Ensure both earbuds are charged. ◦ Perform a factory reset (refer to specific instructions if available, otherwise try long-pressing touch controls while in case).
Low volume or poor sound quality.	◦ Adjust the volume on both your device and the earbuds. ◦ Ensure ear tips are properly sealed in your ear canal. Try different sizes. ◦ Clean any debris from the earbud speaker mesh. ◦ Ensure the earbuds are within Bluetooth range (10 meters) of your device.
Charging case not charging.	◦ Check the USB-C cable and power adapter. Try a different cable or adapter. ◦ Ensure the charging port on the case is clean and free of debris.

Specifications

Feature	Detail
Model Name	HS-JQ290N
Connectivity Technology	Wireless (Bluetooth)
Bluetooth Version	5.3
Bluetooth Range	Up to 10 meters (33 feet)
Noise Control	Active Noise Cancellation (ANC)
Audio Driver Size	13 Millimeters Dynamic Driver
Frequency Range	20 Hz to 20,000 Hz
Impedance	32 Ohm
Audio Latency	40 Milliseconds
Earbud Battery Life	Over 7 hours (ANC off), Over 4 hours (ANC on)
Total Playback Time (with case)	Up to 30+ hours
Charging Case Battery Capacity	400 Milliamp Hours
Charging Time	Approx. 2 Hours (Earbuds & Case)
Control Method	Touch Control
Water Resistance Level	Water Resistant
Item Weight	3.2 ounces

Feature	Detail
Included Components	Charging Case

Warranty and Support

Warranty Information

HomeSpot products are designed and manufactured to the highest quality standards. This product is covered by a limited warranty from the date of original purchase. Please refer to the warranty card included in your package or visit the official HomeSpot website for detailed warranty terms and conditions.

Customer Support

For any questions, technical assistance, or warranty claims, please contact HomeSpot customer support. You can find contact information on the official HomeSpot website or through the retailer where you purchased the product.
Website: HomeSpot Official Store on Amazon

© 2024 HomeSpot. All rights reserved.
HomeSpot and the HomeSpot logo are trademarks of HomeSpot.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question