Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Kircuit AC DC Adapter

Kircuit AC DC Adapter User Manual for Sharper Image Infrared Heating Pad SKU 206600-01

Model: AC DC Adapter

1. Introduction

This manual provides essential instructions for the safe and effective use of your Kircuit AC DC Adapter. This adapter is designed to provide reliable power to compatible devices, specifically the Sharper Image Infrared Heating Pad, SKU # 206600-01. Please read this manual thoroughly before use and retain it for future reference.

2. Safety Information

To prevent injury or damage to your device, always observe the following safety precautions:

- Ensure the adapter's voltage and current ratings match the requirements of your device.
- Do not expose the adapter to water, moisture, or extreme temperatures.
- Avoid dropping or subjecting the adapter to strong impacts.
- Do not attempt to open or modify the adapter. Refer all servicing to qualified personnel.
- Unplug the adapter from the power outlet when not in use for extended periods.
- Keep out of reach of children.

3. Package Contents

Verify that all items are present in your package:

- 1 x Kircuit AC DC Adapter
- 2 x Power Cords (one for AC input, one for DC output)



Figure 3.1: The Kircuit AC DC Adapter shown with its two accompanying power cords. One cord connects the adapter to the wall outlet, and the other connects the adapter to the compatible device.

4. Setup

1. **Connect the AC Power Cord:** Take the power cord with the two-prong AC plug and the C7 connector. Insert the C7 connector into the AC input port on the Kircuit AC DC Adapter.

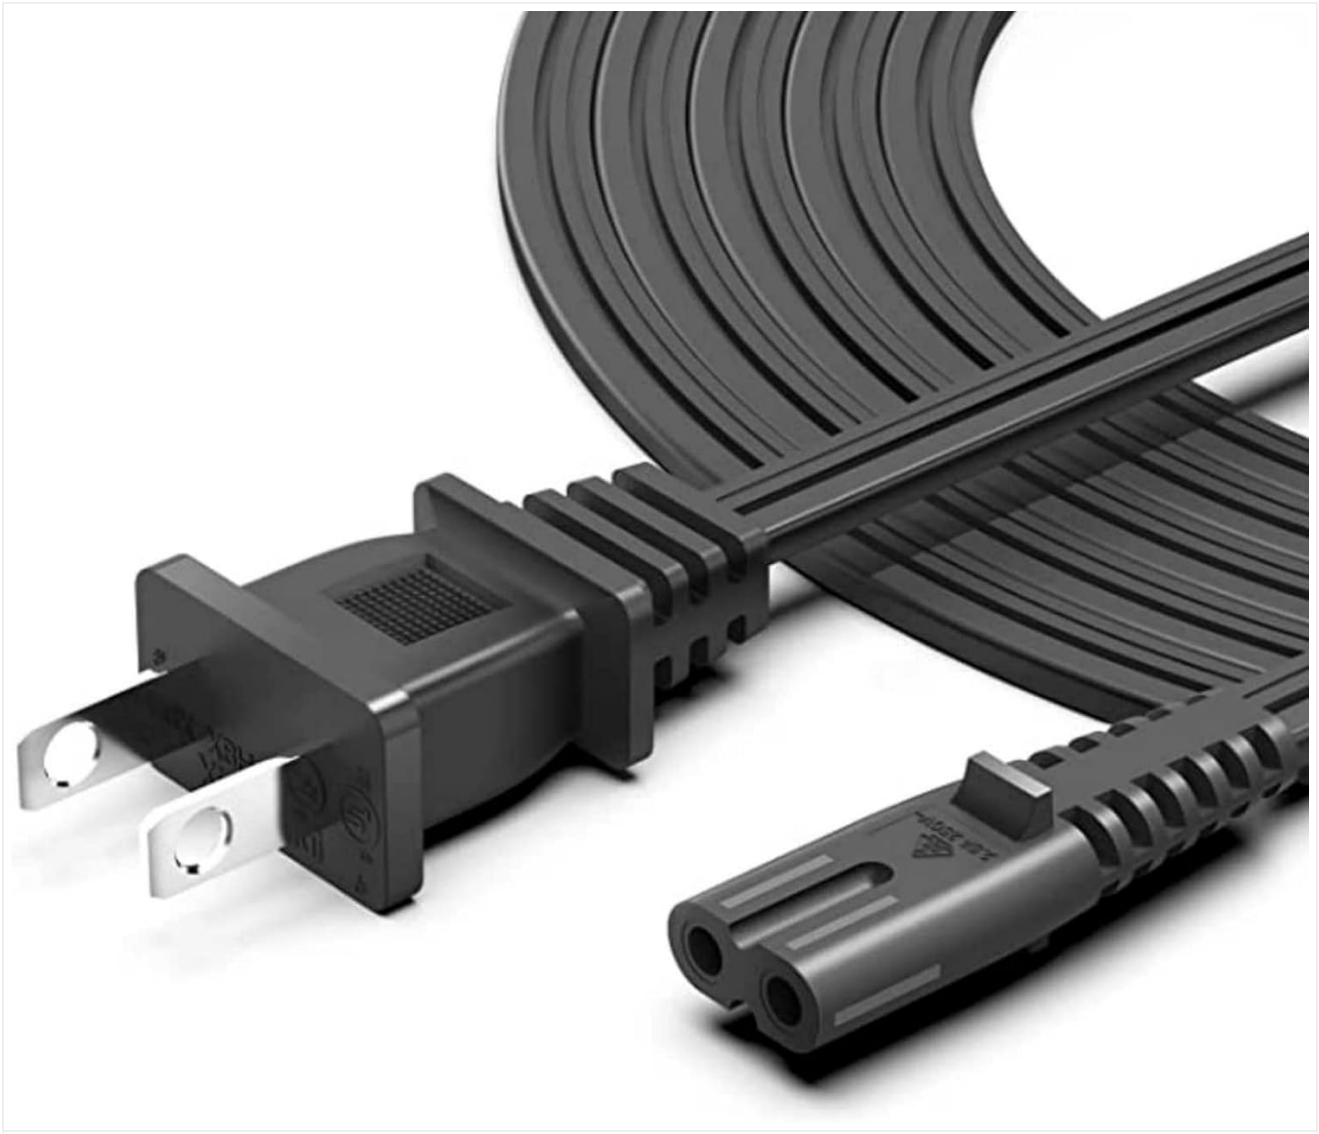


Figure 4.1: Detail of the AC power cord, showing the two-prong plug and the C7 connector for the adapter's input.

2. **Connect the DC Output Cord:** Take the power cord with the DC barrel connector. Insert the DC barrel connector into the DC output port on the Kircuit AC DC Adapter.
3. **Connect to Device:** Insert the other end of the DC output cord (the DC barrel connector) into the power input port of your Sharper Image Infrared Heating Pad (SKU # 206600-01).
4. **Plug into Wall Outlet:** Insert the two-prong AC plug into a standard electrical wall outlet (100V-240V AC).



Figure 4.2: The adapter in operation, connected to a wall outlet and ready to power a device.

5. Operating

Once properly set up, the Kircuit AC DC Adapter will supply power to your Sharper Image Infrared Heating Pad. The adapter is designed for continuous operation within its specified voltage and current limits.

- Ensure all connections are secure before powering on your device.
- A small indicator light on the adapter may illuminate when power is supplied (refer to Figure 5.1).
- Operate your Sharper Image Infrared Heating Pad according to its own instruction manual.

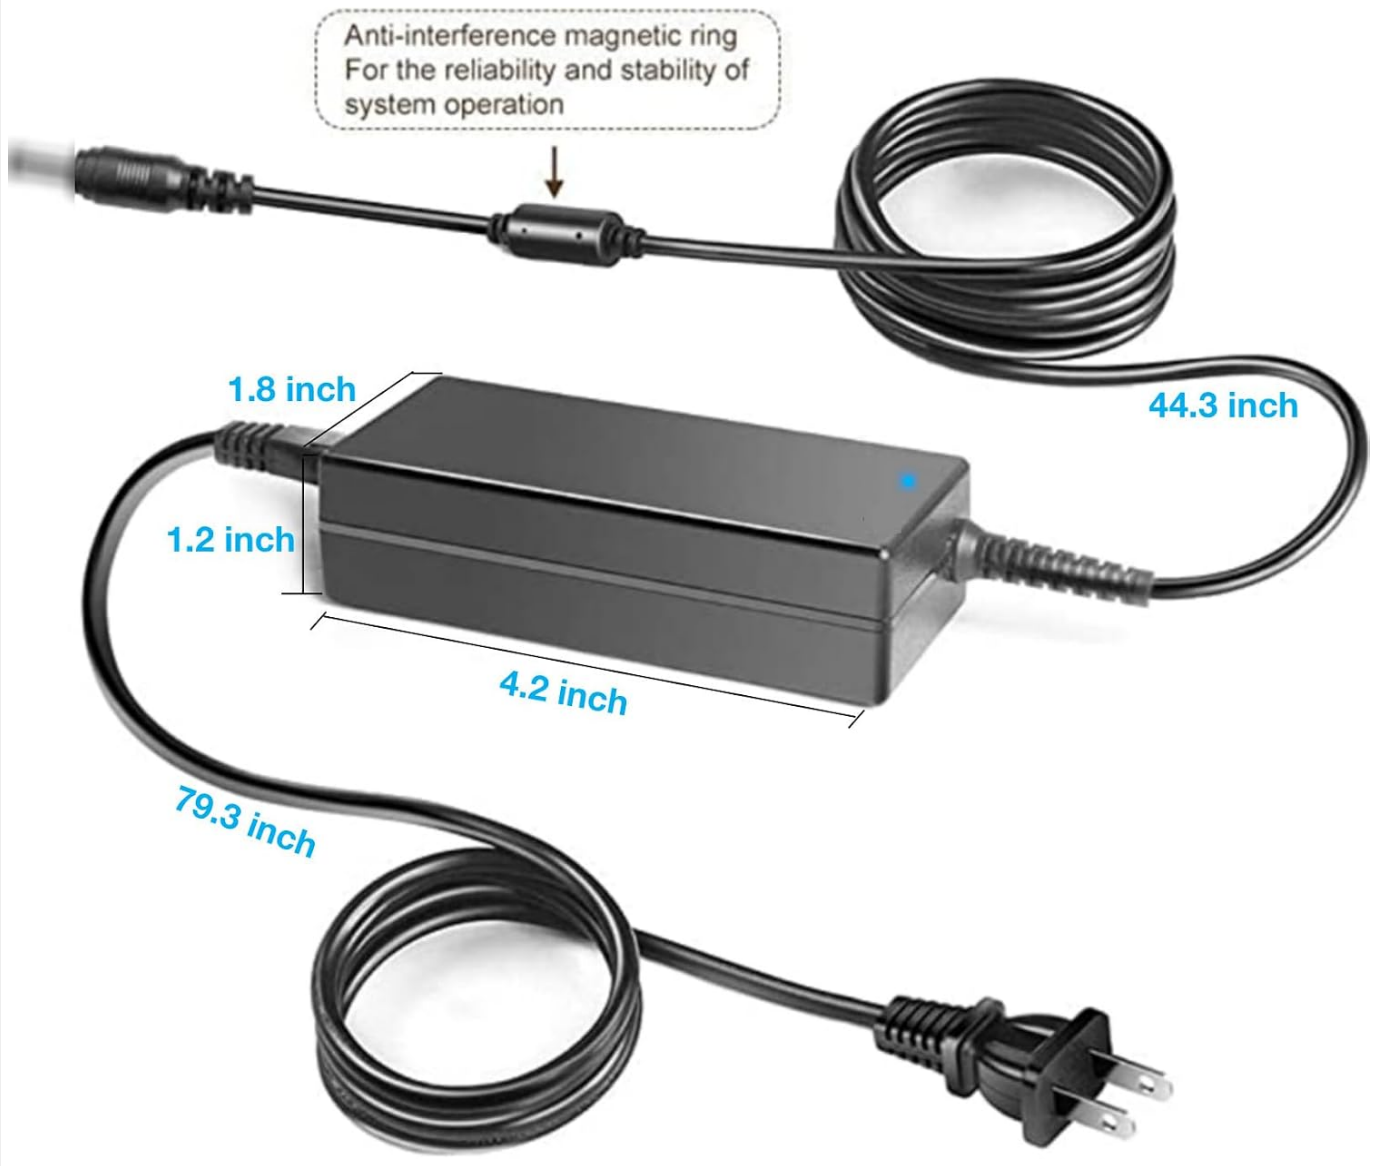


Figure 5.1: The adapter showing its dimensions and the location of the anti-interference magnetic ring on the DC output cable, which helps ensure stable operation. A small blue indicator light is visible on the top surface of the adapter.

6. Maintenance

The Kircuit AC DC Adapter requires minimal maintenance:

- **Cleaning:** Disconnect the adapter from the power outlet and your device before cleaning. Wipe the exterior with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the adapter in a cool, dry place away from direct sunlight and moisture when not in use. Avoid tightly coiling the cables to prevent damage.
- **Inspection:** Periodically inspect the adapter and cables for any signs of damage, such as frayed wires or cracked casing. If damage is found, discontinue use and replace the adapter.

7. Troubleshooting

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Device not receiving power.	Adapter not plugged in. Loose connection. Faulty wall outlet. Damaged adapter/cables.	Ensure adapter is securely plugged into a live wall outlet. Check all cable connections (AC input to adapter, DC output to device). Test the wall outlet with another device. Inspect adapter and cables for visible damage. Replace if damaged.
Adapter feels excessively hot.	Overload or poor ventilation. Internal fault.	Ensure the adapter is used with compatible devices only. Provide adequate ventilation around the adapter. Discontinue use immediately if overheating persists and contact support.

8. Specifications

Brand	Kircuit
Compatible Devices	Sharper Image Infrared Heating Pad (SKU # 206600-01, 20660001, Item No. 206600)
Input Voltage	100V-240V AC
Frequency Range	50Hz - 60Hz
Power Source	Corded Electric
Connector Type	DC Barrel (Output), 2 Pin (AC Input)
Included Components	2 x Power Cords
Features	Dynamic IC, Charger IC & Power fuse for rapid charging and over charge protection. Anti-interference magnetic ring.

9. Warranty and Support

Kircuit products are designed for reliability and performance. For warranty information or technical support, please refer to the contact information provided with your purchase or visit the official Kircuit website. Please have your product model and purchase details ready when contacting support.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CB61L1D1

More documents and user manuals: **https://manuals.plus/**