Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Cryfokt Cryfoktvgngr3qodw

Cryfokt High Pressure Steam Washer User Manual

Model: Cryfoktvgngr3qodw

Brand: Cryfokt

1. Introduction

Thank you for choosing the Cryfokt High Pressure Steam Washer. This powerful 2500W, 3BAR steam cleaner is designed for effective and hygienic cleaning across various surfaces. It utilizes high-temperature steam (≥105°C) to remove stubborn dirt and grime without harsh chemicals. This manual provides essential information for safe operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your device.



Image 1.1: The Cryfokt High Pressure Steam Washer main unit, hose, and nozzle.

2. Safety Information

Please read all safety instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the power supply matches the voltage specified on the appliance.

- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Keep children and pets away from the appliance during operation.
- Never direct steam at people, animals, or electrical appliances.
- Use only distilled or demineralized water to prevent mineral buildup and damage.
- Do not open the water tank cap while the appliance is under pressure or hot.
- Unplug the appliance from the power outlet before cleaning or maintenance.
- Ensure proper ventilation when using the steam cleaner in enclosed spaces.
- Do not use the appliance if the power cord or plug is damaged.

3. Package Contents

Verify that all items are present in the package:

- 1 x Cryfokt High Pressure Steam Washer Unit
- 1 x Extended Nozzle
- 1 x Plastic Brush
- 1 x Copper Brush
- 1 x Large Brush
- 1 x Instruction Manual (this document)



Image 3.1: Included accessories: extended nozzle, plastic brush, copper brush, and large brush.

4. Product Components

Familiarize yourself with the main parts of your steam washer:

- **Main Unit:** Contains the heating element, water tank, and controls.
- **Water Tank:** Transparent reservoir for water.
- **Power Switch:** On/Off control for the unit.
- **Steam Output Nozzle:** Where steam is emitted.
- **Hose:** Connects the main unit to the steam output nozzle. (Approximately 2.2 meters long)
- **Adjustable Speed Dial:** Controls the steam output intensity.
- **Accessory Ports:** For attaching various brushes and nozzles.

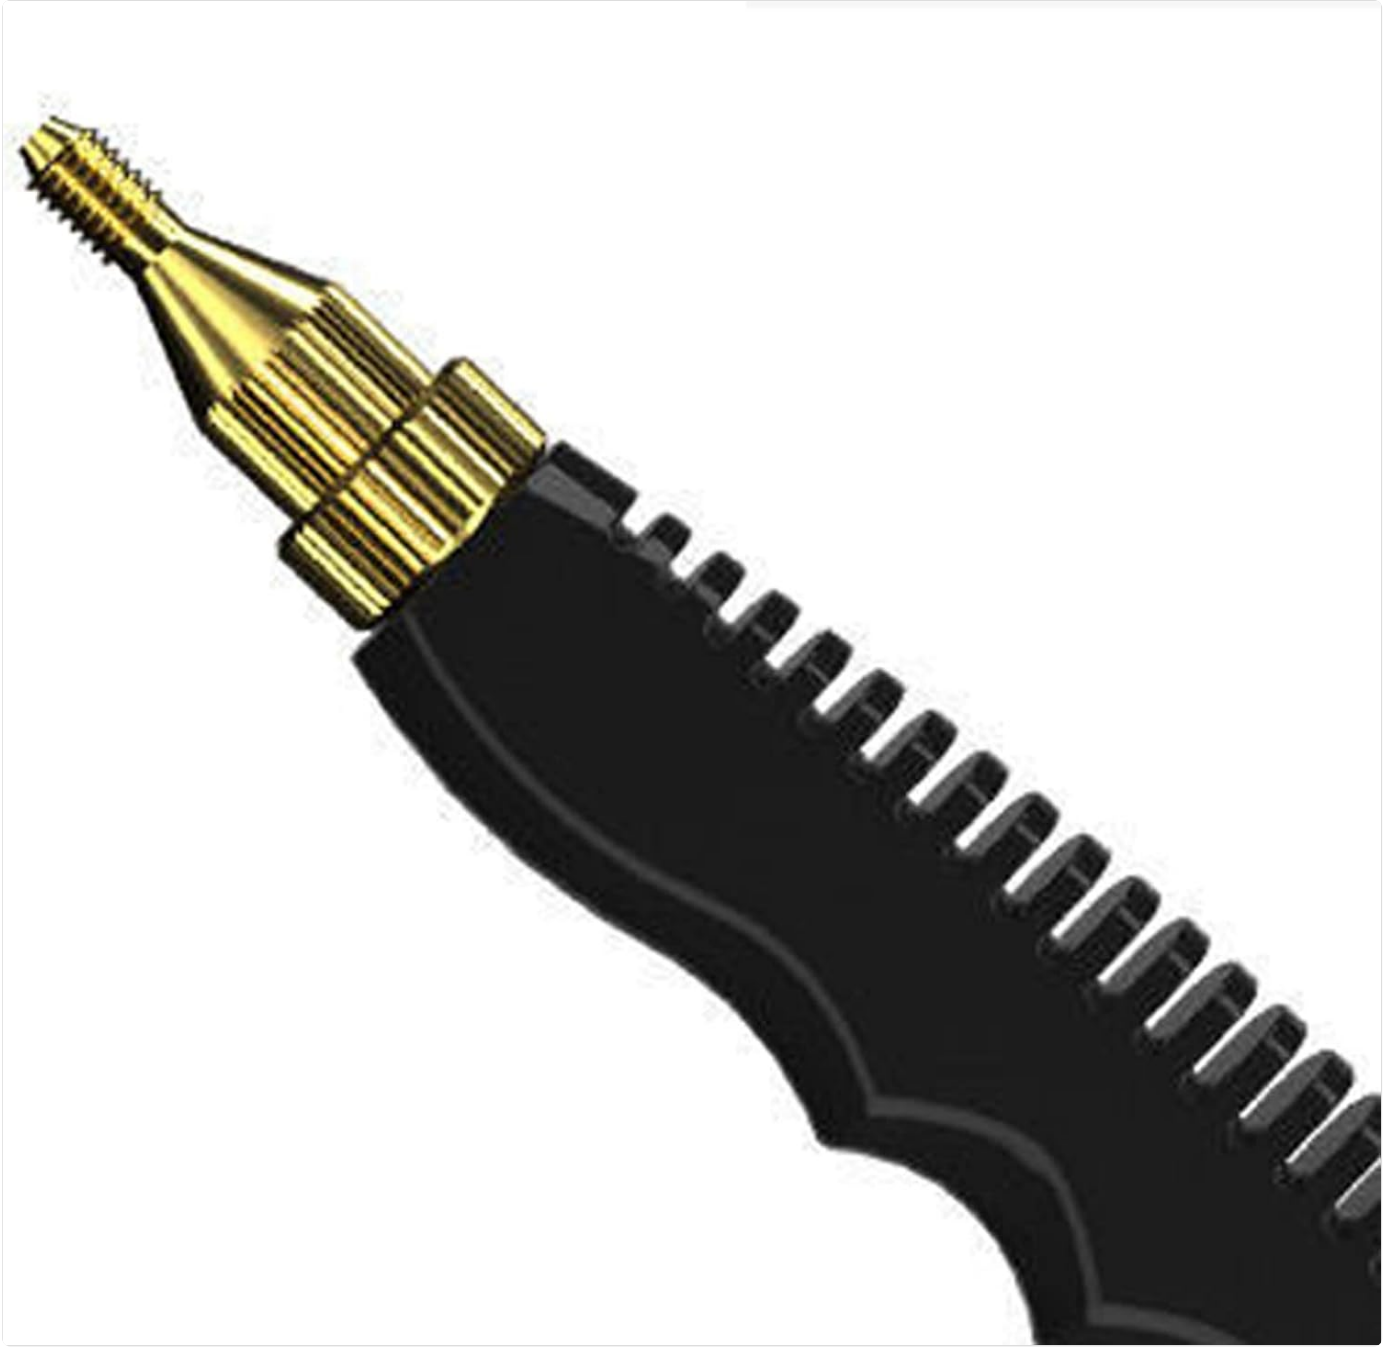


Image 4.1: Detail of the steam output nozzle.



Image 4.2: The flexible high-pressure hose.

5. Setup

1. **Unpack:** Carefully remove all components from the packaging.
2. **Position:** Place the steam washer on a stable, flat, and heat-resistant surface.
3. **Fill Water Tank:** Unscrew the water tank cap. Fill the tank with clean, distilled, or demineralized water. Do not overfill. Securely close the cap.
4. **Attach Hose and Nozzle:** Connect the high-pressure hose to the main unit and then attach the desired nozzle or brush accessory to the end of the hose. Ensure all connections are secure.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet.

6. Operating Instructions

1. **Power On:** Flip the power switch to the 'ON' position. The indicator light will illuminate, signaling that the unit is heating up.
2. **Heating Time:** Allow the unit to heat for several minutes until the steam is consistently strong. The operating temperature reaches ≥105°C.
3. **Adjust Steam Speed:** Use the adjustable speed dial to select one of the six available steam intensity settings, depending on the cleaning task.
4. **Begin Cleaning:** Direct the steam nozzle towards the surface to be cleaned. Maintain a safe distance and move the nozzle steadily. For stubborn dirt, use the appropriate brush attachment.
5. **Application Areas:** This steam washer is suitable for cleaning various surfaces including walls, stoves, microwave ovens, washing machines, refrigerators, and more.

6. **Refilling Water:** If the water tank runs empty during operation, turn off the unit, unplug it, and allow it to cool down before refilling.
7. **Power Off:** After cleaning, turn off the power switch and unplug the unit from the outlet.



Image 6.1: Example of steam cleaner in use on a kitchen range hood.

7. Maintenance

Regular maintenance ensures the longevity and efficiency of your steam washer.

- **Cleaning the Unit:** Wipe the exterior of the unit with a damp cloth. Do not use abrasive cleaners.
- **Draining Water:** After each use, ensure the water tank is emptied.
- **Descaling:** Periodically descale the unit to prevent mineral buildup, especially if using tap water (though distilled water is recommended). Consult a professional or use a manufacturer-approved descaling solution.
- **Accessory Care:** Clean brushes and nozzles after each use. Remove any debris or residue.
- **Storage:** Store the steam washer in a cool, dry place, away from direct sunlight and extreme temperatures. Ensure the

hose is not kinked during storage.

8. Troubleshooting

Problem	Possible Cause	Solution
No steam output	No water in tank; Unit not heated; Power issue	Fill water tank; Allow sufficient heating time; Check power connection.
Low steam pressure	Low water level; Mineral buildup; Nozzle blockage	Refill water tank; Descale the unit; Clean nozzle.
Water leaking	Loose connections; Damaged seal	Tighten all connections; Contact customer support for seal replacement.
Unit not turning on	No power; Faulty switch	Check power outlet and cord; Contact customer support.

9. Specifications

Feature	Specification
Model Number	Cryfoktvgngr3qodw
Power	2500W
Pressure	3BAR
Operating Temperature	≥105°C (221°F)
Hose Length	Approx. 2.2 m (86.61 inches)
Material	ABS
Weight	Approx. 2000g (4.41 lbs)
Special Feature	Ergonomic Design



Image 9.1: Product dimensions.

10. Warranty and Support

For warranty information or technical support, please refer to the purchase documentation or contact the retailer where the product was purchased. You may also visit the official Cryfokt store for further assistance.

Cryfokt Store: Visit the Cryfokt Store on Amazon

© 2023 Cryfokt. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CBKN46JX

More documents and user manuals: **https://manuals.plus/**