Nokia NOKIA 106 TA-1572 DS IN CHARCOAL

Nokia 106 Dual Sim User Manual

Model: NOKIA 106 TA-1572 DS IN CHARCOAL

1. Introduction

The Nokia 106 Dual Sim is a reliable and easy-to-use keypad phone designed for essential communication and convenience. It features a long-lasting battery for extended conversations, a large keypad, and a zoom screen option for enhanced usability. This model also includes a built-in UPI Payments App, wireless FM radio, and an MP3 player with MicroSD card support for your entertainment needs.


NOKIA
12:00
30.06.2023
Unlock
NOKIA
1 oo
2 abc
def 3
4 ghi
5 jkl
mno 6
7 pqrs
8 tuv
wxyz 9
* +
0
⇧

Figure 1.1: Front view of the Nokia 106 Dual Sim phone, showcasing its display and keypad.

2. Setup

2.1 What's in the Box

- Handset
- Type B charger
- Battery
- Quick Start Guide
- Safety Booklet

2.2 Battery Installation

1. Carefully remove the back cover of the phone.
2. Align the battery contacts with the phone's terminals.
3. Gently press the battery into place until it clicks.
4. Replace the back cover, ensuring it is securely fastened.





Figure 2.1: Rear view of the Nokia 106 Dual Sim, illustrating the removable back cover for battery and SIM access.

2.3 SIM Card and MicroSD Card Installation

1. With the back cover and battery removed, locate the SIM card slots. This phone supports Dual SIM.
2. Insert your SIM card(s) into the designated slots with the gold contacts facing down.
3. If using a MicroSD card for additional storage, insert it into the MicroSD card slot.
4. Reinsert the battery and replace the back cover.

2.4 Powering On/Off

- To power on, press and hold the Power key (usually the red end call key) until the Nokia logo appears.
- To power off, press and hold the Power key until the power off options appear, then select 'Power off'.

3. Operating Instructions

3.1 Basic Navigation

- Use the directional keys (up, down, left, right) to navigate through menus.
- Press the center key (Select) to confirm a selection.
- Use the left and right soft keys for context-sensitive actions displayed on the screen.
- Press the End/Power key to return to the home screen or end a call.

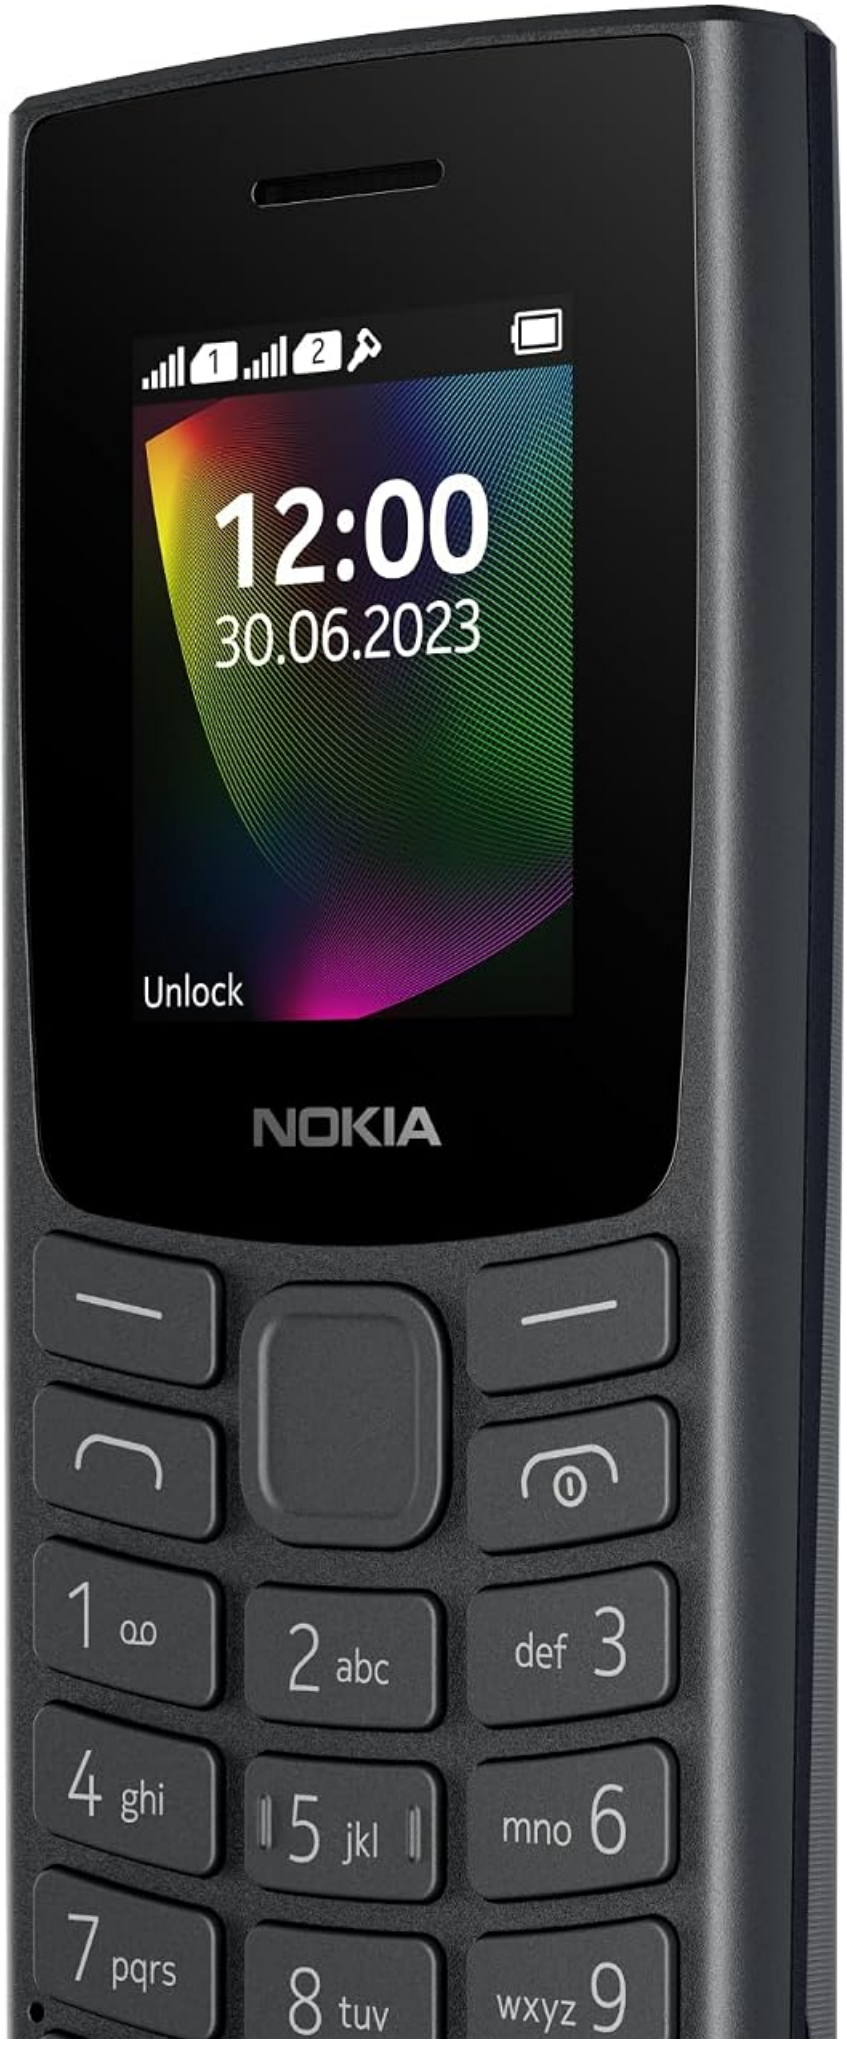

12:00
30.06.2023
Unlock
NOKIA
1 qo
2 abc
def 3
4 ghi
5 jkl
mno 6
7 pqrs
8 tuv
wxyz 9



Figure 3.1: Angled front view of the Nokia 106 Dual Sim, highlighting the ergonomic keypad design.

3.2 Making and Receiving Calls

- **Making a Call:** Enter the phone number using the keypad and press the Call key (green button).
- **Receiving a Call:** When the phone rings, press the Call key to answer.
- **Ending a Call:** Press the End/Power key.

3.3 Messaging

- Navigate to the 'Messages' menu from the home screen.
- Select 'Create message' or 'New message'.
- Enter your text using the keypad.
- Add the recipient's number or select from contacts.
- Send the message.

3.4 UPI Payments App

The Nokia 106 comes with a built-in UPI Payments App, allowing you to send and receive payments directly from your phone. Refer to the on-screen instructions within the app for setup and usage. Ensure your bank account is linked and verified for seamless transactions.





Figure 3.2: The Nokia 106 Dual Sim screen highlighting the built-in UPI App feature.

3.5 FM Radio and MP3 Player

- **FM Radio:** Access the 'Radio' application from the main menu. You can tune in to local stations with or without a headset.
- **MP3 Player:** If you have music files on your MicroSD card, navigate to the 'Music' or 'MP3 Player' application to play your personal playlists.

3.6 Accessibility Features

The Nokia 106 offers optional bigger fonts and a zoomed-in interface for improved readability and ease of use. These settings can typically be found in the 'Settings' menu under 'Display' or 'Accessibility'.

4. Maintenance

4.1 Cleaning Your Device

- Use a soft, lint-free cloth to wipe the screen and body of the phone.
- Avoid using harsh chemicals, cleaning solvents, or strong detergents.
- Do not expose the phone to excessive moisture.

4.2 Battery Care

- Charge the battery fully before first use.
- Avoid extreme temperatures, as they can affect battery life.
- Do not leave the phone connected to the charger for excessively long periods after it is fully charged.
- Use only Nokia-approved chargers and batteries.

5. Troubleshooting

5.1 Common Issues and Solutions

Problem	Possible Solution
Phone does not power on	Ensure battery is charged and correctly inserted. Try charging the phone for at least 30 minutes.
No network signal	Check if SIM card is properly inserted. Move to an area with better network coverage. Contact your service provider.
Poor call quality	Check network signal strength. Ensure earpiece/microphone are not obstructed.
Battery not charging	Verify charger connection. Try a different power outlet or charger. Check for damage to the charging port.
Keypad unresponsive	Restart the phone. Ensure no physical obstructions are present.

If the issue persists after trying these solutions, please contact customer support.

6. Specifications

Feature	Detail
Model Number	NOKIA 106 TA-1572 DS IN CHARCOAL
Operating System	Nokia Series 30+
RAM	0.03 GB
Internal Memory Storage Capacity	32 GB (likely refers to expandable storage or internal system memory, not user storage)

Feature	Detail
Product Dimensions	11.5 x 4.9 x 1.4 cm
Item Weight	80 g
Battery Type	1 Lithium Ion (included)
Battery Power Rating	1000 mAh
Wireless Technologies	Bluetooth
Connectivity	Bluetooth, USB
Special Features	MP3, Dual SIM, Radio, Built-in UPI App
Audio Jack	3.5 mm
Form Factor	Bar
Colour	black
Screen Size	1.77 Inches

7. Warranty and Support

7.1 Manufacturer Information

This product is manufactured by On behalf of HMD Mobile India Private Limited, located at Pioneer Urban Square Complex, No 510 5th Floor, Tower C, Golf Course Extension Road, Sector 62, Gurgaon, Haryana, 122102, India.

7.2 Customer Support

For warranty claims, technical assistance, or further support, please refer to the contact information provided in the Quick Start Guide or Safety Booklet included with your product. You may also visit the official Nokia support website for your region.

© 2024 Nokia. All rights reserved.