**Saved from manuals.plus.**
**Open the live page for links to other documents and user manuals.**



### Nokia NOKIA TA-1570

# Nokia 105 Dual Sim Keypad Phone User Manual

Model: NOKIA TA-1570

## Introduction

This manual provides essential information for the safe and efficient use of your Nokia 105 Dual Sim Keypad Phone. Please read it carefully before using the device and keep it for future reference.

The Nokia 105 is designed for reliable communication, featuring a long-lasting battery, dual SIM capability, and a built-in UPI payments application for convenient transactions. It also includes a wireless FM radio for entertainment.

## Package Contents

Ensure all items are present in the package:

- Nokia 105 Phone
- Battery
- Charger
- User Guide (UG)

If any items are missing or damaged, please contact your retailer.

## Device Overview




**Figure 1:** Front and back view of the Nokia 105 phone, showcasing its compact design and textured rear cover.

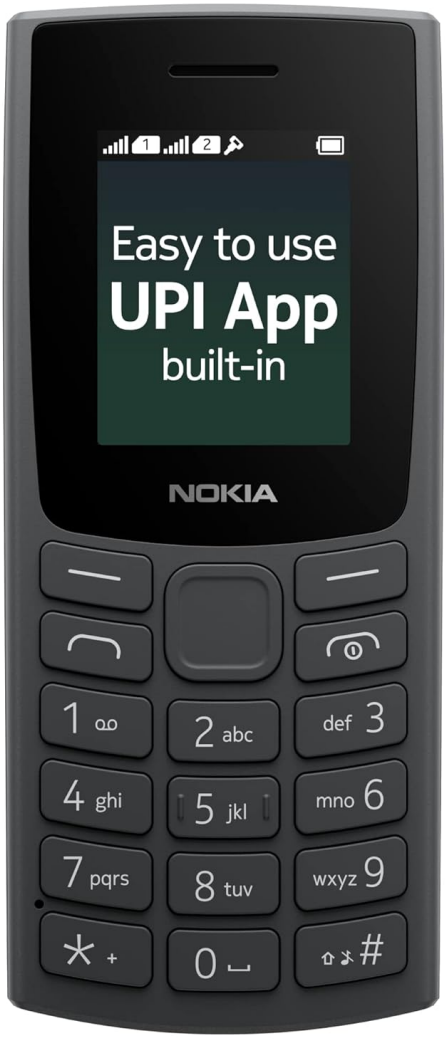



**Figure 2:** Front view of the Nokia 105, displaying the screen with "Easy to use UPI App built-in" text, highlighting a key feature.




**Figure 3:** Angled front view of the Nokia 105, showing the keypad and display with time and date.



**Figure 4:** Side view of the Nokia 105, illustrating its slim profile.




**Figure 5:** Rear view of the Nokia 105, showing the Nokia branding and textured finish.

## Setup

### 1. Inserting the SIM Card(s) and Battery

1. Carefully remove the back cover of the phone.
2. Insert the SIM card(s) into the designated slot(s). Ensure the gold contacts face downwards. This phone supports Dual SIM.
3. Insert the battery, aligning the contacts correctly.
4. Replace the back cover until it clicks into place.

**Important Note:** This phone is 2G only. Ensure your SIM card is enabled for a 2G network. Contact your service provider if unsure.

### 2. Charging the Battery

1. Connect the charger to the phone's charging port.
2. Plug the charger into a wall outlet.
3. The battery indicator on the screen will show charging progress.
4. Once fully charged, disconnect the charger.

For optimal battery life, fully charge the battery before first use.

## Operating Instructions

### Power On/Off

- To power on, press and hold the Power key until the phone vibrates.
- To power off, press and hold the Power key, then select "Power off" from the options.

### Making Calls

1. Enter the phone number using the keypad.
2. Press the Call key (green button) to initiate the call.
3. To end a call, press the End Call key (red button).

### Sending SMS Messages

1. Go to Menu > Messages > Create message.
2. Type your message using the keypad.
3. Enter the recipient's number or select from contacts.
4. Select "Send".

The phone has space for 2,000 contacts and 500 SMS messages.

### Using UPI Payments

The Nokia 105 comes with a built-in UPI application for secure and convenient digital payments. Follow the on-screen instructions within the UPI app to set up your account and link your bank details.

- Navigate to the UPI application from the main menu.
- Follow the prompts to register and verify your details.
- You can then send and receive UPI payments directly from your phone.

### Wireless FM Radio

To use the wireless FM radio, navigate to the Radio application from the main menu. You do not need to connect headphones to listen to the radio.

- Go to Menu > Radio.
- Use the navigation keys to tune to desired stations.

## Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the phone's surface. Avoid liquid cleaners.
- **Storage:** Store the phone in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Do not expose the battery to extreme temperatures or dispose of it in fire. Use only Nokia-approved chargers.
- **Water Resistance:** This phone is not water-resistant. Avoid exposure to liquids.

## Troubleshooting

| Problem | Possible Cause | Solution |
|---|---|---|
| Phone does not power on. | Battery is drained or not inserted correctly. | Charge the battery. Ensure the battery is correctly inserted. |
| Cannot make or receive calls. | No network signal, incorrect SIM card, or 2G network issue. | Check network coverage. Ensure SIM card is properly inserted. Verify your SIM supports 2G network. |

| Problem | Possible Cause | Solution |
|---|---|---|
| Battery drains quickly. | Heavy usage, old battery, or background processes. | Reduce usage. Consider replacing the battery if it's old. Close unnecessary applications. |
| Keypad unresponsive. | Software glitch or physical damage. | Restart the phone. If problem persists, contact support. |

## Specifications

| Feature | Detail |
|---|---|
| Model Number | NOKIA TA-1570 |
| Operating System | Nokia Series 30+ |
| RAM | 0.03 GB (approx. 32 MB) |
| Memory Storage Capacity | 32 GB (Note: This may refer to expandable memory support) |
| Product Dimensions | 11.5 x 4.9 x 1.4 cm |
| Item Weight | 80 g |
| Battery Type | 1 Lithium Ion battery (included) |
| Battery Power Rating | 1000 mAh |
| Phone Talk Time | 22 Hours |
| Connectivity | Cellular (2G), Bluetooth, USB |
| Special Features | Dual SIM, Wireless FM Radio, Built-in UPI Payments |
| Audio Jack | 3.5 mm |
| Display Resolution | 720p (Note: This typically refers to video playback capability, not screen resolution for a basic phone) |
| Manufacturer | Nokia |
| Country of Origin | India |

## Warranty and Support

For warranty information and customer support, please refer to the warranty card included in your product package or visit the official Nokia support website. You can also contact the manufacturer directly:

**Manufacturer:** Nokia, Pioneer Urban Square Complex, No 510 5th Floor, Tower C, Golf Course Extension Road, Sector 62, Gurgaon, Haryana, 122102, India.
For further assistance, please contact your point of purchase.

© 2024 Nokia. All rights reserved.

## Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**

---

**Open the live page**

**https://manuals.plus/asin/B0CBMH1YSN**

More documents and user manuals: **https://manuals.plus/**