Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Lifellery 1

Lifellery Cordless High-Pressure Washer User Manual

Brand: Lifellery | **Model:** 1

1. Introduction

Thank you for choosing the Lifellery Cordless High-Pressure Washer. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your device. Please read it thoroughly before first use and keep it for future reference.

2. Safety Instructions

- Always wear appropriate personal protective equipment, including eye protection, when operating the pressure washer.
- Do not direct the water jet at people, animals, electrical equipment, or the device itself. High-pressure jets can cause serious injury.
- Ensure all connections are secure before operating.
- Keep children and pets away from the operating area.
- Do not operate the pressure washer if any part is damaged. Contact customer support for assistance.
- Use only clean water with the pressure washer. Do not use corrosive liquids or solvents.
- Always disconnect the battery before performing any maintenance or cleaning.



Image: Warning against spraying on people, demonstrating the power of the water jet on a watermelon.

3. Package Contents

Verify that all items listed below are included in your package:

- Cordless High-Pressure Washer Gun
- 48V Lithium Battery (x1)
- Battery Charger
- 0° Nozzle
- 40° Nozzle
- Foam Jug
- Metal Extensions (Lance)
- Water Inlet Adapters
- 5-meter Water Inlet Hose (Car Cable)
- Water Filter



Image: Visual representation of the 9-piece package contents, including the pressure washer, battery, charger, nozzles, foam jug, extensions, adapters, hose, and filter.

4. Setup

4.1. Charging the Battery

1. Insert the 48V lithium battery into the charger.
2. Plug the charger into a standard power outlet.
3. Allow the battery to charge fully. The indicator light on the charger will change when charging is complete. A full charge provides approximately 60 minutes of continuous use.



Image: The 48V lithium battery, illustrating its design and indicating a 60-minute operational life on a full charge.

4.2. Assembling the Washer Gun

1. Attach the metal extension lance to the main body of the pressure washer gun by twisting until secure.
2. Ensure the connection is tight to prevent leaks during operation.

4.3. Connecting Water Supply

1. Connect one end of the 5-meter water inlet hose to the water inlet port on the pressure washer gun.
2. Attach the water filter to the other end of the hose. This weighted filter helps prevent debris from entering the pump and keeps the hose submerged in a water source.
3. Place the filtered end of the hose into a bucket or other suitable water source.



Image: A weighted filter submerged in a water bucket, connected to the pressure washer, demonstrating its use for drawing water during car cleaning.

4.4. Attaching Nozzles and Foam Jug

1. To attach a nozzle, align it with the end of the metal extension lance and push firmly until it clicks into place.
2. To attach the foam jug, fill it with appropriate car wash soap or cleaning solution. Then, attach it to the end of the metal extension lance in the same manner as a nozzle.

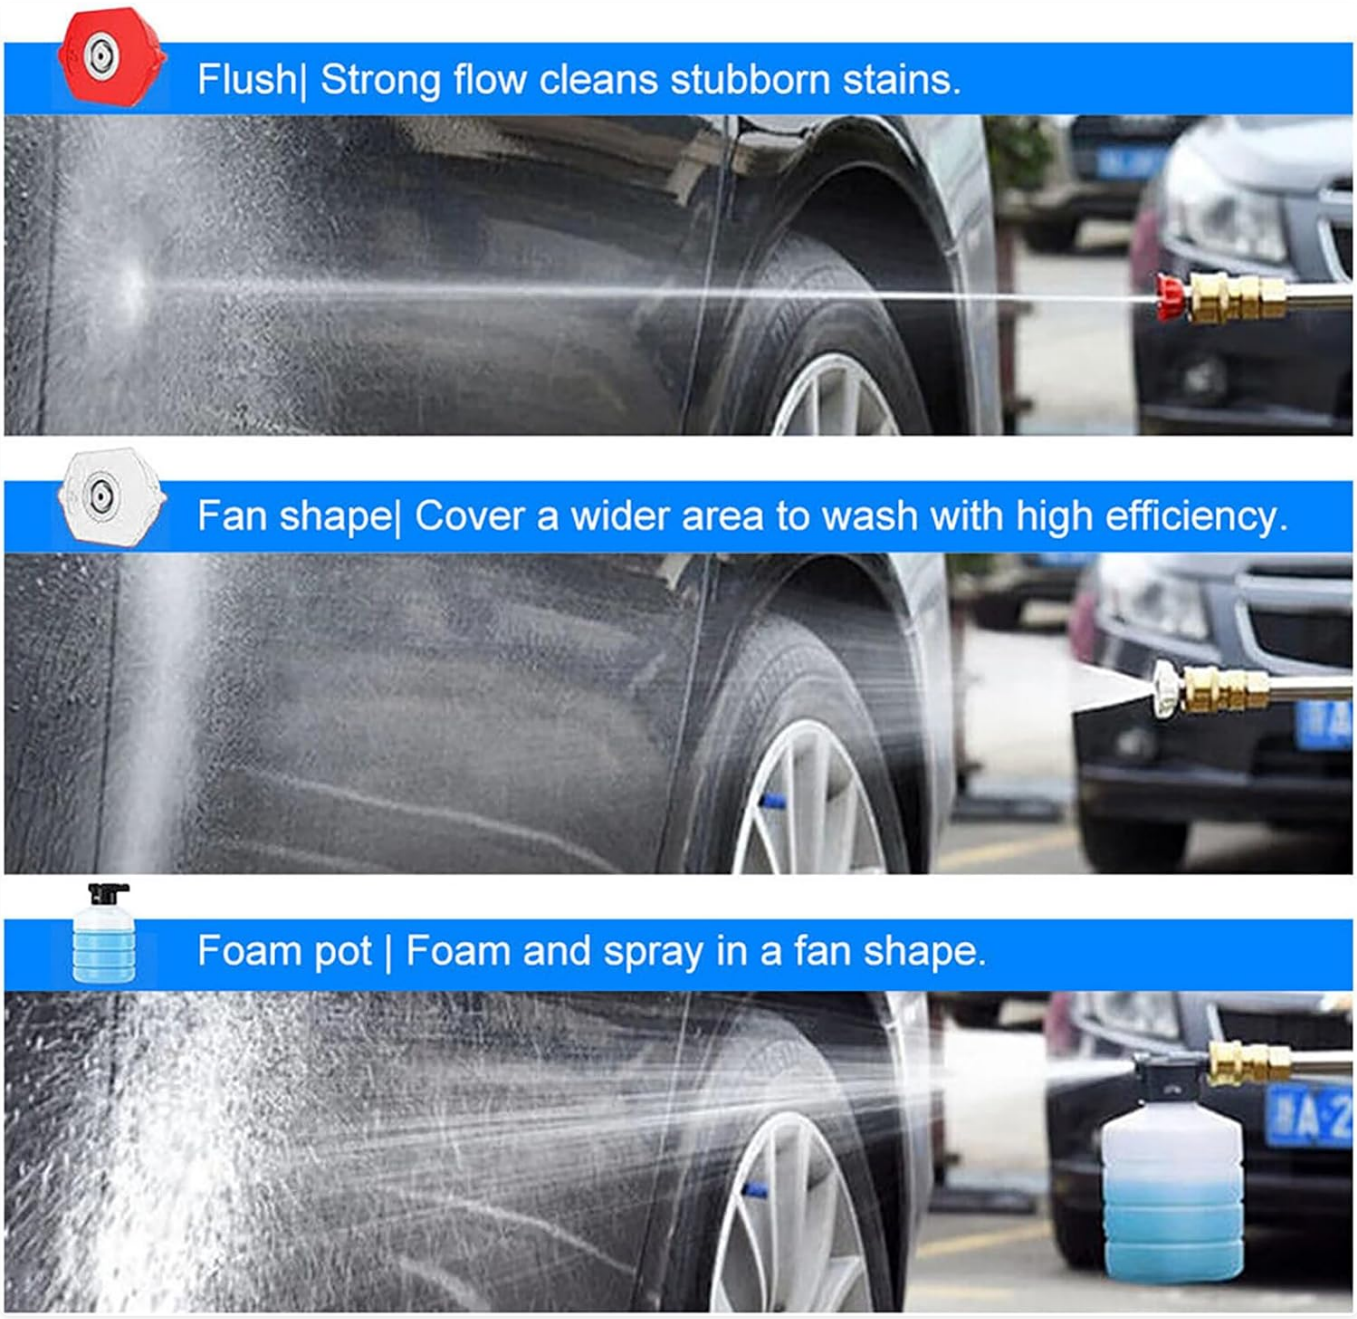


Image: Demonstrations of the three primary spray patterns: a concentrated flush for stubborn stains, a wide fan shape for efficient coverage, and foam application using the foam pot.

5. Operating Instructions

5.1. Powering On/Off

1. Insert the charged battery into the battery slot on the bottom of the pressure washer gun.
2. To start the pressure washer, press and hold the trigger. The motor will begin to draw water and build pressure.
3. To stop, release the trigger. The device features an intelligent power-off function to prolong motor life.



Image: The pressure washer in hand, illustrating the 'Intelligent Power Off' feature designed to extend the motor's lifespan through energy and water saving.

5.2. Using Different Spray Patterns

- **0° Nozzle (Red):** Provides a concentrated, high-impact jet for tough stains and hard-to-reach areas. Use with caution.
- **40° Nozzle (White):** Delivers a wider, fan-shaped spray for general cleaning, rinsing, and covering larger surfaces efficiently.
- **Foam Jug:** For applying soap or cleaning solutions. The jug mixes the solution with water to create a rich foam for effective cleaning.

5.3. General Usage Tips

- Always test the spray pattern and pressure on an inconspicuous area first, especially on delicate surfaces.
- Maintain a safe distance from the surface being cleaned to avoid damage.
- Move the spray gun steadily to ensure even cleaning.

- The pressure washer is suitable for various tasks, including car washing, garden cleaning, and general household rinsing.



Image: A collage illustrating the multi-functional and multi-occasion use of the wireless pressure washer gun, including car washing, garden watering, stair cleaning, and air conditioner maintenance.

6. Maintenance

6.1. Cleaning

- After each use, flush the system with clean water to remove any detergent residue or debris.
- Clean the exterior of the pressure washer with a damp cloth. Do not use harsh chemicals.
- Regularly inspect and clean the water filter to ensure optimal water flow and prevent clogging.

6.2. Storage

- Store the pressure washer and its accessories in a dry, cool place, away from direct sunlight and freezing temperatures.

- Ensure the battery is removed from the device before storage.

6.3. Battery Care

- Charge the battery fully before long-term storage.
- If storing for extended periods, recharge the battery every 3-6 months to maintain its lifespan.
- Do not expose the battery to extreme temperatures.

7. Troubleshooting

- **No water flow or low pressure:**
  - Check if the water source is adequate and the hose is not kinked.
  - Ensure the water filter is clean and not clogged.
  - Verify that all connections are tight and there are no leaks.
  - Make sure the battery is fully charged and properly inserted.
- **Motor not starting:**
  - Confirm the battery is charged and correctly installed.
  - Check for any obstructions in the trigger mechanism.
- **Leaks from connections:**
  - Tighten all hose and nozzle connections.
  - Inspect O-rings for damage and replace if necessary.

8. Specifications

Feature	Specification
Brand	Lifellery
Model	1
Power Source	Battery Powered
Battery Voltage	48V Lithium (approx. 60 min runtime)
Max Flow Rate	Up to 10 Liters per minute (600 Liters per hour)
Hose Length	5 meters
Nozzles Included	0° (Red), 40° (White)
Additional Features	Intelligent Power Off, Foam Jug, Weighted Water Filter



Image: Performance metrics for the pressure washer, detailing a 6-8 meter column spray range, 30 bar fan pressure, and 80 minutes of foam application capability.

9. Warranty and Support

For warranty information or technical support, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your purchase receipt as proof of purchase.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CBTYYQQ3

More documents and user manuals: **https://manuals.plus/**