Colorcool M10

Colorcool M10 MP3 Player User Manual

Model: M10
Brand: Colorcool

Introduction

This manual provides detailed instructions for the Colorcool M10 MP3 Player. This portable digital music player features a 2.8-inch screen, touch buttons, Bluetooth 5.0 connectivity, a built-in speaker, and 32GB of internal storage, expandable up to 128GB. It supports various functions including FM radio, recording, picture preview, video playback, calendar, e-book reading, alarm clock, and stopwatch. Please read this manual thoroughly to ensure proper use and optimal performance of your device.

What's in the Box

Verify that all items are present in your package:

- Colorcool M10 MP3 Player
- USB Charging Cable
- Wired Headphones
- User Manual (this document)



Image: The Colorcool M10 MP3 Player shown with its included USB charging cable and wired headphones.

Setup

1. Charging the Device

Before first use, fully charge your MP3 player.

1. Locate the USB charging port on the bottom of the device.
2. Connect the provided USB charging cable to the MP3 player.
3. Plug the other end of the USB cable into a USB power adapter (not included) or a computer's USB port.
4. The battery indicator on the screen will show charging status. A full charge typically takes a few hours.

2. Transferring Music and Files

The MP3 player has 32GB of internal memory and supports up to 128GB expandable memory via a Micro SD card.

1. Connect the MP3 player to your computer using the provided USB cable.

2. The device will appear as a removable disk drive on your computer.
3. Drag and drop your desired music files (MP3, WMA, APE, FLAC, WAV, OGG, ACELP), videos (AVI, AMV), pictures (JPG, BMP, JPEG), or e-books (TXT) into the appropriate folders on the MP3 player.
4. Once files are transferred, safely eject the device from your computer before disconnecting the USB cable.



Image: The MP3 player connected to a laptop, illustrating the process of transferring files.

3. Connecting Wired Headphones

To listen to audio privately, connect the wired headphones.

1. Locate the 3.5mm headphone jack on the bottom of the device.
2. Plug the wired headphones into the headphone jack.

Operating Instructions

1. Power On/Off

- **To Power On:** Press and hold the power button located on the side of the device for a few seconds until the screen lights up.
- **To Power Off:** Press and hold the power button again until the "Bye Bye" message appears and the screen turns off.

2. Navigation and Interface

The device features a 2.8-inch touch screen and physical navigation buttons.

- Use the touch buttons on the screen or the physical arrow buttons below the screen to navigate through menus and select options.
- The physical buttons on the side allow for individual volume adjustment without needing to turn on the screen.

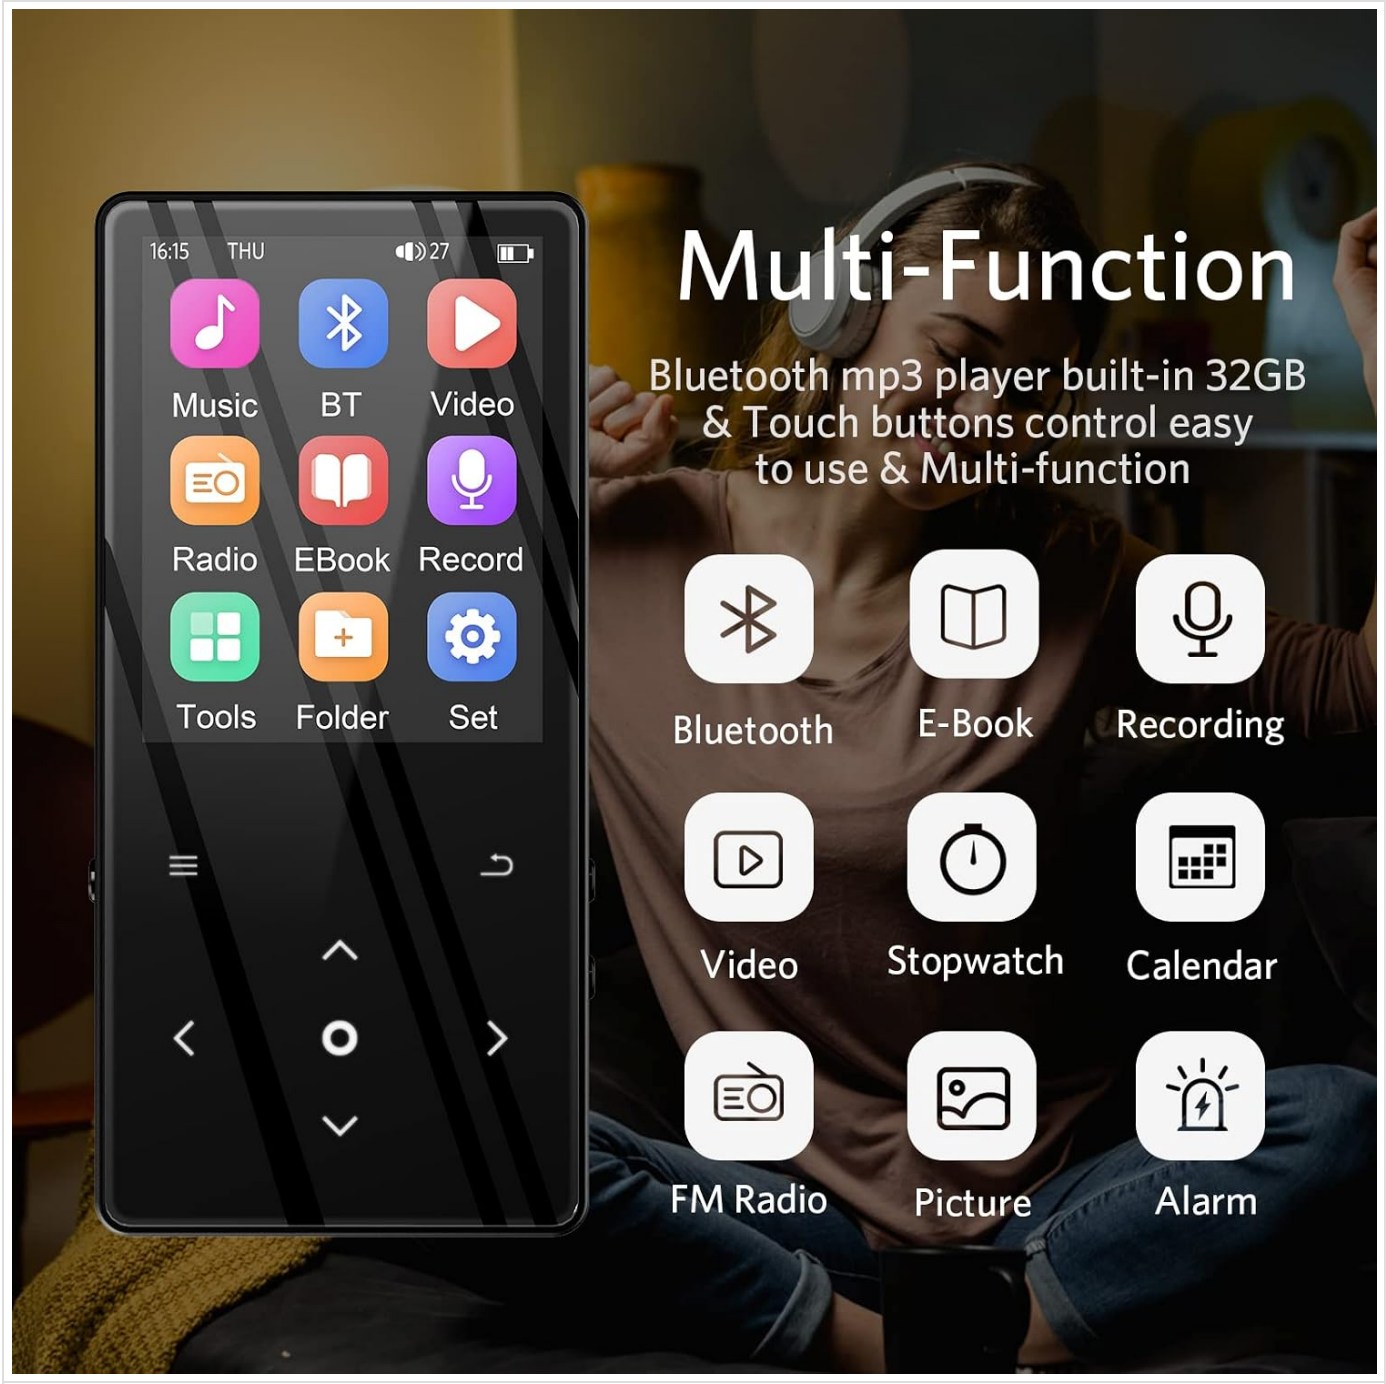


Image: The MP3 player's main menu displaying various function icons like Music, Bluetooth, Video, FM Radio, Ebook, Recording, Tools, Folder, and Settings.

3. Music Playback

1. From the main menu, select the "Music" icon.
2. Navigate through "All Songs," "Artists," "Albums," or "Playlists" to find your desired audio.

3. Select a song to begin playback.
4. Use the navigation buttons to control playback (play/pause, next/previous track).
5. Adjust volume using the physical buttons on the side of the device.

Your browser does not support the video tag.

Video: A demonstration of navigating the MP3 player's menu, selecting music, and adjusting volume.

4. Bluetooth Connection

The MP3 player features Bluetooth 5.0 for connecting to Bluetooth speakers or headsets.**Note:** This device cannot pair with mobile phones or laptops.

1. From the main menu, select the "Bluetooth" icon.
2. Ensure "Bluetooth open" is selected to activate Bluetooth.
3. Select "Search for device" to scan for nearby Bluetooth devices.
4. Place your Bluetooth speaker or headset in pairing mode.
5. Once your device appears in the list, select it to pair.
6. After successful pairing, you can play music through the connected Bluetooth device.

Your browser does not support the video tag.

Video: A demonstration of how to enable Bluetooth on the MP3 player and search for devices.

5. Other Functions

The Colorcool M10 offers a range of additional features:

- **FM Radio:** Access the FM radio function to listen to local stations.
- **Recording:** Use the built-in recorder for voice memos or lectures.
- **Picture Preview:** View JPG, BMP, and JPEG image files.
- **Video Playback:** Watch AVI and AMV video files.
- **E-book:** Read TXT format e-books.
- **Tools:** Includes Calendar, Alarm Clock, and Stopwatch.

Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the device. Avoid liquid cleaners or abrasive materials.
- **Storage:** Store the MP3 player in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the device frequently. Charge it regularly.
- **Software Updates:** Check the manufacturer's website for any available firmware updates to ensure optimal performance.

Troubleshooting

- **Device not turning on:** Ensure the device is fully charged. If the battery is completely drained, it may take a few minutes of charging before it can power on.
- **Cannot transfer files:** Ensure the USB cable is securely connected to both the MP3 player and the computer. Try a different USB port or cable. Make sure the device is recognized as a removable disk.
- **Bluetooth connection issues:** Ensure Bluetooth is enabled on both the MP3 player and the target device (speaker/headset). Make sure both devices are in pairing mode and within range. Remember, the MP3 player cannot connect to phones or laptops via Bluetooth.
- **No sound:** Check the volume level on the device and any connected headphones/speakers. Ensure headphones are

properly plugged in or Bluetooth is correctly paired.

- **Screen unresponsive:** Try restarting the device. If the issue persists, a factory reset (found in Settings) might be necessary, but this will erase all data.

Specifications

Model Name	M10
Brand	Colorcool
Screen Size	2.8 Inches
Memory Storage Capacity	32 GB (expandable up to 128 GB via Micro SD card)
Connectivity Technology	Bluetooth 5.0
Supported Audio Formats	MP3, WMA, APE, FLAC, WAV, OGG, ACELP
Supported Video Formats	AVI, AMV
Supported Picture Formats	JPG, BMP, JPEG
Supported E-book Format	TXT
Special Features	2.8 inch Screen, Bluetooth 5.0, Built-In Speaker, Equalizer, FM Radio, Recorder, Ebook, Clock
Battery	1 Lithium Polymer battery (included)
Product Dimensions	0.33 x 2.2 x 4.65 inches
Item Weight	3.46 ounces

Warranty and Support

For warranty information or technical support, please refer to the documentation included with your purchase or visit the official Colorcool website. Keep your proof of purchase for any warranty claims.