Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

C idea CM826

C idea CM826 8-inch Tablet User Manual

Model: CM826

1. Introduction

1.1. Device Overview

The C idea CM826 is an 8-inch HD tablet designed for portability and everyday use. It features an 800x1280 resolution display, runs on Android 13, and is equipped with a quad-core processor, 2GB RAM, and 32GB internal storage, expandable up to 64GB. This tablet supports Wi-Fi and Bluetooth connectivity and includes dual cameras.



Image: The C idea CM826 8-inch tablet being placed into a backpack, illustrating its compact and portable design.

1.2. Key Features

- **8-inch HD Display:** 800x1280 resolution with eye protection technology.
- **Android 13 Operating System:** Provides a user-friendly interface and access to a wide range of applications.
- **Performance:** Quad-core processor with 2GB RAM and 32GB ROM (expandable to 64GB).
- **Dual Cameras:** Equipped with front and rear cameras for photos and video calls.
- **Connectivity:** Supports Wi-Fi and Bluetooth for internet access and peripheral connections.
- **Portability:** Compact and lightweight design for easy transport.

2. Product Overview

2.1. Package Contents

The package typically includes:

- C idea CM826 8-inch Tablet
- USB Type-C Cable
- Power Adapter (may vary by region)
- User Manual (this document)

2.2. Device Layout

This section illustrates the physical components and ports of your CM826 tablet.



Image: Front, rear, and side views of the C idea CM826 tablet, showing the screen, cameras, volume buttons, power button, reset button, speaker, microphone, Type-C USB port, TF card slot, and headphone jack.

- **Front Camera:** Located above the screen.
- **Rear Camera:** Located on the back panel.
- **Volume Buttons:** Adjust audio volume.
- **Power On/Off Button:** Powers the device on/off or puts it to sleep.
- **Reset Button:** Small pinhole for force restarting the device.
- **Speaker:** Audio output.

- **Microphone:** For audio input.
- **Type-C USB Port:** For charging and data transfer.
- **TF Card Slot:** For inserting a microSD card to expand storage.
- **Headphone Jack:** For connecting wired headphones.

3. Initial Setup

3.1. Charging the Tablet

Before first use, fully charge your tablet. Connect the provided USB Type-C cable to the tablet's charging port and the other end to the power adapter. Plug the adapter into a wall outlet. The battery indicator on the screen will show charging status.

3.2. Powering On/Off

- **To Power On:** Press and hold the Power On/Off button until the screen lights up.
- **To Power Off:** Press and hold the Power On/Off button, then select "Power off" from the options on the screen.
- **To Restart:** Press and hold the Power On/Off button, then select "Restart" from the options.
- **Sleep Mode:** Briefly press the Power On/Off button to put the tablet to sleep or wake it up.

3.3. Initial Configuration

Upon first power-on, follow the on-screen prompts to set up your tablet:

1. Select your language.
2. Connect to a Wi-Fi network.
3. Sign in with your Google account or create a new one.
4. Set up screen lock (PIN, pattern, or password).
5. Review and accept terms and conditions.

3.4. Inserting a MicroSD Card (Optional)

To expand storage, insert a microSD card into the TF card slot. Ensure the tablet is powered off before inserting or removing the card.

4. Operating Instructions

4.1. Navigating the Android Interface

- **Home Screen:** The main screen where you can access apps and widgets.
- **Notifications Panel:** Swipe down from the top of the screen to view notifications and quick settings.
- **App Drawer:** Swipe up from the bottom of the screen to access all installed applications.
- **Gestures:** Use touch gestures like tap, swipe, pinch-to-zoom for interaction.

4.2. Connecting to Wi-Fi and Bluetooth

- **Wi-Fi:** Go to ***Settings > Network & internet > Wi-Fi*** Turn Wi-Fi on, select your network, and enter the password if required.
- **Bluetooth:** Go to ***Settings > Connected devices > Bluetooth***. Turn Bluetooth on, scan for devices, and pair with your desired accessory.

4.3. Using the Cameras

The tablet features a front camera (for video calls and selfies) and a rear camera (for general photography).

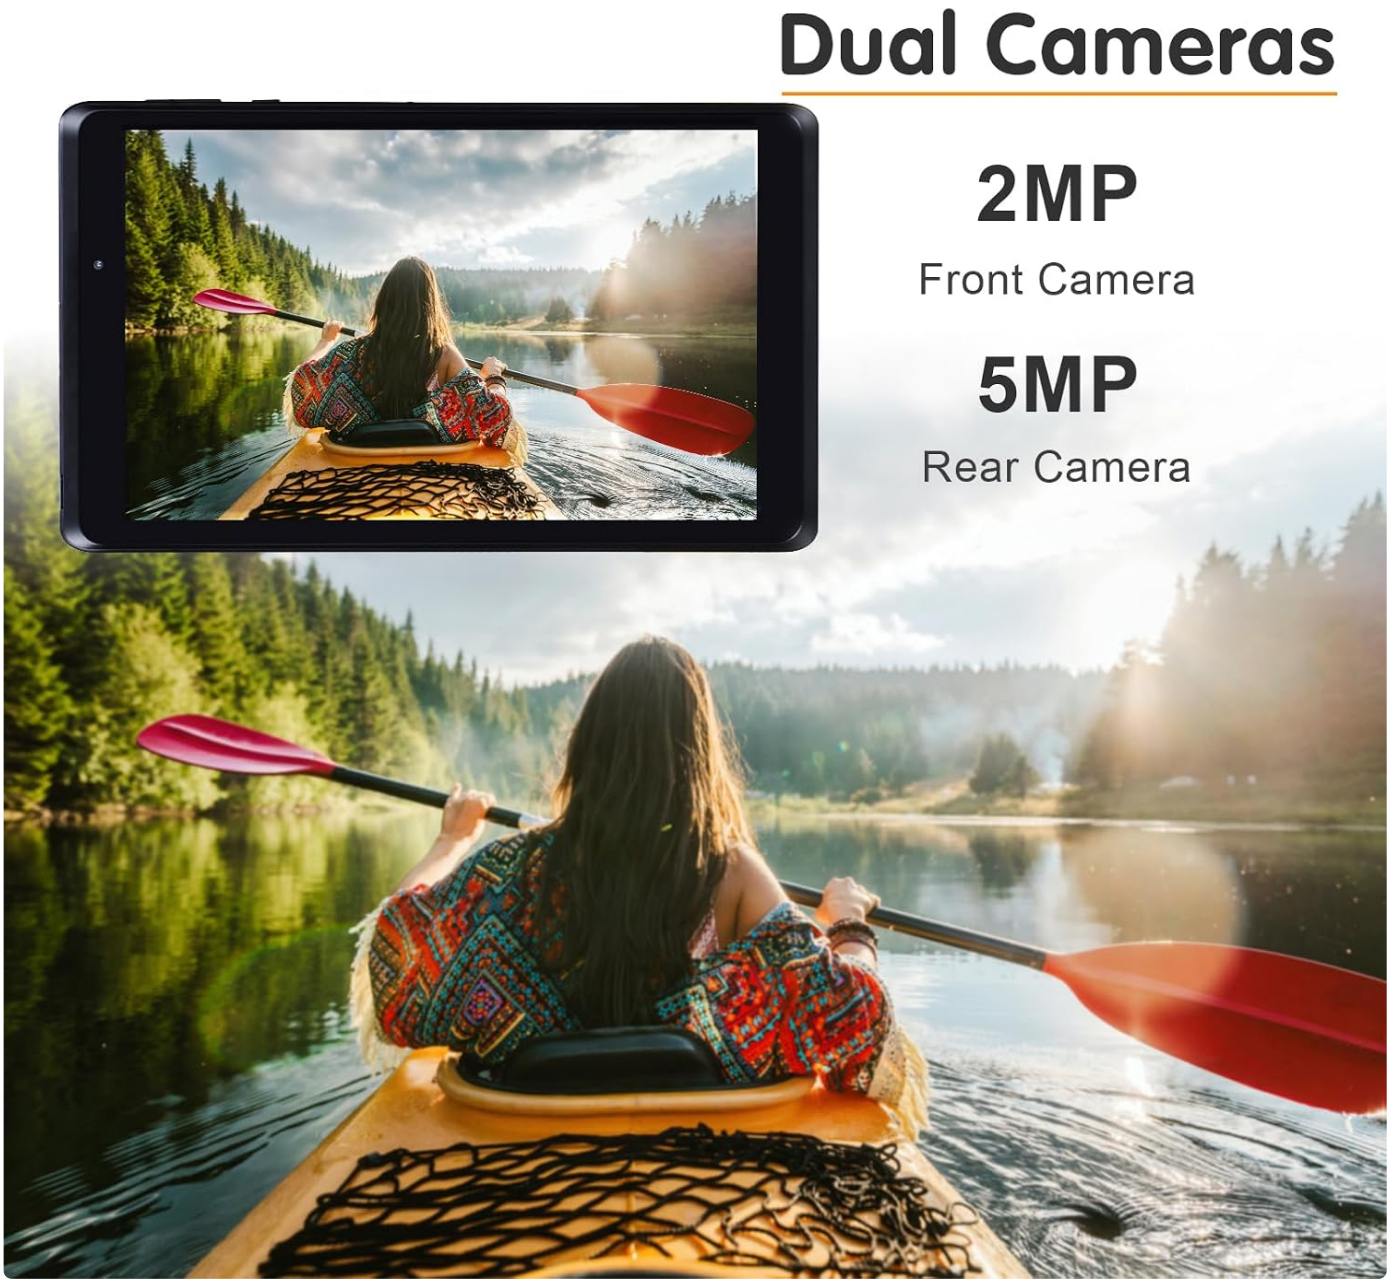


Image: The C idea CM826 tablet highlighting its 2MP front camera and 5MP rear camera capabilities.

Open the Camera app to take photos or record videos. You can switch between front and rear cameras within the app.

4.4. Media Consumption and E-Reading

The CM826 tablet is suitable for watching videos, listening to music, and reading e-books.



Image: The C idea CM826 tablet displaying text from an e-book, demonstrating its use as a reading device.

Download your preferred media players or e-reader apps from the Google Play Store.

5. Maintenance and Care

5.1. Battery Care

- Avoid fully discharging the battery frequently.
- Do not expose the tablet to extreme temperatures.
- Use only the provided or certified charging accessories.

5.2. Cleaning the Tablet

Use a soft, lint-free cloth to clean the screen and body of the tablet. Do not use liquid cleaners or abrasive materials.

5.3. Software Updates

Periodically check for system updates to ensure optimal performance and security. Go to ***Settings > System > System update***.

6. Troubleshooting

6.1. Tablet Does Not Turn On

- Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on.
- If unresponsive, use a thin object (like a paperclip) to press the reset button (if available) for a few seconds.

6.2. Wi-Fi Connection Issues

- Ensure Wi-Fi is enabled in settings.
- Restart your Wi-Fi router and the tablet.
- Forget the network and reconnect, entering the password again.

6.3. Slow Performance

- Close unused applications running in the background.
- Clear cache for frequently used apps.
- Ensure sufficient storage space is available. Consider uninstalling unnecessary apps or moving files to a microSD card.
- Restart the tablet.

6.4. Apps Crashing or Not Responding

- Force close the app (***Settings > Apps > [App Name] > Force stop***).
- Clear the app's cache and data (***Settings > Apps > [App Name] > Storage & cache***).
- Uninstall and reinstall the app.

7. Specifications

Feature	Specification
Model Number	CM826
Display Size	8 Inches
Display Resolution	800x1280 pixels
Operating System	Android 13
RAM	2 GB
Internal Storage (ROM)	32 GB
Expandable Storage	Up to 64 GB (via TF card)
Rear Camera Resolution	5 Megapixels
Front Camera Resolution	2 Megapixels

Feature	Specification
Battery Type	Lithium-polymer
Battery Capacity	5000 mAh
Connectivity	Wi-Fi (802.11n), Bluetooth
Interface	USB Type C, 3.5mm Headphone Jack
Dimensions (L x W x H)	32 x 3.3 x 8.6 cm
Weight	630 Grams

8. Warranty and Support

For warranty information and customer support, please refer to the documentation provided with your purchase or contact C idea customer service through their official website. Keep your proof of purchase for warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CBV3GZGZ

More documents and user manuals: **https://manuals.plus/**