Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

FoMup FM24S-3

FoMup Outdoor Refrigerator 24 Inch, Undercounter Beverage Fridge FM24S-3

Instruction Manual

1. Introduction

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your FoMup 24-inch Outdoor Undercounter Beverage Refrigerator, Model FM24S-3. Please read these instructions thoroughly before using the appliance and retain them for future reference.
The FoMup outdoor refrigerator is designed for both outdoor and indoor use, featuring durable 304 stainless steel construction, a 4.9 cubic feet capacity capable of holding up to 180 cans, and a powerful cooling system. It includes mobility casters, a safety lock, and digital temperature control for user convenience.

2. Safety Information

To reduce the risk of fire, electric shock, or injury when using your appliance, follow these basic precautions:

- Read all instructions before using the refrigerator.
- Connect to a properly grounded outlet only.
- Do not attempt to repair or replace any part of your refrigerator unless specifically recommended in this manual. All other servicing should be referred to a qualified technician.
- Unplug the refrigerator before cleaning or performing any maintenance.
- Keep ventilation openings clear of obstruction.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- This appliance is designed for outdoor use and is waterproof, but avoid direct exposure to extreme weather conditions for prolonged periods.
- Ensure the power cord is not pinched or damaged.

3. Setup and Installation

3.1 Unpacking

Carefully remove all packaging materials. Inspect the refrigerator for any shipping damage. Report any damage immediately to the retailer. Keep packaging materials until you are satisfied with the product.

3.2 Location Requirements

Place the refrigerator on a flat, stable surface capable of supporting its weight when fully loaded. Ensure adequate ventilation around the unit. For undercounter installation, the front ventilation system allows for built-in placement. Maintain a minimum of 2 inches of space at the back and sides for proper airflow if freestanding.



Image: The FoMup refrigerator integrated into an outdoor kitchen counter, demonstrating suitable placement.



Image: Visual representation of the refrigerator's weather-resistant design, highlighting its suitability for outdoor environments.

3.3 Caster Installation and Adjustment

The refrigerator is equipped with mobility casters for easy movement. To fix the unit in place, engage the locks on the casters. To move the unit, disengage the caster locks.



Image: Detailed view of the refrigerator's casters, demonstrating how to switch between fixed and movable states.

3.4 Electrical Connection

Before plugging in the appliance, allow it to stand upright for approximately 2-4 hours. This allows the refrigerant to settle. Connect the refrigerator to a dedicated, grounded 115V AC outlet. Do not use extension cords or adapter plugs.

4. Operating Instructions

4.1 Control Panel Overview

The refrigerator features a digital touch control panel located inside the unit, above the top shelf. This panel allows you to adjust the temperature, control the interior light, and manage other settings.



Image: The digital control panel displaying temperature and the blue LED interior lighting.

4.2 Temperature Setting

The operating temperature range is 37°F to 65°F. Use the up and down arrows on the control panel to set your desired temperature. The display will show the current internal temperature.

4.3 Interior Lighting

Press the light button on the control panel to turn the blue ambient LED light on or off. This light enhances visibility inside the refrigerator.

4.4 Door Lock

The refrigerator is equipped with a solid safety lock located at the bottom front. Use the provided key to lock or unlock the door as needed for security.



Image: The main product view, showing the integrated safety lock for securing contents.

4.5 Shelving Adjustment

The refrigerator includes three removable wire shelves, allowing for flexible storage configurations. To adjust or remove a shelf, empty its contents, lift the shelf slightly, and slide it out. Reinsert by aligning with the shelf supports and pushing it back into place.



Image: The refrigerator interior, demonstrating the capacity for various beverages and the adjustable shelving.

5. Care and Maintenance

5.1 Cleaning

Always unplug the refrigerator before cleaning. Clean the interior and exterior surfaces with a mild detergent and warm water. For stainless steel surfaces, use a non-abrasive cleaner specifically designed for stainless steel to maintain its finish. Do not use harsh chemicals or abrasive cleaning tools. The unit features a multi-layered insulation door design and 304 stainless steel for durability and ease of cleaning.

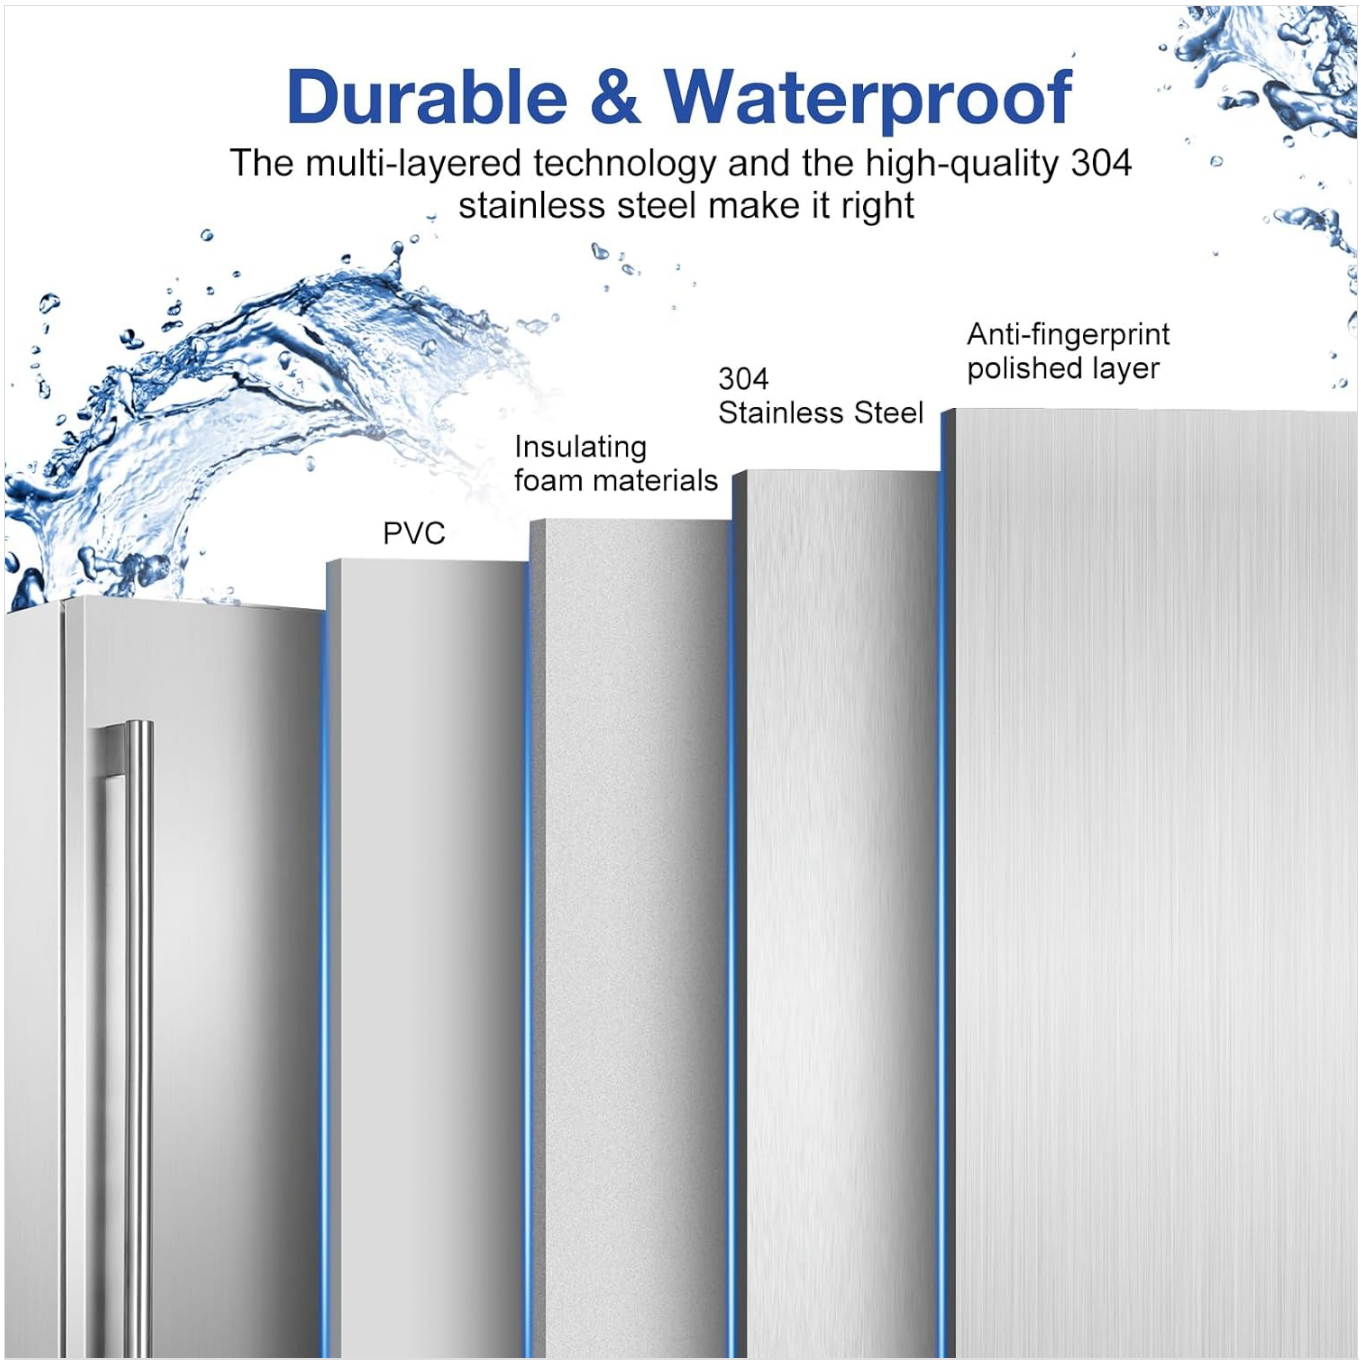


Image: Cross-section view of the refrigerator's construction, highlighting the durable and waterproof materials used.

5.2 Defrosting

This refrigerator features a frost-free defrost system, eliminating the need for manual defrosting. Any accumulated frost will melt automatically and evaporate.

5.3 Long-Term Storage

If the refrigerator will not be used for an extended period, unplug it, clean it thoroughly, and leave the door slightly ajar to prevent odors and mold growth.

6. Troubleshooting Guide

Before contacting customer support, please refer to the following table for common issues and their solutions:

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Refrigerator does not operate	No power to the unit; circuit breaker tripped.	Check power connection; reset circuit breaker.
Temperature is not cold enough	Door not closed properly; excessive door openings; ambient temperature too high; temperature setting too high.	Ensure door is sealed; reduce door openings; relocate unit if ambient temperature is extreme; lower temperature setting.
Unit is making unusual noise	Unit not level; objects vibrating against the unit.	Adjust leveling feet/casters; ensure nothing is touching the unit.
Door does not close completely	Unit not level; gasket dirty or damaged; shelves out of position.	Level the unit; clean or replace gasket; reposition shelves.

7. Specifications

Feature	Specification
Brand	FoMup
Model Info	FM24S-3
Capacity	4.9 Cubic Feet (approx. 180 cans)
Product Dimensions (D x W x H)	22.64 x 23.42 x 34.25 inches
Item Weight	82.5 pounds
Installation Type	Undercounter
Material Type	Stainless Steel
Color	Silver Stainless Steel
Voltage	115 Volts (AC)
Wattage	100 watts
Noise Level	42 dB
Defrost System	Frost Free
Special Features	Adjustable Shelves, Digital Temperature Control, Door Lock, Front Ventilation, Frost Free
Annual Energy Consumption	175 Kilowatt Hours Per Year



Image: Detailed product dimensions, including the height of the casters.

8. Warranty and Customer Support

8.1 Warranty Information

Your FoMup Outdoor Refrigerator comes with a 1-year warranty, as indicated by the badge on the product. Please refer to your purchase documentation for specific terms and conditions.

8.2 Customer Support

For any questions, technical assistance, or warranty claims, please contact FoMup customer support. Our team is available to provide quick solutions and help resolve any issues you may encounter with your product.
Contact information can typically be found on the FoMup official website or through your retailer.

9. Additional Information

This manual does not include embedded videos as the necessary metadata (creator type, filenames) was not available

in the provided product information to ensure compliance with embedding guidelines.

© FoMup. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CBVDBSR6

More documents and user manuals: **https://manuals.plus/**