Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

WOLWES CS-SMR510VX

WOLWES Battery Replacement for Eureka P/N: i5 User Manual

Model: CS-SMR510VX

Introduction

This manual provides essential information for the safe and effective use of your WOLWES CS-SMR510VX replacement battery, designed for Eureka P/N: i5 vacuum cleaners. This high-capacity Li-ion battery offers a reliable power source, ensuring optimal performance for your device. Please read this manual thoroughly before installation and use.

Safety Information and Warnings

WARNING: Failure to follow these safety instructions could result in fire, electric shock, injury, or damage to the battery or device.

- **DO NOT ATTEMPT TO DISASSEMBLE, OPEN OR SERVICE THE BATTERY PACK.** This battery pack is a sealed unit and contains no user-serviceable parts. Disassembly voids the warranty and can lead to dangerous situations.
- **DO NOT CRUSH, PUNCTURE, SHORT EXTERNAL CONTACTS OR DISPOSE OF IN FIRE OR WATER.** Such actions can cause the battery to overheat, explode, or leak, leading to severe injury or fire.
- **DO NOT STORE ABOVE 60°C (140°F).** High temperatures can degrade battery performance and pose a safety risk.
- **REPLACE ONLY WITH THE BATTERY PACK DESIGNED FOR THIS PRODUCT.** Using an incompatible battery may damage your device or cause safety hazards.
- Keep the battery away from children and pets.
- If the battery leaks, avoid contact with skin and eyes. If contact occurs, flush with plenty of water and seek medical attention.
- Dispose of used batteries according to local regulations. Do not dispose of with household waste.

Specifications

Attribute	Value
Merchandise Type	Li-ion

Voltage	14.8V
Capacity	3400mAh / 50.32Wh
Dimensions (Battery)	75.50 x 42.50 x 42.00mm (2.97 x 1.67 x 1.65 inches)
Weight	251g
Model Number	CS-SMR510VX
Manufacturer	WOLWES
Limited Charge Voltage	16.8V ± 0.05V
Standard	GB 31241-2014

Setup and Installation

Before installing the new battery, ensure your Eureka vacuum cleaner is turned off and unplugged from any power source. Refer to your vacuum cleaner's original manual for specific battery compartment access instructions.

1. **Locate the Battery Compartment:** Identify the battery compartment on your Eureka P/N: i5 vacuum cleaner. This is typically secured by screws or latches.
2. **Remove Old Battery:** Carefully open the compartment. Disconnect the old battery's connector from the vacuum cleaner's port. Gently lift and remove the old battery.
3. **Insert New Battery:** Align the WOLWES CS-SMR510VX replacement battery with the compartment. Ensure the connector cable is positioned correctly.
4. **Connect Battery:** Firmly plug the battery's connector into the corresponding port on your vacuum cleaner. Ensure a secure connection.
5. **Secure Compartment:** Close the battery compartment cover and secure it with any screws or latches that were removed.
6. **Initial Charge:** It is recommended to fully charge the new battery before its first use. Plug your vacuum cleaner into its charger and allow it to charge until the charging indicator shows a full charge.



Figure 1: Top view of the WOLWES CS-SMR510VX battery, displaying its model number, rating, and important safety warnings.



Figure 2: Angled view of the battery, highlighting the integrated wire harness and connector for easy installation.

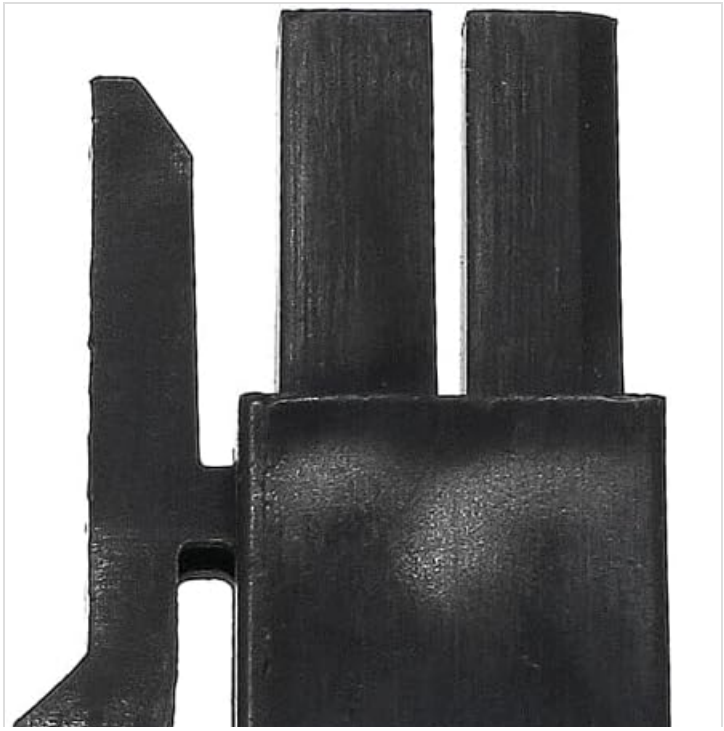




Figure 3: Detailed view of the battery's connector, illustrating the color-coded wires for proper connection.

Operating Instructions

Once the WOLWES replacement battery is installed and fully charged, your Eureka vacuum cleaner is ready for use. The battery functions identically to the original battery it replaces.

- **Charging:** Always use the original charger provided with your Eureka vacuum cleaner. Ensure the vacuum is properly connected to the charger when not in use to maintain optimal battery life.
- **Usage:** Operate your vacuum cleaner as per its original manufacturer's instructions. The WOLWES battery is

designed to provide consistent power throughout its discharge cycle.

- **Battery Life:** The actual operating time will vary depending on the vacuum cleaner's model, power settings, and the type of cleaning being performed.

Maintenance

Proper maintenance can extend the life of your WOLWES replacement battery.

- **Regular Charging:** For optimal performance, charge the battery regularly, even if the vacuum is not used frequently. Avoid leaving the battery completely discharged for extended periods.
- **Storage:** If storing the battery for a long period, ensure it is charged to about 50-70% capacity and stored in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Cleaning:** Keep the battery and its contacts clean and free from dust or debris. Use a dry, soft cloth to wipe the battery if necessary. Do not use liquids or abrasive cleaners.
- **Avoid Overheating:** Do not expose the battery to excessive heat. Ensure proper ventilation around the vacuum cleaner during charging and operation.

Troubleshooting

If you encounter issues with your WOLWES replacement battery, consider the following common solutions:

- **Battery Not Charging:**
  - Ensure the vacuum cleaner is properly plugged into the charger and the power outlet is functional.
  - Check if the battery connector is securely seated in the vacuum's port.
  - Verify that the charger itself is working correctly (e.g., by testing with another device if possible).
  - Ensure the battery compartment is fully closed and secured.
- **Short Operating Time:**
  - Ensure the battery has been fully charged before use.
  - Operating the vacuum on high-power settings or for extended periods on thick carpets can reduce battery life.
  - Over time, all rechargeable batteries experience capacity degradation. If the battery is old, it may be reaching the end of its lifespan.
- **Vacuum Not Turning On:**
  - Confirm the battery is correctly installed and connected.
  - Check if the battery has sufficient charge.
  - If the vacuum still does not turn on, the issue might be with the vacuum cleaner itself, not the battery. Consult your vacuum's original manual or manufacturer.

If these steps do not resolve the issue, please contact WOLWES customer support for further assistance.

Warranty and Support

WOLWES stands behind the quality of its products.

- **Warranty:** This WOLWES replacement battery includes a **30-day Money Back Guarantee** and a **1-YEAR Warranty** from the date of purchase. This warranty covers manufacturing defects and issues arising from normal use. It does not cover damage caused by misuse, unauthorized modification, or failure to follow the instructions in this manual.

- **Customer Support:** For technical assistance, warranty claims, or any questions regarding your WOLWES battery, please contact our customer support team. Refer to the product packaging or the retailer's website for the most current contact information.

© 2024 WOLWES. All rights reserved.
WOLWES is a registered trademark.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CBW49T7S

More documents and user manuals: **https://manuals.plus/**