Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

X88 X88MINI13

X88 Mini 13 Android 13.0 TV Box User Manual

Brand: X88 | Model: X88MINI13

1. Introduction and Overview

The X88 Mini 13 Android TV Box is a powerful smart home player designed to deliver an immersive entertainment experience. Equipped with Android 13.0 OS and a robust RK3528 Quad-Core Cortex-A53 CPU, it offers stable and smooth performance for all your media needs. This device supports 8K HDR10+ Ultra HD video playback, dual-band Wi-Fi (2.4G/5.8Ghz), and features ample memory and storage for applications and content.
This manual provides essential information for setting up, operating, maintaining, and troubleshooting your X88 Mini 13 TV Box to ensure optimal performance and enjoyment.

2. What's in the Box

Upon opening the package, please verify that all the following items are included:

- X88 Mini 13 Android TV Box
- Remote Control
- Power Adapter
- HDMI Cable
- User Manual



Image: Contents of the X88 Mini 13 TV Box package.

Unboxing Video

Video: An unboxing demonstration of the X88 Mini 13 TV Box, showing the contents and initial handling of the device and accessories.

3. Setup Guide

Setting up your X88 Mini 13 TV Box is a straightforward process. Follow these three simple steps to get started:

1. **Connect TV Box to TV:** Use the provided HDMI cable to connect the HDMI port on the TV Box to an available HDMI input on your television. Ensure the power adapter is connected to the DC IN port on the TV Box and plugged into a power outlet.
2. **Connect to Internet:** For optimal performance, connect an Ethernet cable from your router to the Ethernet port on the TV Box. Alternatively, you can connect wirelessly via Wi-Fi during the initial setup process.
3. **Start in Streaming:** Power on your TV and select the correct HDMI input. The TV Box will boot up, and you

can follow the on-screen instructions to complete the initial setup, including Wi-Fi configuration if not using Ethernet.



Image: Visual guide for the three-step setup process.

4. Operating Instructions

Once your X88 Mini 13 TV Box is set up, you can begin exploring its features. The device runs on Android 13.0, providing a user-friendly interface for navigation.

4.1 Navigating the Interface

Use the included remote control to navigate the Android TV interface. The directional pad and 'OK' button are used for selection, while the 'Back' and 'Home' buttons allow you to return to previous screens or the main menu.

4.2 Installing Applications

The TV Box comes with pre-installed applications and access to the Google Play Store. You can download and install a wide variety of streaming apps, games, and utilities directly from the Play Store. Ensure you have a Google account logged in to access these services.

4.3 Media Playback

The X88 Mini 13 supports various media formats and resolutions up to 8K. You can play local media files from USB drives or microSD cards, or stream content from online services. The device also supports 3D video playback for compatible content.

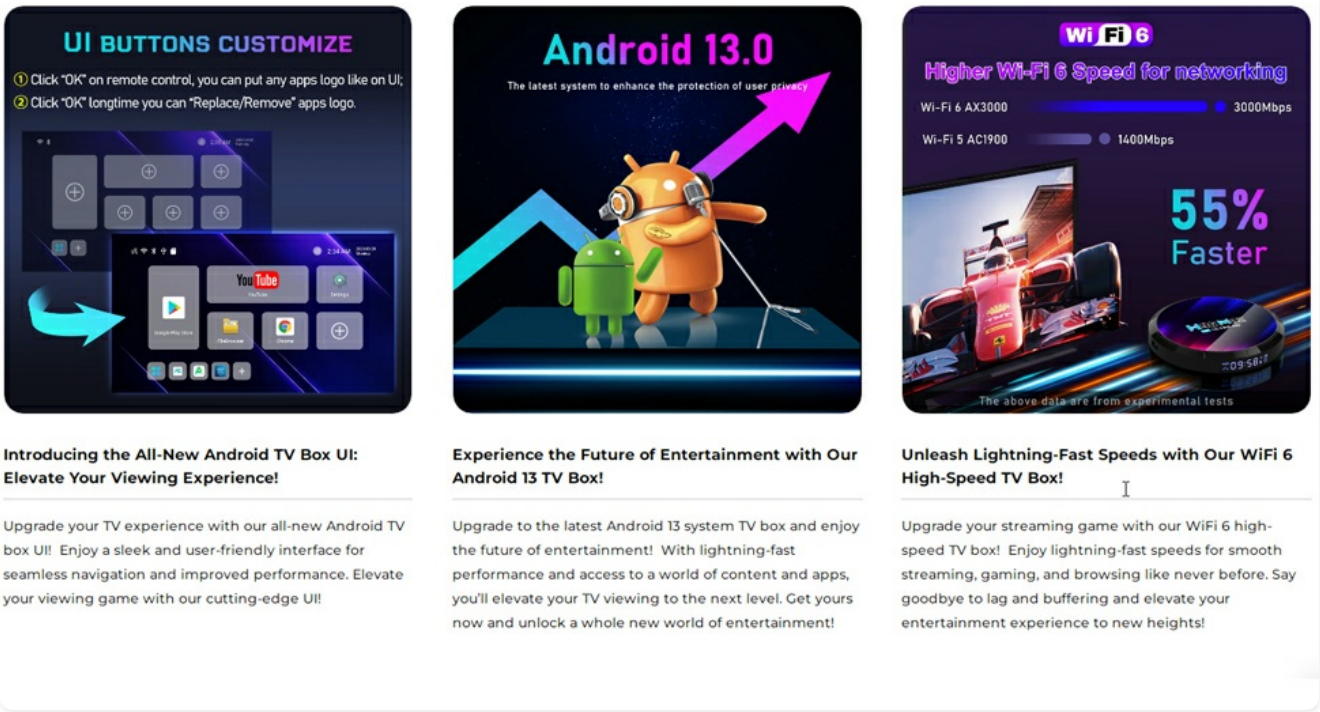


Image: Examples of entertainment and productivity uses for the TV Box.

4.4 Mirroring Cast Function

The TV Box features a Mirroring Cast function, allowing you to transmit video content from your smartphone or tablet directly to your large TV screen. This is ideal for sharing photos, videos, or presentations.

5. Key Features

5.1 Android 13.0 OS & Powerful RK3528 CPU

The X88 Mini 13 runs on the latest Android 13.0 operating system, offering enhanced speed, efficiency, and stability compared to previous versions. It is powered by the RK3528 Quad-Core Cortex-A53 processor, ensuring smooth multitasking and responsive performance for demanding applications and high-resolution media.



Image: Android 13.0 OS and RK3528 processor details.



Image: Android 13 and Quad Core processor icons.

5.2 Memory and Storage

With 4GB DDR3 RAM and 64GB eMMC ROM, the X88 Mini 13 provides ample space for running applications smoothly and storing large media files. Storage can be further expanded using an external hard drive, USB device, or microSD card to meet your personal needs.

5.3 Dual-Band Wi-Fi and Ethernet

The TV Box supports 2.4GHz and 5.8GHz dual-band Wi-Fi, along with 100M Ethernet, ensuring stable and reliable network performance for seamless streaming and browsing. This dual-band capability provides faster transmission speeds and greater stability.



Image: Dual-band 2.4G/5G Wi-Fi connectivity.



Image: 5G and 2.4G Wi-Fi icons.

5.4 8K H.265 Decoding & 3D Support

Experience stunning visual quality with support for 4K/8K H.265 ultra-high-definition content. The TV Box also allows you to watch 3D movies at home, providing an immersive cinematic experience.



Image: 8K decode support for an amazing visual experience.

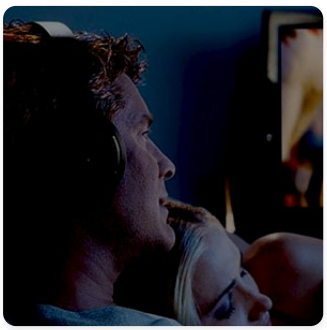


Image: Enjoying media content with the TV Box.

5.5 Connectivity Ports

The X88 Mini 13 TV Box offers a variety of ports for versatile connectivity:

- **DC IN:** For power adapter connection.
- **Ethernet:** For wired network connection.
- **HDMI:** For connecting to your TV or display.
- **AV:** For older TVs or audio output.
- **IR:** For external IR receiver (if applicable).
- **USB 2.0:** Two ports for connecting USB devices like flash drives, keyboards, or mice.
- **TF Card Slot:** For expanding storage with a microSD card.

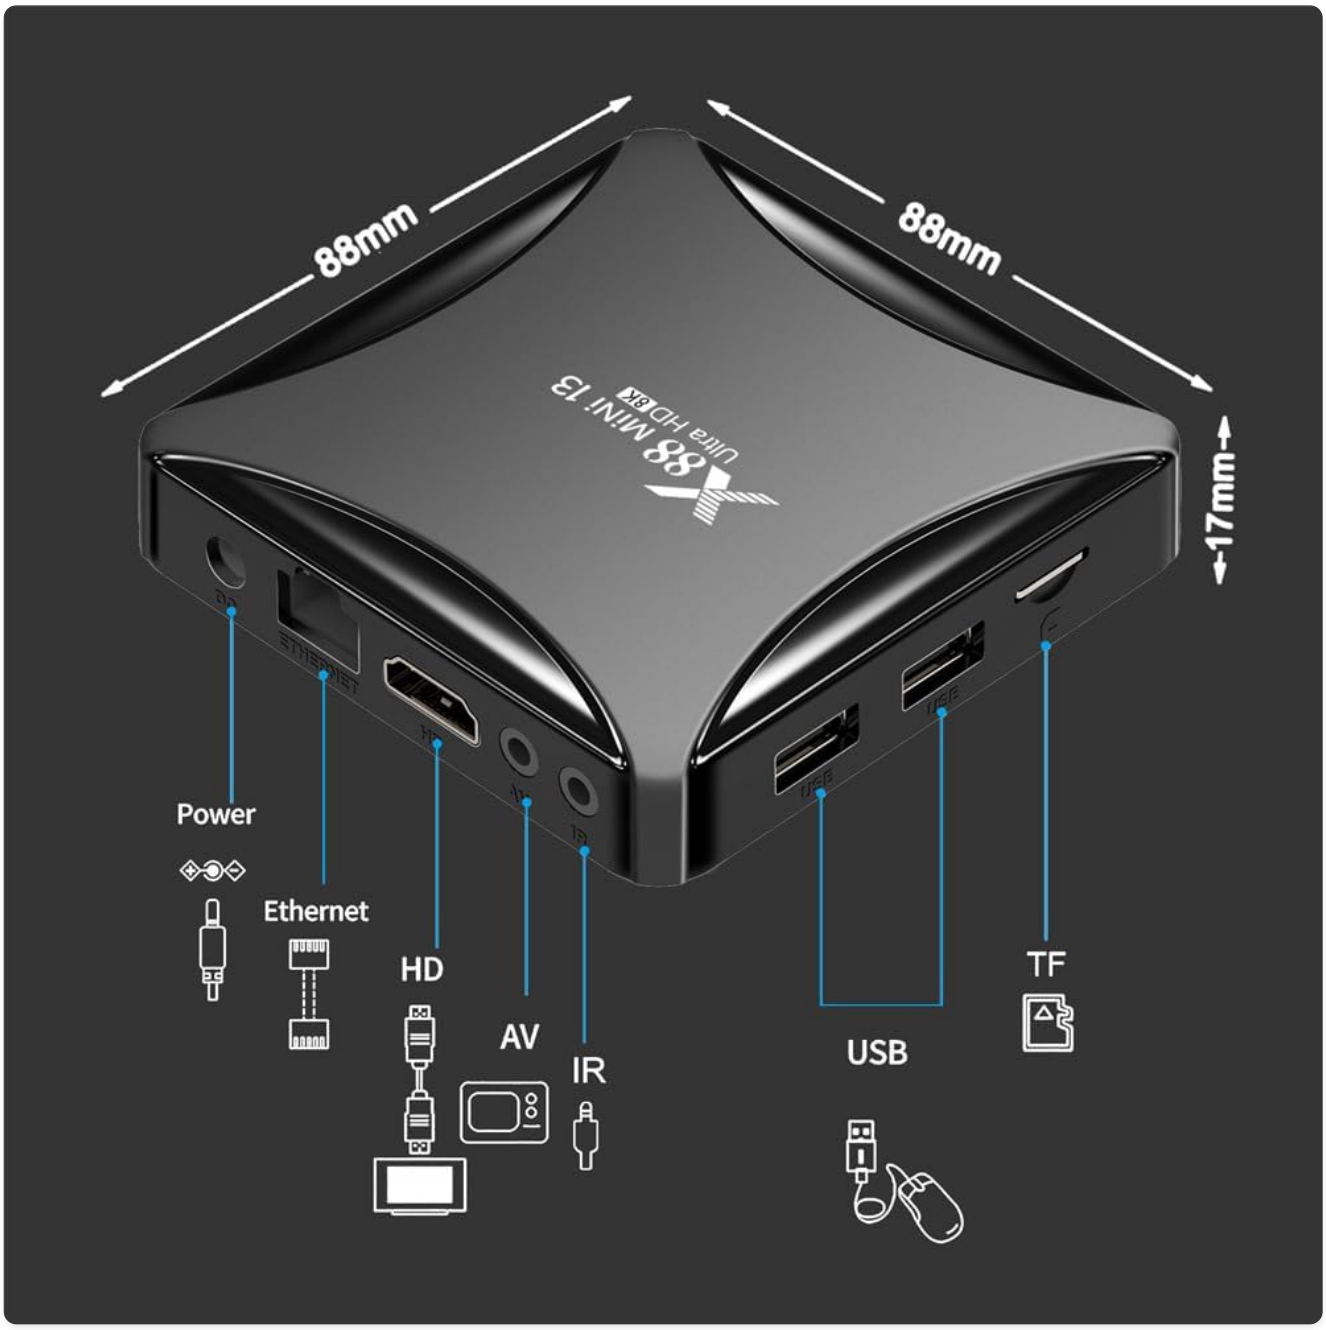


Image: Detailed diagram of the TV Box's connectivity ports.

6. Maintenance

To ensure the longevity and optimal performance of your X88 Mini 13 TV Box, follow these maintenance guidelines:

- **Keep Clean:** Regularly wipe the device with a soft, dry cloth to remove dust. Avoid using liquid cleaners or abrasive materials.
- **Ventilation:** Ensure the TV Box is placed in a well-ventilated area to prevent overheating. Do not cover

ventilation openings.

- **Power Off Properly:** Always shut down the device correctly through the system menu before unplugging it from the power source.
- **Avoid Extreme Conditions:** Do not expose the device to extreme temperatures, humidity, or direct sunlight.
- **Software Updates:** Periodically check for and install system updates to ensure you have the latest features and security patches.

7. Troubleshooting

If you encounter issues with your X88 Mini 13 TV Box, refer to the following common problems and solutions:

- **No Power:**
  - Ensure the power adapter is securely connected to the TV Box and the power outlet.
  - Try a different power outlet.
- **No Signal on TV:**
  - Verify the HDMI cable is securely connected to both the TV Box and the TV.
  - Ensure your TV is set to the correct HDMI input source.
  - Try a different HDMI port on your TV or a different HDMI cable.
- **Wi-Fi Connection Issues:**
  - Check if your router is working correctly.
  - Restart the TV Box and your router.
  - Ensure you have entered the correct Wi-Fi password.
  - Move the TV Box closer to the router or use an Ethernet connection.
- **Applications Crashing or Freezing:**
  - Close and restart the application.
  - Clear the app's cache and data in the Android settings.
  - Ensure the TV Box has sufficient free storage space.
  - Update the application to its latest version.
- **Remote Control Not Responding:**
  - Check and replace the batteries in the remote control.
  - Ensure there are no obstructions between the remote and the TV Box's IR receiver.

8. Specifications

Feature	Specification
Brand Name	X88
Model Name	X88 MINI 13
Operating System	Android 13.0

Feature	Specification
Processor	RK3528 Quad Core Cortex-A53
RAM	4GB DDR3
ROM	64GB eMMC
Connectivity	Wi-Fi (2.4G/5.8G Dual-band), USB, Ethernet
Video Resolution	Up to 8K H.265, HDR10+
Special Features	Miracast, 3D Support
Ports	HDMI, AV, DC IN, Ethernet, 2x USB 2.0, TF Card Slot
Item Weight	10 ounces
Product Dimensions	3.46 x 3.46 x 0.67 inches
Color	Black

9. Warranty and Support

The X88 Mini 13 TV Box typically comes with a manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions, including warranty period and coverage details.
For technical support, troubleshooting assistance beyond this manual, or warranty claims, please contact the seller or manufacturer directly. Contact information can usually be found on the product packaging, the included user manual, or the seller's official website.
Additional protection plans may be available for purchase to extend coverage beyond the standard warranty period.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CBWKQNCQ

More documents and user manuals: **https://manuals.plus/**