Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Xilecam L500S

Xilecam L500S 4K WiFi Action Camera

User Manual

Introduction

The Xilecam L500S is a versatile 4K Ultra HD Action Camera designed to capture your adventures with stunning clarity. It features professional 4K video recording at 30 frames per second and 16-megapixel photos. Equipped with dual color screens, including a 1.3-inch front screen for easy selfies, and built-in Wi-Fi for seamless connectivity with the X-Sport Pro app, this camera allows you to download and share your content effortlessly. Its robust waterproof design enables underwater use up to 40 meters (131 feet), making it ideal for water sports and exploring the underwater world. The package includes two 1350mAh rechargeable batteries and a range of multi-functional accessories to suit various scenarios.



The Xilecam L500S Action Camera, designed for capturing dynamic moments.

Setup

1. **Charging Batteries:** Before first use, fully charge both 1350mAh batteries using the provided charger and USB cable. Insert batteries correctly into the charger. A full charge is indicated by the charger's LED light.
2. **Inserting MicroSD Card:** Insert a Class 10 or higher MicroSD card (up to 64GB, not included) into the camera's card slot. Ensure the card is formatted in the camera settings before recording to ensure optimal performance.
3. **Attaching Waterproof Case:** For underwater activities or protection against impact, place the camera inside the waterproof case. Ensure the case is properly sealed before submersion. The camera is waterproof up to 40 meters (131 feet) when inside its case. Always test the empty case for leaks before first use.



The Xilecam L500S in its waterproof housing, capable of depths up to 40 meters (131 feet).

4. **Mounting Accessories:** Utilize the included multi-functional accessories to mount your camera on helmets, bicycles, or other gear. Refer to the accessory diagram for proper attachment and secure fastening.



A comprehensive view of the Xilecam L500S Action Camera and its various mounting accessories.

Operating Instructions

1. **Power On/Off:** Press and hold the **Power/Mode** button (usually on the front or top) for a few seconds to turn the camera on or off.
2. **Mode Switching:** Press the **Power/Mode** button repeatedly to cycle through video, photo, playback, and settings modes. The current mode will be displayed on the screen.



The Xilecam L500S supports multi-function shooting for various activities like skiing.

3. **Recording Video:** In video mode, press the**Shutter/OK** button (usually on top) to start recording. A red indicator light will flash. Press again to stop recording.
4. **Taking Photos:** In photo mode, press the**Shutter/OK** button to capture a still image. The screen may flash briefly.
5. **Dual Screen Functionality:** The camera features a 1.3-inch front screen for convenient selfies and vlogging, and a larger rear screen for general viewing and settings. Switch between screens as needed using the designated button (refer to camera diagram).



The dual color screen allows for easy framing of selfies and vlogs, as shown with a skydiving couple.

6. **Zoom Function:** Use the dedicated zoom buttons (if available) or navigate through the settings menu to adjust the 4x digital zoom for closer shots.




The 170-degree wide-angle lens captures a broad perspective, ideal for action shots.

7. **Wi-Fi Connectivity:** Download the 'X-Sport Pro' app from Google Play or Apple App Store. Enable Wi-Fi on the camera via the settings menu. On your smartphone, connect to the camera's Wi-Fi network (SSID and password usually displayed on camera screen). Use the app to control the camera, view live footage, and transfer files.



Connect your Xilecam L500S to your smartphone via Wi-Fi to share content instantly.

8. **Underwater Operation:** Ensure the waterproof case is securely closed and all seals are clean. Operate the camera using the external buttons on the case. Note that audio recording quality will be significantly reduced when the camera is inside the waterproof case.

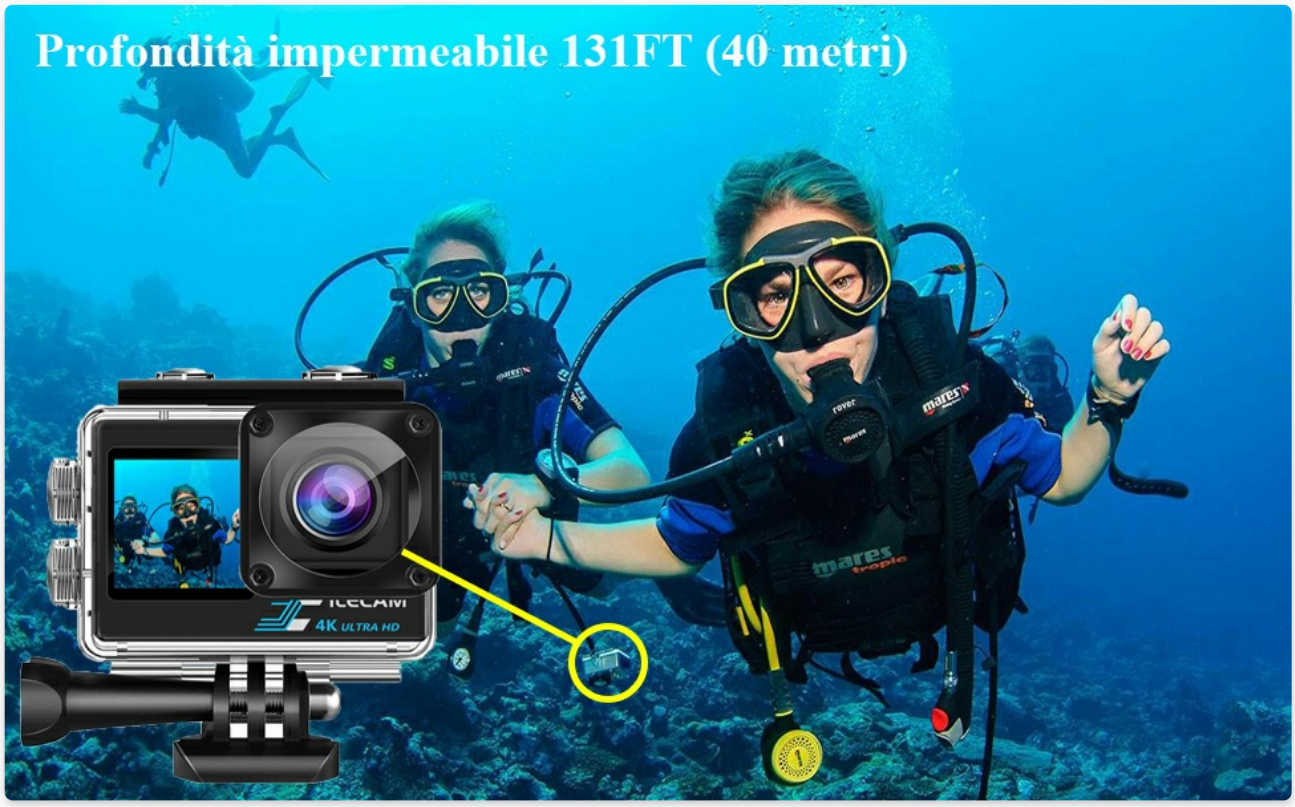

The Xilecam L500S is suitable for capturing underwater adventures with its waterproof housing.

Maintenance

- **Cleaning:** Wipe the camera lens and screens with a soft, lint-free cloth. For stubborn marks, use a specialized lens cleaning solution. Do not use abrasive materials or harsh chemicals.
- **After Underwater Use:** After using the camera underwater, rinse the waterproof case with fresh water and allow it to air dry completely before opening. This prevents salt or chlorine residue buildup and protects the seals.
- **Battery Care:** Store batteries in a cool, dry place. Avoid extreme temperatures. If not using the camera for extended periods, remove the batteries to prevent discharge or damage.
- **Storage:** Store the camera and accessories in a protective case or bag to prevent damage from dust, impacts, and scratches.

Troubleshooting

Camera Not Turning On:

Ensure batteries are fully charged and correctly inserted. Try a different battery if available. If the issue persists, connect the camera to a power source to check if it powers on.

Poor Video/Audio Quality:

Check recording settings (resolution, frame rate) to ensure they are set to your desired quality. Ensure the lens is clean and free of smudges. For audio, note that the waterproof case will significantly muffle sound; remove the case for better audio in dry environments.

Water Leakage:

Immediately remove the camera from the water and dry it. Inspect the waterproof case for cracks or damage to seals. Ensure the case was properly closed and latched before submersion. This product is waterproof up to 40 meters (131 feet) only when correctly sealed within its waterproof housing. Any damage to the case or improper sealing can lead to leaks.

Wi-Fi Connection Issues:

Ensure the 'X-Sport Pro' app is installed and updated on your smartphone. Restart both the camera and your smartphone. Check Wi-Fi settings on both devices to ensure they are attempting to connect to the correct network.

Short Battery Life:
Ensure batteries are fully charged. Reduce screen brightness, turn off Wi-Fi when not in use, and avoid continuous recording at highest resolutions (e.g., 4K) to conserve battery power.

Specifications

Feature	Detail
Brand	Xilecam
Model Name	L500S
Video Capture Resolution	4K
Photo Resolution	16 Megapixels
Connectivity Technology	HDMI, USB, Wi-Fi
Special Feature	Dual Screen (Front 1.3-inch, Rear)
Waterproof Depth	40 meters (131 feet) with waterproof case
Flash Memory Type	SDXC (Class 10, V60 recommended)
Video Capture Format	MP4
Audio Format Supported	AAC
Image Stabilization	No
Lens Type	Zoom (4x Digital)
Viewing Angle	170 Degrees
Batteries	2x 1350mAh rechargeable (included)

Warranty Information

Warranty information for the Xilecam L500S Action Camera is typically provided by the retailer or manufacturer at the time of purchase. Please refer to your purchase documentation or contact the seller directly for specific warranty terms and conditions, including coverage period and claim procedures.

Customer Support

For technical support, troubleshooting assistance beyond this manual, or inquiries regarding parts and service, please contact Xilecam customer service or the retailer where the product was purchased. Keep your purchase receipt and product model number (L500S) handy when contacting support.

© 2024 Xilecam. All rights reserved. Information in this manual is subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CC2MPMGL

More documents and user manuals: **https://manuals.plus/**