Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

GYMAX 3499

GYMAX Picnic Table Model 3499 Instruction Manual

Model: 3499 | Brand: GYMAX

Introduction

This manual provides detailed instructions for the assembly, operation, and maintenance of your GYMAX Picnic Table Model 3499. Please read this manual thoroughly before assembly and use to ensure safe and correct operation. Keep this manual for future reference.



Image: The GYMAX Picnic Table, Model 3499, featuring a brown wood-grain tabletop and black metal frame, set up outdoors with food and beverages.

Important Safety Instructions

- **Proper Assembly:** Ensure all components are correctly assembled and tightened according to the instructions to prevent tipping or instability.
- **Weight Limits:** Do not exceed the maximum weight capacity of 330 lbs for the tabletop and 440 lbs for each bench. Overloading can cause damage or injury.
- **Stable Surface:** Place the picnic table on a flat, stable, and level surface to prevent wobbling or accidental movement.
- **Supervision:** Always supervise children and pets around the picnic table.
- **Regular Inspection:** Periodically check all bolts and connections to ensure they remain tight. Retighten as necessary.
- **Avoid Sharp Objects:** Do not use sharp objects on the tabletop surface to prevent scratches or damage.

Package Contents

Before beginning assembly, verify that all parts listed below are present and undamaged. If any parts are missing or damaged, do not proceed with assembly and contact customer support.

- Tabletop (1)
- Bench (2)
- Main Frame Components (various metal tubes and connectors)
- Hardware Pack (screws, washers, nuts)
- Assembly Guide (this manual)



Image: Product dimensions and weight capacities for the GYMAX Picnic Table, indicating a 54-inch depth, 59-inch width, and 28.5-inch height, with a tabletop capacity of 330 lbs and bench capacity of 440 lbs each.

Assembly Instructions

Assembly of the GYMAX Picnic Table is designed to be straightforward. A screwdriver is recommended for assembly. It is advisable to loosely tighten all screws initially and fully tighten them only after all components are in place.

1. **Step 1: Assemble the Main Frame.** Connect the main frame components using the provided hardware. Ensure all pieces align correctly.
2. **Step 2: Attach Tabletop.** Secure the tabletop to the assembled main frame using the designated screws.
3. **Step 3: Attach Benches.** Connect the two benches to the main frame on either side of the tabletop.
4. **Step 4: Final Tightening.** Once all parts are assembled, go back and securely tighten all screws and bolts. Do not overtighten.

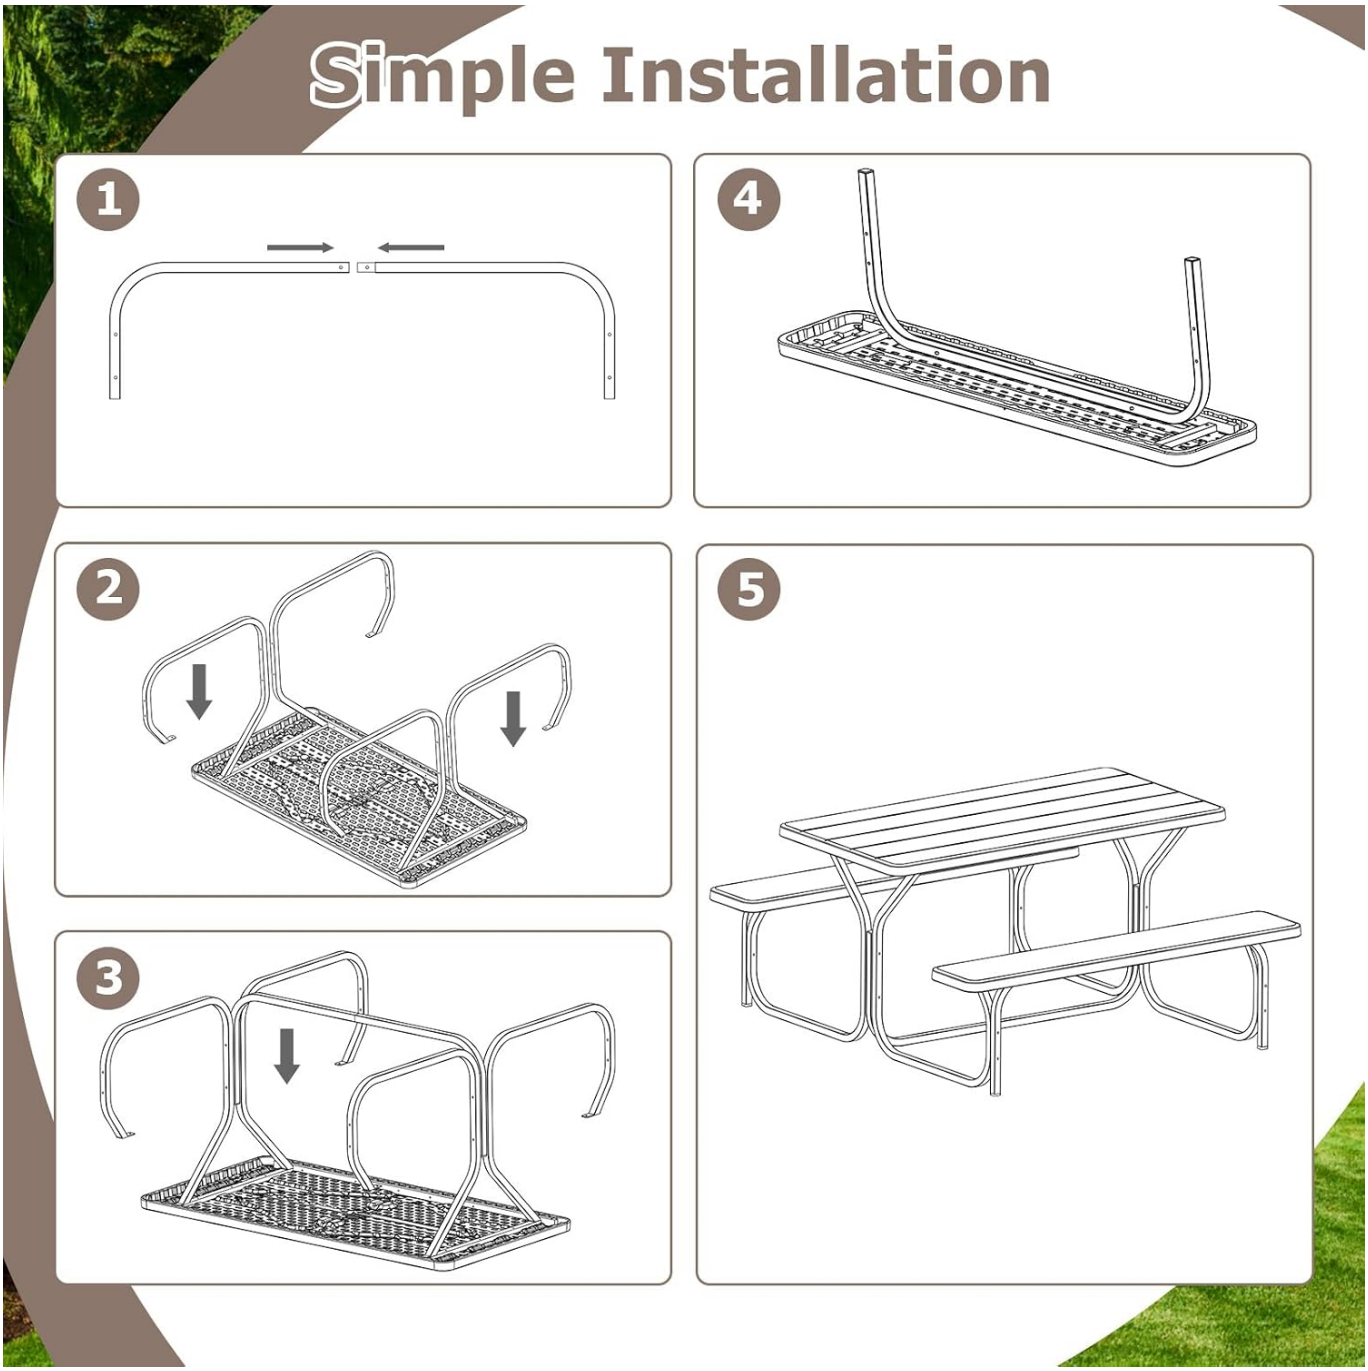


Image: A five-step visual guide illustrating the assembly process of the picnic table, from connecting frame parts to attaching the tabletop and benches.

Operating Instructions

The GYMAX Picnic Table is designed for versatile outdoor and indoor use, accommodating up to 4 adults comfortably. Its convenient slide-in design allows for easy access to seating without needing to step over supports.

- **Placement:** Position the table on a flat, stable surface in your desired location, such as a backyard, patio, deck, or campsite.
- **Seating:** The open-ended design of the benches allows users to slide in easily, which is particularly beneficial for seniors and small children.
- **Multiple Tables:** For larger gatherings, multiple GYMAX Picnic Tables can be lined up to create an extended dining surface.
- **Portability:** Weighing approximately 44 pounds, the table can be moved by two individuals for repositioning or transport for camping and tailgating.



Image: The GYMAX Picnic Table in a backyard, showing four people seated and enjoying a meal, demonstrating its use for outdoor dining.

Care and Maintenance

- **Cleaning:** The HDPE tabletop and metal frame are designed for low maintenance. Simply wipe down the surfaces with a damp cloth to remove dirt and spills. For stubborn stains, a mild soap solution can be used.
- **Weather Resistance:** The table is constructed with all-weather resistant materials. However, for prolonged lifespan, consider storing it indoors or covering it during extreme weather conditions.
- **Inspection:** Periodically check all hardware for tightness and re-tighten as needed to maintain stability.
- **Storage:** When not in use for extended periods, store the table in a dry, protected area to prevent unnecessary wear.



Image: A close-up view highlighting the 2-inch thick premium HDPE tabletop with a wood-grain texture, emphasizing its waterproof and weather-resistant properties.

Troubleshooting

Most issues with the GYMAX Picnic Table can be resolved by ensuring correct assembly and proper placement.

- **Wobbling Table:** If the table wobbles, check that it is placed on a completely flat and level surface. Also, ensure all assembly screws and bolts are fully tightened.
- **Difficulty Assembling:** If you encounter difficulty during assembly, refer back to the "Assembly Instructions" section and the provided diagram. Ensure all parts are oriented correctly before tightening screws. Remember to loosely fit all parts before final tightening.
- **Damaged Parts:** If any parts were damaged upon arrival or during assembly, do not attempt to force them. Contact customer support for assistance.

Product Specifications

Attribute	Detail
Brand	GYMAX
Model Number	3499
Product Dimensions (D x W x H)	54" x 59" x 28.5"
Item Weight	44 Pounds
Tabletop Material	High Density Polyethylene (HDPE)
Frame Material	Powder Coated Metal
Tabletop Weight Capacity	330 Pounds
Bench Weight Capacity (each)	440 Pounds
Seating Capacity	4 Adults
Color	Brown
Product Care Instructions	Wipe with Damp Cloth
Tools Recommended for Assembly	Screw Driver
Indoor/Outdoor Usage	Indoor, Outdoor



Image: Features of the heavy-duty metal frame, including stable I-shaped frame, reinforced connections, and protective foot pads, with weight capacities shown.

Warranty and Customer Support

For any questions regarding your GYMAX Picnic Table, including assembly, missing parts, or operational concerns, please contact GYMAX customer support. Refer to your purchase documentation for specific warranty details and contact information.

You can typically find customer support contact information on the packaging or the retailer's website where the product was purchased.

© 2023 GYMAX. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CC9BLH12

More documents and user manuals: **https://manuals.plus/**