Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

WINGBO SYCF5403

WINGBO 54-inch ABS DC Ceiling Fan User Manual

Model: SYCF5403

1. Introduction

This manual provides detailed instructions for the safe installation, operation, and maintenance of your WINGBO 54-inch ABS DC Ceiling Fan. Please read all instructions carefully before beginning installation and retain this manual for future reference.

The WINGBO 54-inch ceiling fan features a modern design with five wood grain ABS blades and a 6-speed reversible DC motor, providing efficient air circulation for indoor spaces. It includes a remote control for convenient operation.



Image 1.1: WINGBO 54-inch ABS DC Ceiling Fan in Antique Nickel and Grey.

2. Safety Information

WARNING: To reduce the risk of fire, electric shock, or personal injury, always follow these basic precautions:

- Read all instructions before installing the fan.
- Ensure the installation site is structurally sound and can support the fan's weight (approximately 19.76 lbs).
- All wiring must be in accordance with national and local electrical codes. Consult a qualified electrician if you are unsure about wiring procedures.
- Disconnect power at the main circuit breaker before installation or servicing.
- Do not operate the fan with damaged blades or housing.
- Keep hands, clothing, and other objects clear of the fan blades when the fan is operating.
- This fan is designed for indoor use only.

3. Package Contents

Verify that all components listed below are included in your package. If any parts are missing or damaged, contact customer support before proceeding with installation.

- Motor Housing Assembly
- Ceiling Canopy
- Downrods (4.5-inch and 12-inch options)
- Mounting Bracket
- Fan Blades (5)
- Remote Control with Wall Mount
- Hardware Pack (screws, washers, wire nuts)
- Instruction Manual

4. Specifications

Feature	Specification
Brand	WINGBO
Model Name	SYCF5403
Color	Antique Nickel and Grey
Electric Fan Design	Ceiling Fan
Power Source	DC
Style	Modern
Product Dimensions	54"D x 54"W x 21"H
Room Type	Bedroom, Living Room, Kitchen (Indoor)
Special Feature	No Light, Patent No.: D983955S
Finish Type	Brushed
Number of Blades	5
Blade Length	54 Inches
Voltage	12 Volts (DC)
Switch Type	Remote Control
Included Components	Remote
Indoor/Outdoor Usage	Indoor
Control Method	Remote
Efficiency	High
Number of Power Levels	6
Downrod Length	4.5 Inches and 12 Inches (included)

Item Weight	19.76 pounds

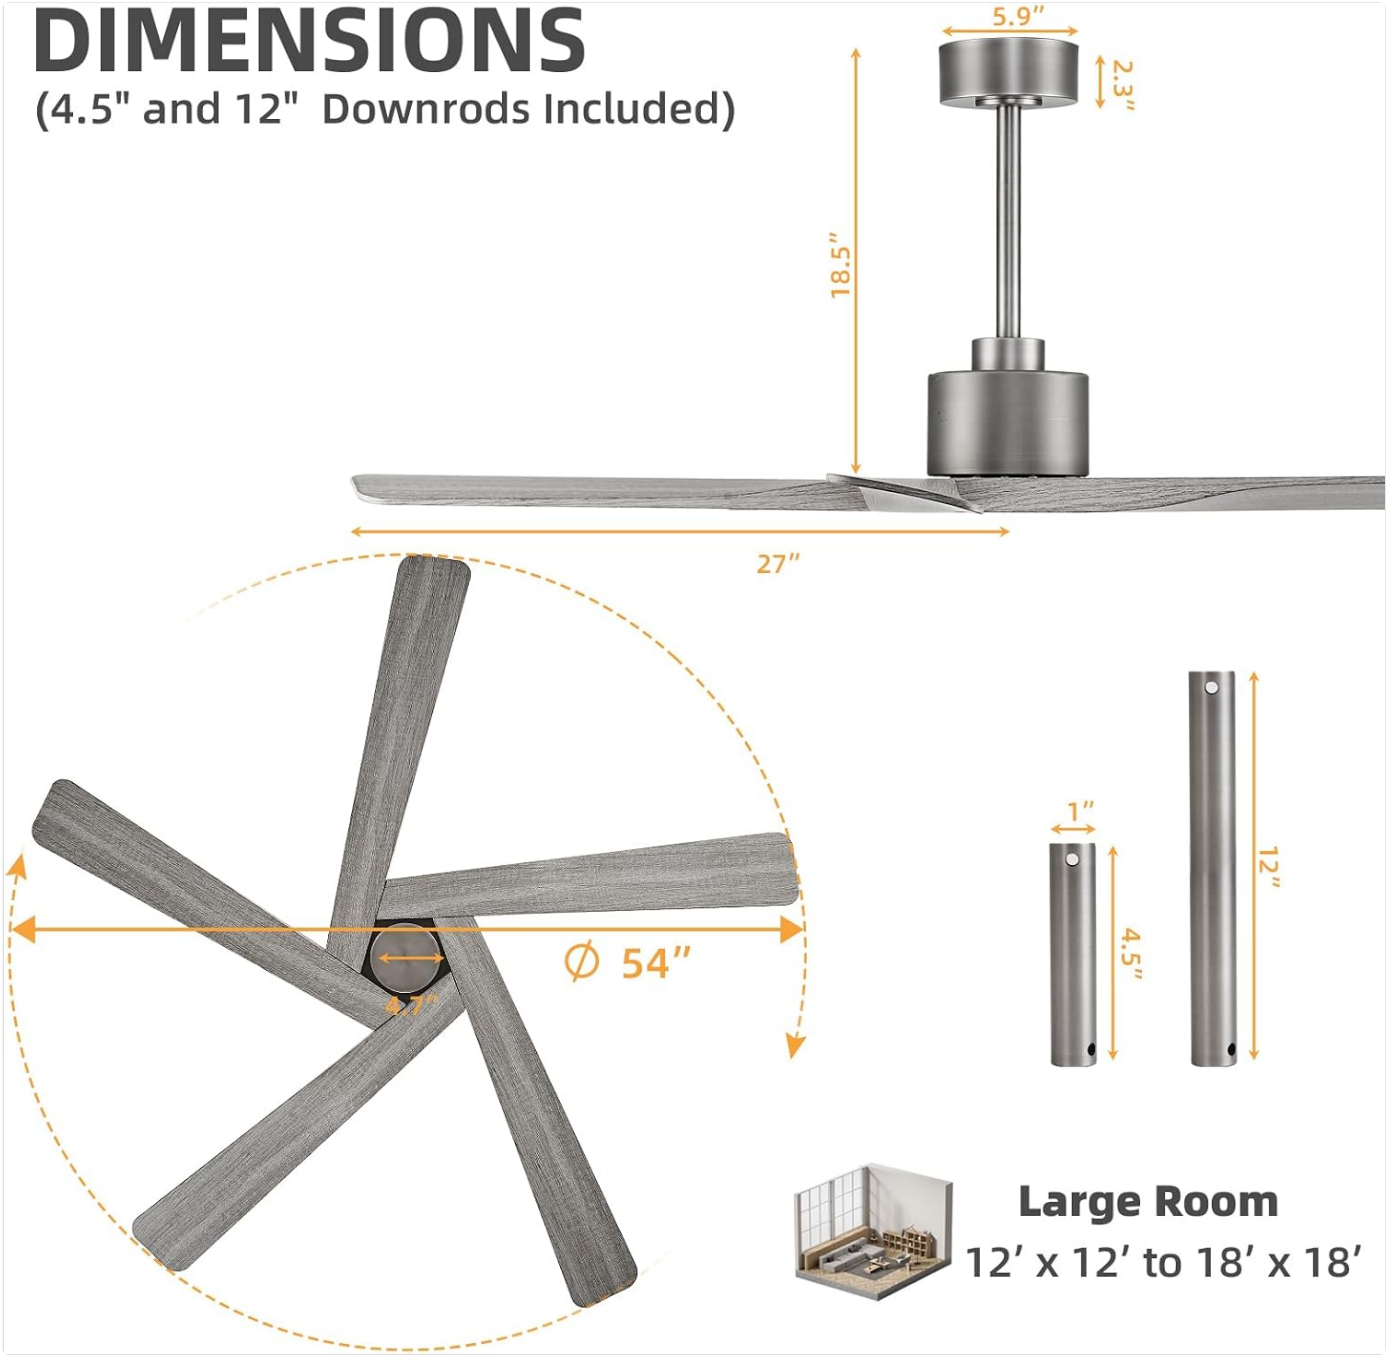


Image 4.1: Detailed dimensions of the fan and included downrods.

5. Setup and Installation

Before you begin: Ensure power is disconnected at the circuit breaker. Have a helper available for installation.

5.1 Mounting the Bracket

1. Secure the mounting bracket to the ceiling junction box. Ensure the junction box is rated for fan support (at least 35 lbs).
2. Use screws and washers provided, tightening them securely.

5.2 Assembling the Fan

3. Insert the chosen downrod (4.5" or 12") into the motor housing and secure it with the provided pin and screw.
4. Carefully feed the electrical wires from the motor through the downrod.
5. Attach the canopy to the downrod.

5.3 Wiring the Fan

6. Hang the fan assembly onto the mounting bracket.
7. Connect the fan's electrical wires to the household wiring according to the wiring diagram in the full manual (typically black to black, white to white, and green/bare copper to ground). Use wire nuts to secure connections.

5.4 Attaching Blades and Canopy

8. Attach each fan blade to the motor housing using the provided screws. Ensure they are firmly secured.
9. Slide the canopy up and secure it to the mounting bracket, covering the wiring connections.



Image 5.1: Illustration of downrod and sloped ceiling mounting options (up to 15 degrees).

6. Operating Instructions

Your WINGBO ceiling fan is operated using the included remote control.



Image 6.1: Remote control for the WINGBO ceiling fan.

6.1 Remote Control Functions

- **Power Button:** Turns the fan ON/OFF.
- **Speed Buttons (1-6):** Adjusts fan speed from 1 (lowest) to 6 (highest).
- **Reverse Button:** Changes the direction of blade rotation.
- **Timer Buttons (1H, 2H, 4H, 8H):** Sets the fan to turn off automatically after the selected duration.

6.2 Fan Speed Settings

The fan offers 6 distinct speed settings to suit your comfort needs:

- **Speeds 1-2:** Gentle airflow, suitable for sleeping or minimal air movement.
- **Speeds 3-4:** Natural wind, ideal for general comfort.
- **Speeds 5-6:** Strong wind, for maximum air circulation.



Image 6.2: Visual representation of the 6 wind speed settings.

6.3 Reverse Cycle Mode

The reversible DC motor allows for year-round use to optimize air circulation.

- **Summer Season (Anti-clockwise):** The fan spins in an anti-clockwise direction to create downdrafts, producing a cooling effect.
- **Winter Season (Clockwise):** The fan spins in a clockwise direction to create updrafts, circulating warm air near the ceiling throughout the room.

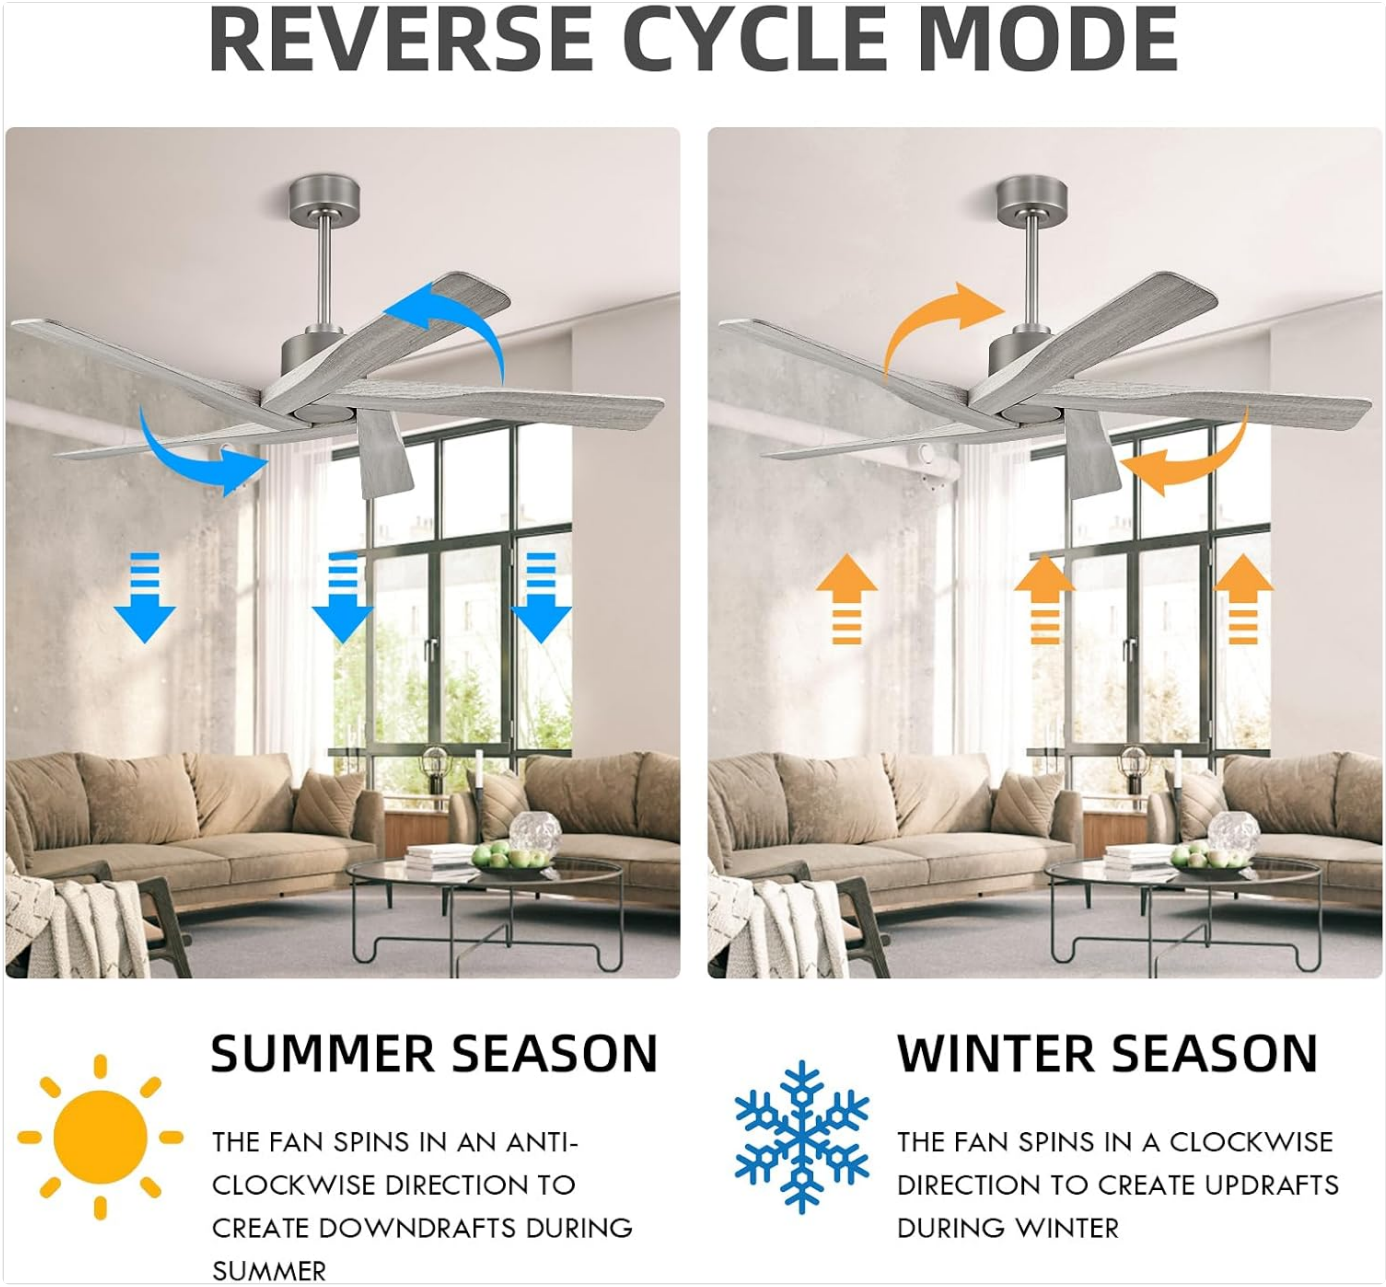


Image 6.3: Explanation of Summer and Winter reverse cycle modes.

7. Maintenance

Regular maintenance ensures optimal performance and extends the life of your ceiling fan.

- **Cleaning:** Periodically wipe the fan blades and motor housing with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Blade Inspection:** Check blades for any cracks or damage. Replace damaged blades immediately.
- **Tightness:** Ensure all screws and connections remain tight. Loose connections can cause noise or wobble.



Image 7.1: High-grade ABS plastic blades are durable and easy to clean.

8. Troubleshooting

If you experience issues with your fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not start	No power to the fan; Loose wire connections; Remote control battery low.	Check circuit breaker; Ensure all wire connections are secure; Replace remote control battery.
Fan is noisy	Loose screws on blades or motor housing; Canopy too tight; Improper installation.	Tighten all screws; Slightly loosen the center cap/canopy if it's causing noise; Recheck installation steps.
Fan wobbles	Loose blades; Uneven blade weight; Loose mounting bracket.	Ensure all blade screws are tight; Use a balancing kit (not included) if necessary; Verify mounting bracket is securely fastened.

9. Warranty and Support

For warranty information or technical support, please refer to the warranty card included with your product or contact WINGBO customer service. Keep your purchase receipt as proof of purchase.
For further assistance, you may visit the WINGBO Store on Amazon.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CCDJ34NC

More documents and user manuals: **https://manuals.plus/**