Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Wostore RME002

Universal AC Remote Control Instruction Manual

Model: RME002 | Brand: Wostore

Introduction

This manual provides comprehensive instructions for the Wostore Universal AC Remote Control (Model RME002). This versatile remote is designed to operate a wide range of air conditioning units, offering 6000-in-1 compatibility. It features an intuitive LCD display and controls for various functions, serving as an ideal replacement for lost or broken AC remotes.



Figure 1: Wostore Universal AC Remote Control (Model RME002)



Figure 2: The universal remote simplifies control by replacing multiple dedicated remotes.

Setup

1. Battery Installation

Open the battery cover on the back of the remote control. Insert two AAA batteries, ensuring correct polarity (+/-). Close the battery cover securely.

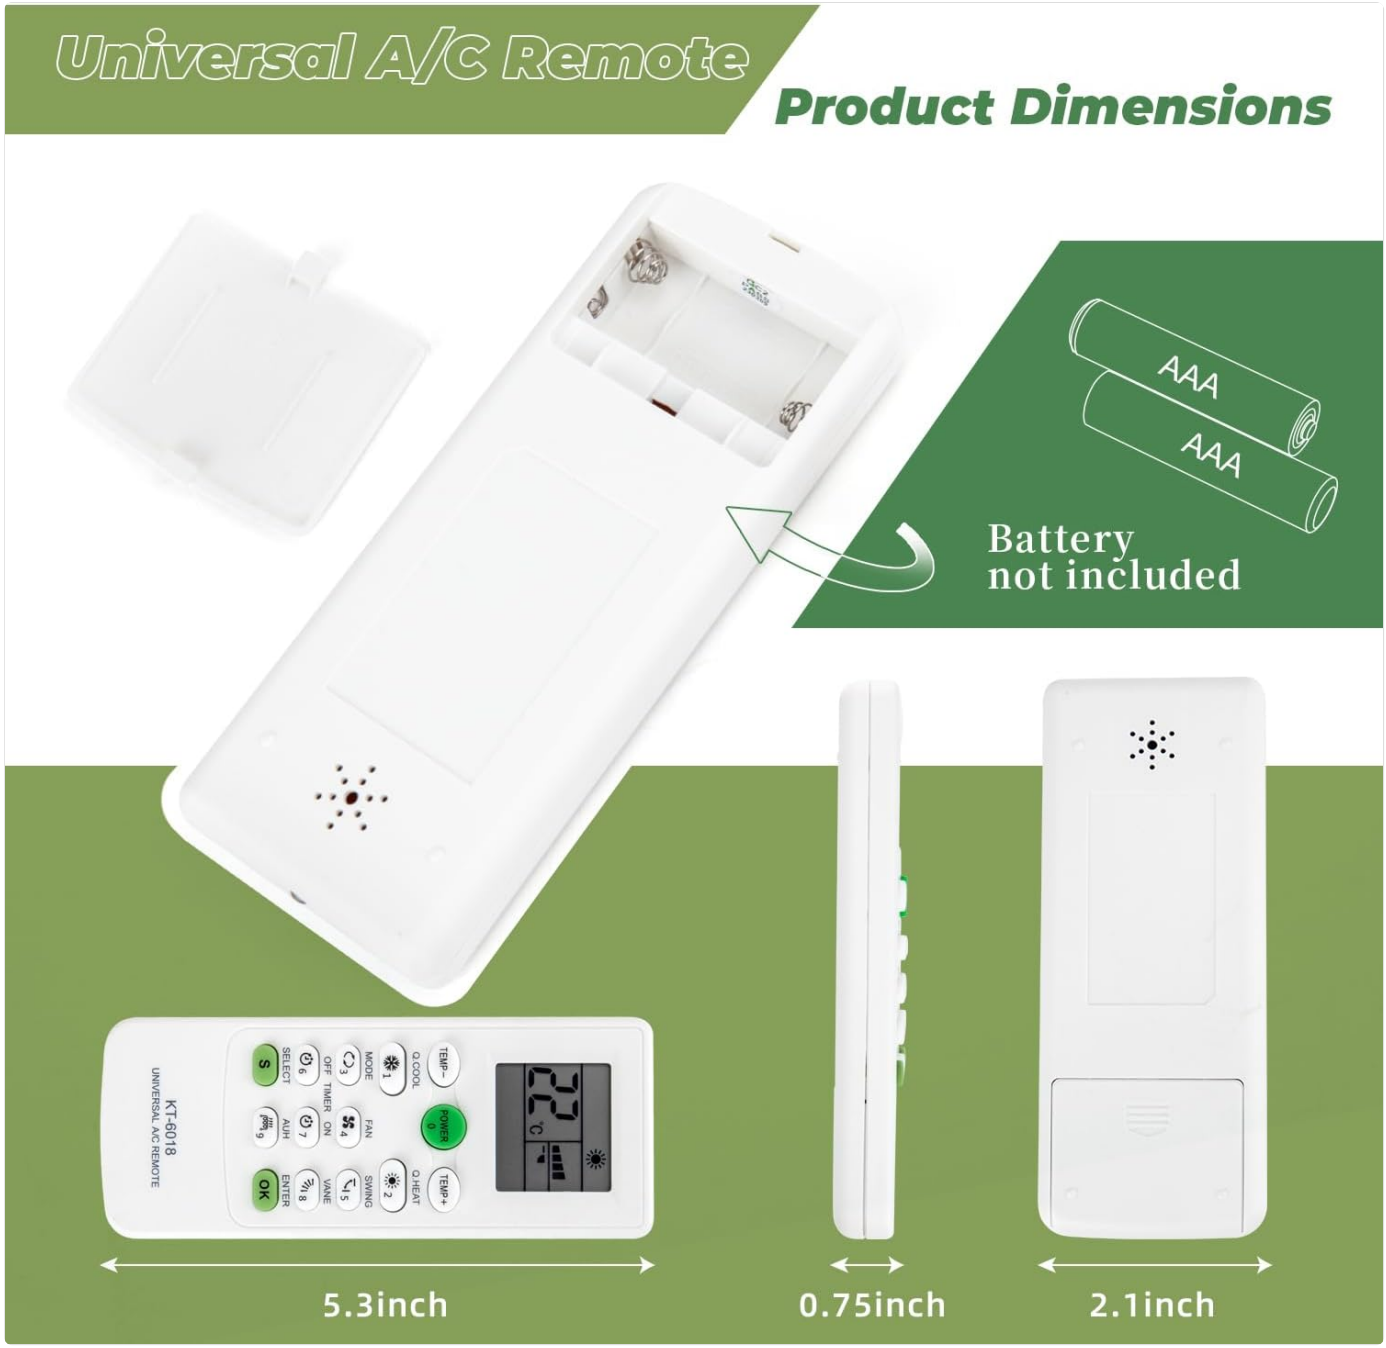


Figure 3: Battery compartment for two AAA batteries.

2. Code Setting for Your AC Unit

The remote control requires a specific code to operate your air conditioning unit. There are two primary methods for setting the code:

Method A: Manual Code Input

1. Identify your AC unit's brand from the provided code list.
2. Press and hold the **SELECT** button for approximately 5 seconds until the code digits on the LCD display start flashing.
3. Input the 3-digit code corresponding to your AC brand using the number buttons (0-9).
4. Press the **OK** button to confirm the code. The code digits will stop flashing.
5. Test the remote by pressing the **POWER** button. If the AC unit responds, the setup is complete. If not, repeat the process with the next code for your brand, or try Method B.

Method B: Automatic Code Search

1. Ensure your AC unit is powered on.
2. Press and hold the **SELECT** button for approximately 5 seconds until the code digits on the LCD display start flashing. The

remote will begin automatically searching for the correct code, indicated by the code digits changing rapidly.

3. Point the remote at your AC unit. When the AC unit responds (e.g., turns on, beeps), immediately press the **OK** button to confirm the code.
4. Test all functions of the remote (temperature, mode, fan speed) to ensure full compatibility. If some functions do not work, repeat the auto-search process to find an alternative compatible code.


Compatible Brands List

Refer to the following images for a comprehensive list of compatible AC brands and their corresponding codes. This list covers a wide range of manufacturers, ensuring broad compatibility for your universal remote.



ACSON	0234,0468	DONGXINBAO	0413,1505,3485,4700-4768
ACTRON AIR	0573	ELCO	0555-0558
AGER/AGREE	0489,0785,0107,0108	ELECTRA	0555-0558
AIRWELL	0529,0555-0558	Electrolux	0216-0220,0268,0300,0534,0569,1244
AITE	0002,0012,0292,0326	EMAILAIR	0127-0135,0553,0556,0558
AKIRA	0310,0311	FEDDERS	0498,0499,0500,0528,4804.4820-4900
ALPIN	0252,0253,1276,1789	FERROLI	0585
AMCOR	0050,0246,0302,0449	FRESTECH	0277,0489,0495-0497,0519,0520,0534,0048,0261,0448,2325
AMICO	0555-0558	FUJITA/FUJIAIRE	0265,0297
ARENA	0206,0212,0229	FUJITSU	0127-0137,0464,0552-0554,0118
ARISTON	026,10265	FUNAI	0430,0481,3041,3502
ARLEC	0202	FUNAI/FUJIN	0430,0481,0802,0942,0002
AUCMA	0288-0296,0302,0462,1826,3534	GE	0047
AuSSIE AIR/ARD	0297,0282,0287	GEEN	0002,0012
AUX	0297-0300,0451,0474,0475,0599,1834,3011	General	0127-0137,0464,0552-0554,2000,3712
BANSHEN	0264,1288,2824	GLEE	0313,2446,2959,5260
BLUESTAR	0261,0265	GOLDSTAR	0201,0466-0469,1737,3539
BLUEWAY	0300	GREE	0309-0316,0398,0399,0482,0490,0512,0513,0591
BOERKA	0383,0434,0436,0437,3506	GUQIAO	0244,0291,1268,2851
BRIVAS	0107	HAIER	0266-0272,0346,0453-0455,0538,0539
CARRIER	0203-0209,0235,0456-0458,0468,0563-0565,0590-0592	HELLER HOFFWEL	0107,0282,0289,0292,0299
CELESTIAL	0307	HICON(HUIKANG)	0016,0368,0441-0443,0207,1978,3440
CHANGHONG	0301-0308,0046,2349,3890,4905	HISENSE	0332-0335,0505-0506,0517,1868,2895
CHANGLING	0002,0012,0119,0191,0192,0261,0298,0369,0630-0633	HITACHI	0118-0126,0605-0607 ,1656,2173
CHIGO	0379-0382,0444-0447,0489,0515,0610,0261,1912,2940	HOFFWELL	0811
CHOFU	0184-0187,1208,2233,4330	HOMEMAKERS	0091,0297-0300,0451,0810
CHUNLAN	0345-0350,0450,0453,0545-0546,3522	HUABAO	0336-0344,2384,2903,4905
CLIMA VENETA	0572	HUAKE	0408,0920,1501,3480
CONIA	0297-0300,0349,0570,0571	HUALING	0317-0325,0452,0207,0234,0261,0523,2365,3524
CONROWA	0377,0889,1315,2937	HUAMEI	0402,0460-0465,2962,3986
CONSUL	0463,1999,3535,4335-4650	HUIFENG	0370,2418,3442
COOL PARTS GC	0416-0418,0002,0456	HYUNDAI	0012,0202,0297,0345,0433,0466,0480,0555,0551,3552
COOLINE	0187,0206	JBS	0202,0273
CORONA	0155-0163,0459,2204,3531	JDC	0373,0440,2488,3957
COUNTRY AIR	0560	JET-AIR/JBS	0169,0202
DAEWOO	0203-0209,0406,1430,3792	JIANGNAN	0432,1456,3607,4906-4915
DAIKIN	0171-0183,0468,0472,0566,0567,0574-0577,0583	JINDA	0414,1950,3998,4655-4669
DEC/DHL	0504,0592	JINSONG	0219,0355,0389-0391,0446-0448,3463
DeLonghi	0232,0482,0484	JOHNSON	0492,0555-0558,2028,3829
DERBY/DIVINCHI	0311,0289,0400	KANGLI	0374,0375,1911,2442
DL	0302	KELON	0282-0287,0416-0418,0473,0485-0488,0501,0534
DOCTOR	0221,0449,0499,1473,3805	KELVINATOR	0151,0197,0203,0107
DONGBAO	021910355-0361,1897,2918,4652	KLIMATAIR	0225,0226.0452,3297

Figure 4: Compatible Brands List (Part 1)

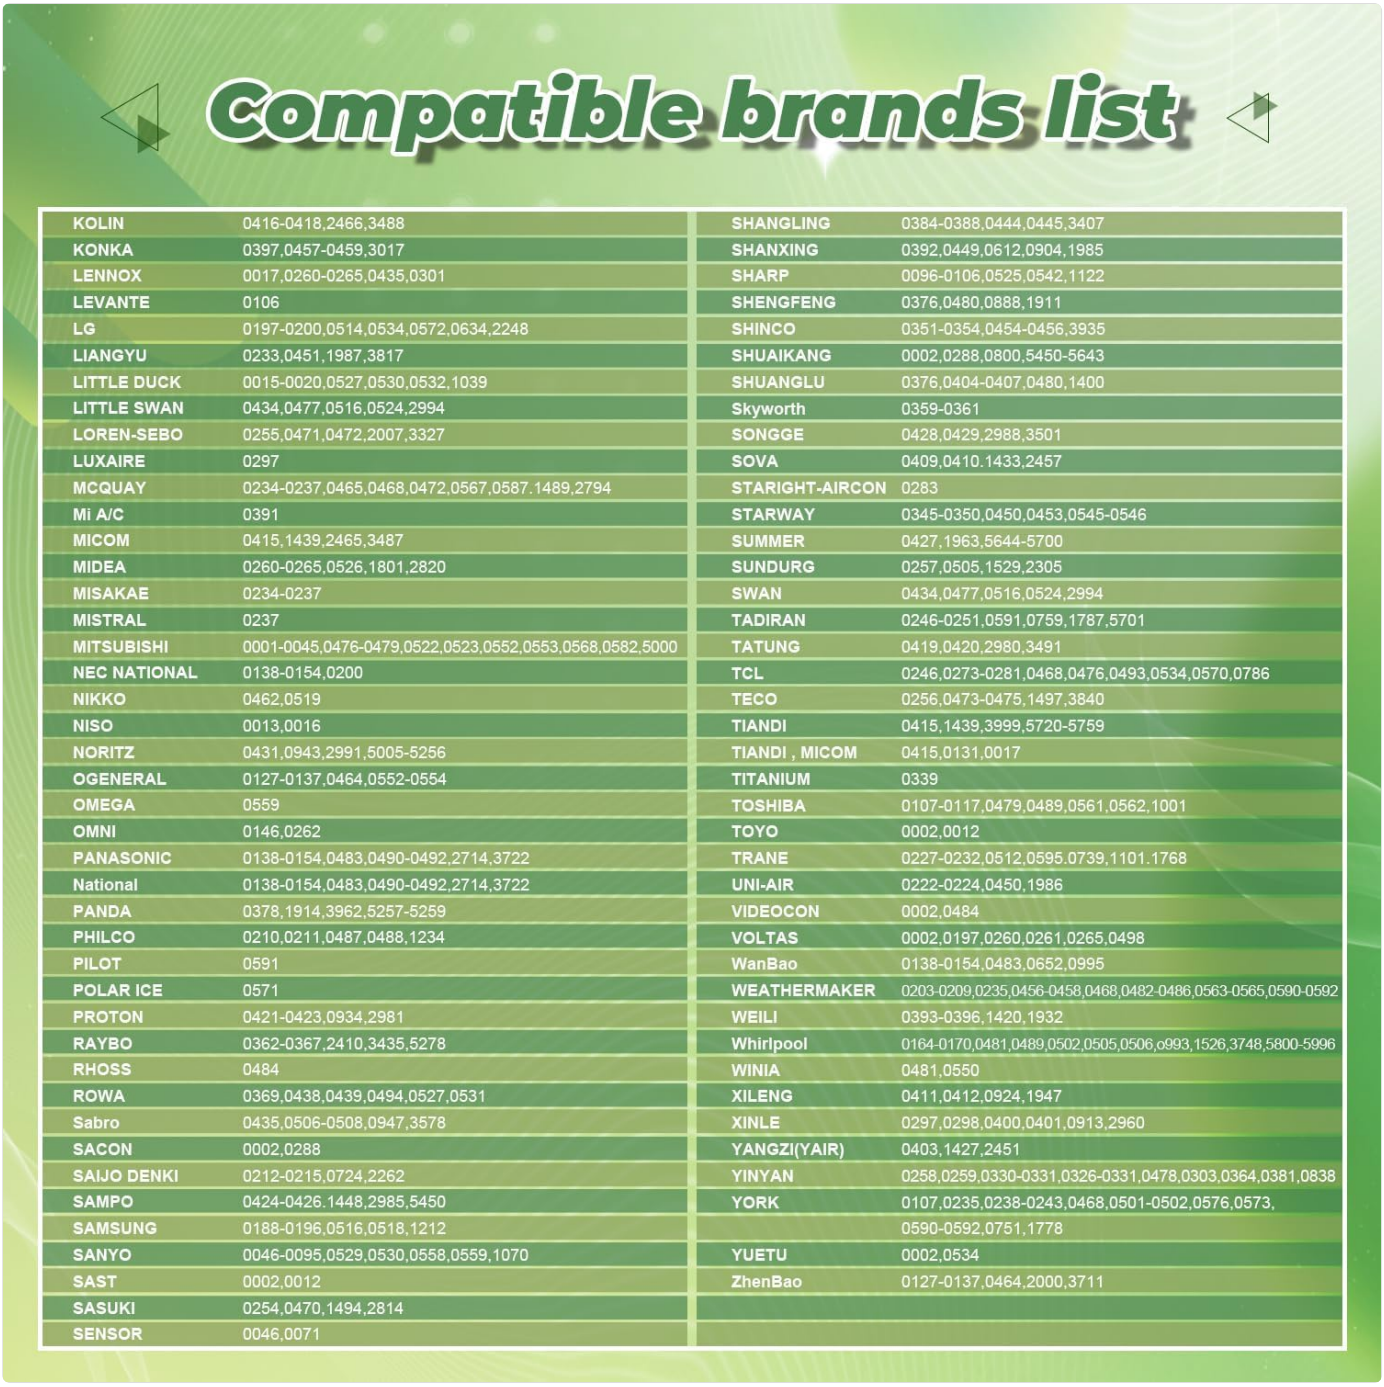

KOLIN	0416-0418,2466,3488	SHANGLING	0384-0388,0444,0445,3407
KONKA	0397,0457-0459,3017	SHANXING	0392,0449,0612,0904,1985
LENNOX	0017,0260-0265,0435,0301	SHARP	0096-0106,0525,0542,1122
LEVANTE	0106	SHENGFENG	0376,0480,0888,1911
LG	0197-0200,0514,0534,0572,0634,2248	SHINCO	0351-0354,0454-0456,3935
LIANGYU	0233,0451,1987,3817	SHUAIKANG	0002,0288,0800,5450-5643
LITTLE DUCK	0015-0020,0527,0530,0532,1039	SHUANGLU	0376,0404-0407,0480,1400
LITTLE SWAN	0434,0477,0516,0524,2994	Skyworth	0359-0361
LOREN-SEBO	0255,0471,0472,2007,3327	SONGGE	0428,0429,2988,3501
LUXAIRE	0297	SOVA	0409,0410.1433,2457
MCQUAY	0234-0237,0465,0468,0472,0567,0587.1489,2794	STARIGHT-AIRCON	0283
Mi A/C	0391	STARWAY	0345-0350,0450,0453,0545-0546
MICOM	0415,1439,2465,3487	SUMMER	0427,1963,5644-5700
MIDEA	0260-0265,0526,1801,2820	SUNDURG	0257,0505,1529,2305
MISAKAE	0234-0237	SWAN	0434,0477,0516,0524,2994
MISTRAL	0237	TADIRAN	0246-0251,0591,0759,1787,5701
MITSUBISHI	0001-0045,0476-0479,0522,0523,0552,0553,0568,0582,5000	TATUNG	0419,0420,2980,3491
NEC NATIONAL	0138-0154,0200	TCL	0246,0273-0281,0468,0476,0493,0534,0570,0786
NIKKO	0462,0519	TECO	0256,0473-0475,1497,3840
NISO	0013,0016	TIANDI	0415,1439,3999,5720-5759
NORITZ	0431,0943,2991,5005-5256	TIANDI , MICOM	0415,0131,0017
OGENERAL	0127-0137,0464,0552-0554	TITANIUM	0339
OMEGA	0559	TOSHIBA	0107-0117,0479,0489,0561,0562,1001
OMNI	0146,0262	TOYO	0002,0012
PANASONIC	0138-0154,0483,0490-0492,2714,3722	TRANE	0227-0232,0512,0595.0739,1101.1768
National	0138-0154,0483,0490-0492,2714,3722	UNI-AIR	0222-0224,0450,1986
PANDA	0378,1914,3962,5257-5259	VIDEOCON	0002,0484
PHILCO	0210,0211,0487,0488,1234	VOLTAS	0002,0197,0260,0261,0265,0498
PILOT	0591	WanBao	0138-0154,0483,0652,0995
POLAR ICE	0571	WEATHERMAKER	0203-0209,0235,0456-0458,0468,0482-0486,0563-0565,0590-0592
PROTON	0421-0423,0934,2981	WEILI	0393-0396,1420,1932
RAYBO	0362-0367,2410,3435,5278	Whirlpool	0164-0170,0481,0489,0502,0505,0506,o993,1526,3748,5800-5996
RHOSS	0484	WINIA	0481,0550
ROWA	0369,0438,0439,0494,0527,0531	XILENG	0411,0412,0924,1947
Sabro	0435,0506-0508,0947,3578	XINLE	0297,0298,0400,0401,0913,2960
SACON	0002,0288	YANGZI(YAIR)	0403,1427,2451
SAIJO DENKI	0212-0215,0724,2262	YINYAN	0258,0259,0330-0331,0326-0331,0478,0303,0364,0381,0838
SAMPO	0424-0426.1448,2985,5450	YORK	0107,0235,0238-0243,0468,0501-0502,0576,0573,
SAMSUNG	0188-0196,0516,0518,1212		0590-0592,0751,1778
SANYO	0046-0095,0529,0530,0558,0559,1070	YUETU	0002,0534
SAST	0002,0012	ZhenBao	0127-0137,0464,2000,3711
SASUKI	0254,0470,1494,2814		
SENSOR	0046,0071		

Figure 5: Compatible Brands List (Part 2)

Operating Instructions

The Wostore Universal AC Remote Control features a clear LCD display and well-labeled buttons for easy operation. Below are the functions of the main buttons:



Figure 6: Key functions of the remote control.

- **POWER:** Turns the AC unit on or off.
- **TEMP+ / TEMP-:** Adjusts the temperature up or down.
- **Q.COOL / Q.HEAT:** Quick cool or quick heat functions for rapid temperature change.
- **MODE:** Cycles through operating modes (e.g., Cool, Heat, Fan, Dry, Auto).
- **FAN:** Adjusts fan speed (e.g., Auto, Low, Medium, High).
- **SWING:** Controls the louver swing direction for optimal air distribution.
- **TIMER ON / TIMER OFF:** Sets a timer for the AC unit to turn on or off automatically.
- **SELECT:** Used during code setting to initiate the search or input process.
- **AUH:** Auxiliary function, specific use may vary by AC model.
- **OK:** Confirms selections or code inputs.

Temperature Unit Conversion

To switch between Celsius (°C) and Fahrenheit (°F) temperature displays, press the **TEMP+** and **TEMP-** buttons simultaneously.

Timer Function

The remote allows you to set a timer for automatic power on or off. Press the **TIMER ON** or **TIMER OFF** button, then use the temperature buttons to adjust the desired time. Press **OK** to confirm. The timer can be set for up to 12 hours.



Figure 7: Utilizing the timer function for convenience and energy saving.

Maintenance

Battery Replacement

When the remote's display becomes dim or the remote stops responding, it's time to replace the batteries. Always replace both AAA batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.

Cleaning

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners, aerosols, or harsh chemicals, as these can damage the

remote's surface or internal components.

Storage

If the remote will not be used for an extended period, remove the batteries to prevent leakage and corrosion. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

Troubleshooting

- **Remote not responding:**
  - Check if batteries are installed correctly and have sufficient power. Replace if necessary.
  - Ensure the remote is pointed directly at the AC unit's infrared receiver.
  - Verify that the correct code for your AC unit has been successfully set. Try re-entering the code or using the automatic code search function.
- **Some functions do not work:**
  - Not all AC units support every function available on the universal remote. This is common with universal remotes.
  - Try using the automatic code search again to find a more compatible code for your specific AC model. Different codes for the same brand might offer varying levels of functionality.
- **Short operating distance:**
  - Ensure there are no obstructions between the remote and the AC unit.
  - Replace the batteries with new ones.

Specifications

Brand	Wostore
Model Number	RME002
Compatible Devices	Air Conditioner
Max Number of Supported Devices	1
Color	WHITE
Special Feature	Universal
Batteries Required	Yes (2 AAA batteries)
Item Weight	2.88 ounces
Package Dimensions	8.62 x 4.41 x 1.1 inches
Country of Origin	China

Warranty and Support

Specific warranty information for the Wostore Universal AC Remote Control (Model RME002) is not provided in this manual. For warranty details, technical support, or further assistance, please refer to the product packaging or contact Wostore customer service directly through their official website or the retailer where the product was purchased.

© 2025 Wostore. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CCHMTNYD

More documents and user manuals: **https://manuals.plus/**