Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

absob AB105

absob AB-105 Cordless Handheld Vacuum Cleaner User Manual

Model: AB-105

Introduction

Thank you for choosing the absob AB-105 Cordless Handheld Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new vacuum cleaner. Please read it thoroughly before first use and keep it for future reference.
The absob AB-105 is designed for convenient and powerful cleaning in both home and car environments. Its lightweight, portable design, combined with strong suction, makes it ideal for quick clean-ups of pet hair, crumbs, and dust from various surfaces.

Safety Instructions

To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using an electrical appliance:

- Read all instructions before using the appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.

- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material, such as chlorine bleach, ammonia, or drain cleaner.
- Do not use without dust cup and/or filters in place.
- Use extra care when cleaning on stairs.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance.
- Recharge only with the charger specified by the manufacturer.
- Do not modify or attempt to repair the appliance or the battery pack.

Package Contents

Verify that all items are present in the package:

- absob AB-105 Handheld Vacuum Cleaner Unit
- Crevice Tool
- Dusting Brush
- Side Brushes (Note: This may refer to a wide brush or specific brush attachments)
- Wall Charger
- User Manual (This document)

Product Overview


The absob AB-105 features a compact design with powerful suction and versatile attachments for various cleaning tasks.



Main Unit: The core of the vacuum cleaner, featuring the motor, battery, and control buttons.



Dust Cup and HEPA Filter: The transparent dust cup collects debris, and the washable HEPA filter ensures effective filtration.

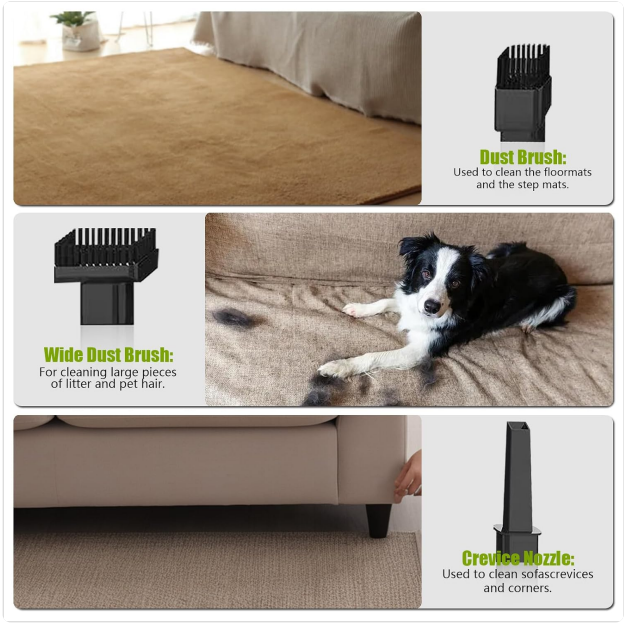

Attachments: Includes a Dust Brush for floor mats, a Wide Dust Brush for pet hair, and a Crevice Nozzle for tight spaces.



Integrated LED Light: A front LED searchlight illuminates dark areas, making cleaning under seats or in crevices easier.

Setup

1. Charging the Battery

1. Before first use, fully charge the vacuum cleaner.
2. Connect the wall charger to the charging port on the vacuum cleaner.
3. Plug the wall charger into a standard electrical outlet.
4. The charging indicator lights will show the charging status. A full charge typically takes approximately 4 hours.
5. Once fully charged, disconnect the charger. The vacuum provides up to 31 minutes of continuous cleaning on a full charge.



The vacuum cleaner connected to its wall charger for recharging.

2. Attaching Accessories

Select the appropriate attachment for your cleaning task and firmly push it onto the nozzle of the vacuum cleaner until it

clicks into place.

- **Crevice Tool:** For reaching tight corners, gaps, and narrow spaces.
- **Dusting Brush:** Ideal for cleaning delicate surfaces, upholstery, and floor mats.
- **Wide Dust Brush (Side Brushes):** Suitable for larger areas and effectively picking up pet hair.

Operating Instructions

1. Powering On/Off

To turn the vacuum cleaner on, press the power button located on the handle. Press it again to turn the vacuum cleaner off.

2. Using the LED Light

The integrated LED light can be activated independently or simultaneously with the vacuum function. This feature is useful for illuminating dark areas such as under car seats, furniture, or in dimly lit corners.

3. Cleaning Tips

- For general cleaning, use the vacuum with or without an attachment as needed.
- For pet hair on upholstery or carpets, the Wide Dust Brush is recommended.
- For crumbs in car interiors or tight spots, attach the Crevice Tool.
- Ensure the dust cup is not overfilled for optimal suction performance.

Maintenance

Regular maintenance ensures the longevity and optimal performance of your absob AB-105 vacuum cleaner.

1. Emptying the Dust Cup

1. Ensure the vacuum cleaner is turned off.
2. Locate the dust cup release button or mechanism.
3. Detach the dust cup from the main unit.
4. Empty the contents of the dust cup into a waste bin.
5. Reattach the dust cup firmly until it clicks into place.

2. Cleaning the HEPA Filter

The HEPA filter is washable and reusable. Clean it regularly to maintain suction power.

1. Remove the dust cup as described above.
2. Carefully remove the HEPA filter from the dust cup.
3. Rinse the filter under running water until clean. Do not use detergents or hot water.
4. Allow the filter to air dry completely for at least 24 hours before reinserting it**Do not use the vacuum with a wet filter.**
5. Once dry, place the HEPA filter back into the dust cup and reattach the dust cup to the vacuum cleaner.



The removable and washable HEPA filter and large capacity dust cup.

Troubleshooting

If you encounter issues with your absob AB-105 vacuum cleaner, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is depleted Power button not pressed correctly	Charge the battery fully Ensure the power button is pressed firmly
Low suction power	Dust cup is full HEPA filter is clogged Nozzle or attachment is blocked	Empty the dust cup Clean or replace the HEPA filter Remove any obstructions from the nozzle or attachment
Battery not charging	Charger not properly connected Faulty charger or outlet	Ensure charger is securely plugged into vacuum and outlet Try a different outlet or contact customer support for a replacement charger
Unusual noise during operation	Obstruction in the air path Loose component	Turn off and inspect for blockages in the nozzle, dust cup, or filter area Ensure all components are securely attached

Specifications

Feature	Specification
Model Name	AB105
Brand	absob

Feature	Specification
Power Source	Battery Powered (Lithium-Ion)
Wattage	120 Watts
Voltage	13.5 Volts
Battery Capacity	3x 2000mAh (Total 6000mAh)
Charging Time	Approx. 4 Hours
Battery Life (Runtime)	Up to 31 Minutes
Dust Cup Capacity	0.8 Liters (800ml)
Filter Type	Washable HEPA Filter
Noise Level	65 Decibels
Product Dimensions	40.9L x 10.9W x 12.5H Centimeters
Item Weight	821 g (1.81 Pounds)
Special Feature	Lightweight, Built-in LED Light
Recommended Uses	Car, Home

Warranty and Support

Your absob AB-105 Cordless Handheld Vacuum Cleaner is covered by a manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, replacement parts, or any inquiries not covered in this manual, please contact absob customer service through the retailer where the product was purchased or visit the official absob website.

© 2024 absob. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CCJHN5BV

More documents and user manuals: **https://manuals.plus/**