Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

YESTEL T15

YESTEL T15 11-inch Android Tablet User Manual

Model: T15

1. Introduction

Thank you for choosing the YESTEL T15 11-inch Android Tablet. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your device. Please read it carefully to ensure optimal performance and longevity of your tablet.

The YESTEL T15 is designed for a versatile user experience, featuring an 11-inch 2K display, powerful Octa-Core processor, ample storage, and a comprehensive accessory kit including a keyboard and mouse.

2. Package Contents

Verify that all items are present in your package:

- 1 x YESTEL T15 11-inch Tablet PC
- 1 x T15 Tablet Original Protective Case
- 1 x T15 Tablet Original Protective Film (pre-applied)
- 1 x European Standard Charger
- 1 x USB-C Charging Cable
- 1 x Bluetooth Keyboard
- 1 x Wireless Mouse
- 1 x OTG Adapter
- 1 x T15 Manual Instruction (this document)

3. Product Features

The YESTEL T15 tablet offers a range of features for productivity and entertainment:

- **Display:** 11-inch 2K (2000 x 1200 pixels) FHD screen with eye protection mode and automatic brightness adjustment.
- **Performance:** Android 13 OS, Octa-Core 2.0 GHz processor, 16GB RAM (8GB physical + 8GB virtual), 256GB

ROM internal storage, expandable up to 1TB via Micro SD card.

- **Cameras:** 5MP HD Front Camera, 13MP Rear Camera, 2MP Macro Camera with autofocus.
- **Battery:** 8600mAh large capacity battery with 18W fast charging support.
- **Connectivity:** Dual-band 5GHz + 2.4GHz Wi-Fi, Bluetooth 5.0, GPS, Hotspot, FM.
- **Audio:** Four high-quality speakers for clear sound.
- **Design:** Slim 7mm body, lightweight at 517g.



Image: Overview of YESTEL T15 tablet highlighting its triple camera system (13MP rear, 5MP front, 2MP macro) and 18W USB-C fast charging for the 8600mAh battery.



Image: YESTEL T15 tablet showcasing its Octa-Core processor, 256GB ROM (expandable to 1TB), and 16GB RAM for smooth performance.

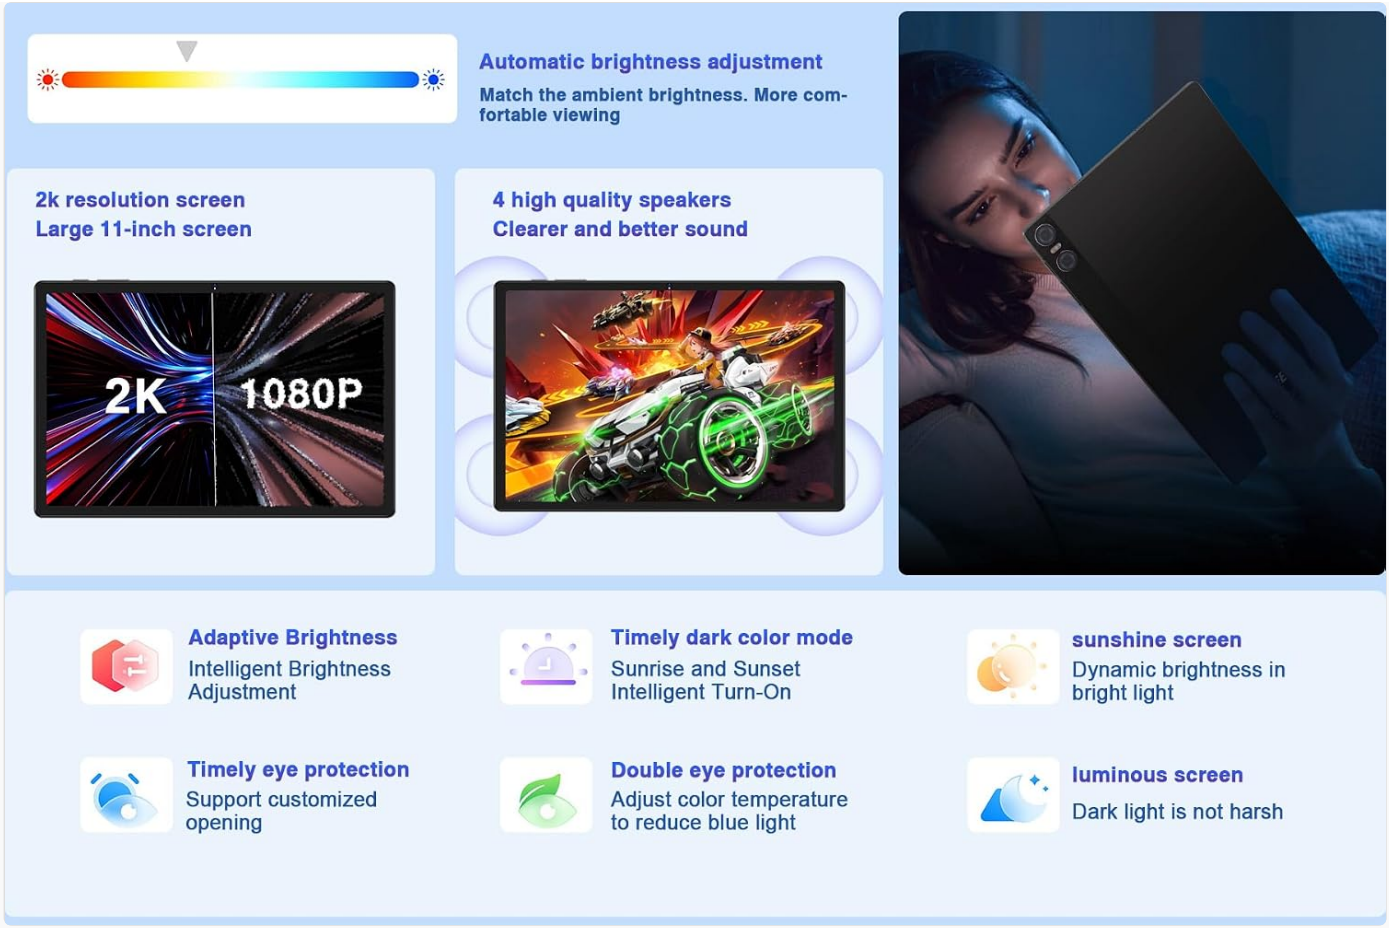


Image: YESTEL T15 tablet emphasizing its 11-inch 2K resolution screen, 4 high-quality speakers, and various eye protection and brightness adjustment features.



Image: YESTEL T15 tablet displaying the Android 13 OS interface, highlighting features like widgets, split screen, and enhanced privacy and security.



Image: YESTEL T15 tablet illustrating its dual-band 2.4GHz and 5GHz Wi-Fi capabilities for stable and fast internet connectivity.

4. Setup

4.1 Initial Charging

Before first use, fully charge your tablet. Connect the USB-C charging cable to the tablet's USB-C port and the other end to the provided charger. Plug the charger into a power outlet. The charging indicator will show the charging status. Allow approximately 2-3 hours for a full charge.

4.2 Power On/Off

- **To Power On:** Press and hold the Power button (usually located on the side) for a few seconds until the YESTEL logo appears.
- **To Power Off:** Press and hold the Power button until a power menu appears on the screen. Select "Power off" and confirm.
- **To Restart:** From the power menu, select "Restart" and confirm.

4.3 Initial Configuration

Upon first power-on, you will be guided through the initial setup process:

1. **Language Selection:** Choose your preferred language.
2. **Wi-Fi Connection:** Select your Wi-Fi network and enter the password to connect to the internet.
3. **Google Account:** Sign in with your Google account or create a new one. This is necessary for downloading apps from the Google Play Store and syncing data.
4. **Date & Time:** Set the correct date and time, or allow network-provided time.
5. **Security:** Set up a screen lock (PIN, pattern, or password) for device security.
6. Follow any remaining on-screen prompts to complete the setup.

4.4 Inserting a Micro SD Card

To expand storage, insert a Micro SD card (up to 1TB):

1. Locate the Micro SD card slot on the side of the tablet.
2. Gently insert the Micro SD card into the slot with the gold contacts facing down until it clicks into place.
3. The tablet will detect the card and may prompt you to format it for internal or portable storage.

4.5 Connecting Keyboard and Mouse

The included keyboard and mouse connect via Bluetooth:

1. Ensure the keyboard and mouse are charged and powered on.
2. On your tablet, go to **Settings > Connected devices > Bluetooth**.
3. Turn on Bluetooth. The tablet will search for available devices.
4. Select the keyboard and mouse from the list of available devices to pair them. Follow any on-screen prompts to confirm pairing.

5. Operating Instructions

5.1 Basic Navigation

- **Tap:** Select an item or open an app.
- **Tap & Hold:** Access contextual menus or move icons.
- **Swipe:** Scroll through pages, lists, or switch between home screens.
- **Pinch-to-Zoom:** Zoom in or out on images and web pages.

5.2 Android 13 Features

- **Widgets:** Customize your home screen by adding widgets for quick access to information. Tap and hold an empty space on the home screen, then select "Widgets."
- **Split Screen:** To use two apps simultaneously, open one app, then swipe up from the bottom of the screen and hold to access recent apps. Tap the app icon at the top of the window and select "Split top." Choose another app from the recent apps or app drawer to fill the bottom half.
- **Privacy Dashboard:** Monitor and manage app permissions in **Settings > Privacy > Privacy Dashboard**.

5.3 Connecting to Wi-Fi

To connect or change Wi-Fi networks:

1. Go to **Settings > Network & internet > Internet**
2. Ensure Wi-Fi is turned on.
3. Select your desired network from the list.
4. Enter the password if prompted and tap "Connect."

5.4 Using the Cameras

Open the Camera app from your home screen or app drawer. You can switch between front, rear, and macro cameras within the app interface. Tap the shutter button to take photos or start/stop video recording.

5.5 Eye Protection Mode and Dark Mode

- **Eye Protection Mode:** Reduces blue light emission to lessen eye strain. This can usually be found in **Settings > Display > Night Light** or a similar setting.
- **Dark Mode:** Changes the system interface to a darker color scheme, which can be more comfortable in low light. Activate it via **Settings > Display > Dark theme**.

6. Maintenance

6.1 Cleaning the Tablet

Use a soft, lint-free cloth to clean the screen and body of the tablet. For stubborn smudges, slightly dampen the cloth with water or a screen cleaner specifically designed for electronics. Avoid using harsh chemicals or abrasive materials.

6.2 Battery Care

- Avoid exposing the tablet to extreme temperatures (hot or cold).
- Do not let the battery completely drain frequently.
- Use only the provided charger and cable for optimal charging and to prevent damage.

6.3 Software Updates

Regularly check for and install system updates to ensure your tablet has the latest features, security patches, and performance improvements. Go to **Settings > System > System update**.

6.4 Storage Management

To maintain optimal performance, periodically manage your tablet's storage:

- Delete unnecessary apps and files.
- Move large files (photos, videos) to the Micro SD card or cloud storage.
- Clear app cache regularly via **Settings > Apps > [Select App] > Storage & cache > Clear cache**

7. Troubleshooting

If you encounter issues with your YESTEL T15 tablet, refer to the following common solutions:

Problem	Solution
Tablet does not turn on	Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on again. If it still doesn't turn on, perform a forced restart by holding the Power button for 10-15 seconds.

Problem	Solution
Wi-Fi connection issues	Check if Wi-Fi is enabled in settings. Restart your router and the tablet. Forget the network and reconnect. Ensure you are within range of the Wi-Fi signal.
Slow performance or freezing	Close unused apps. Clear app caches. Restart the tablet. Check for system updates. If the issue persists, consider a factory reset (back up your data first).
Apps crashing or not responding	Force close the app (Settings > Apps > [Select App] > Force stop). Clear the app's cache and data. Reinstall the app.
Bluetooth accessories not connecting	Ensure Bluetooth is enabled on both the tablet and the accessory. Make sure the accessory is in pairing mode. Forget the device in Bluetooth settings and try pairing again.

8. Specifications

Feature	Detail
Brand	YESTEL
Model	T15
Operating System	Android 13
CPU	Octa-Core 2.0 GHz (MediaTek)
RAM	16GB (8GB physical + 8GB virtual)
Internal Storage (ROM)	256GB
Expandable Storage	Up to 1TB Micro SD
Screen Size	11 Inches
Resolution	2000 x 1200 pixels (2K)
Front Camera	5MP
Rear Camera	13MP
Macro Camera	2MP
Battery Capacity	8600 mAh (Lithium Polymer)
Charging	18W Fast Charging (USB-C)
Wi-Fi	5GHz + 2.4GHz (802.11ac)
Bluetooth	5.0
Other Connectivity	GPS, Hotspot, FM
Interfaces	USB-C port, Micro SD card slot
Dimensions	25.5 x 16 x 0.8 cm

Feature	Detail
Weight	517 g

9. Warranty and Support

YESTEL provides comprehensive customer support for your T15 tablet:

- **Return Policy:** 30-day unconditional return policy.
- **Warranty:** Two-year warranty.
- **Technical Support:** Lifetime technical support.
- **Customer Service:** 24-hour online customer service.

If you have any questions or require assistance, please contact YESTEL customer service through Amazon message. We aim to reply within 24 hours and provide satisfactory solutions.

© 2024 YESTEL. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CCJS4FK5

More documents and user manuals: **https://manuals.plus/**