Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

YKASEK B0CCXBYQB4

YKASEK Wireless Switch Pro Controller User Manual

Model: B0CCXBYQB4

Introduction

Thank you for choosing the YKASEK Wireless Switch Pro Controller. This manual provides detailed instructions on how to set up, operate, and maintain your controller to ensure an optimal gaming experience. This controller is designed for use with Nintendo Switch, Switch Lite, OLED, and PC, offering advanced features such as NFC, dual vibration, and motion control.

Package Contents

Please check the package to ensure all items are present:

- Switch Pro Controller × 1
- Storage Case × 1
- Charging Cable × 1
- User Manual × 1



Image: The YKASEK Switch Pro Controller and its included storage case, highlighting the package contents.

Product Features

- **Excellent Compatibility:** Connects wirelessly or via wired connection to Nintendo Switch, Switch Lite, OLED, and PC.
- **NFC Function:** Supports Amiibo functionality for in-game interactions.
- **Dual Vibration:** Equipped with two motors for immersive haptic feedback.
- **Motion Control:** Features a six-axis gyroscope for precise motion sensing in games.
- **Customizable Settings:** Adjust button mapping, joystick sensitivity, light, and motor settings via the Keylinker App.
- **Long Battery Life:** Built-in 800 mAh rechargeable battery provides up to 22 hours of playtime on a 2-3 hour charge.
- **Ergonomic Design:** Crafted with ABS material for comfortable grip and reduced fatigue.
- **Protective Storage Case:** Durable, waterproof case made of three-layer material (PU outer, high-density EVA, polyester fiber) to protect the controller from impacts and splashes.



Image: The YKASEK Switch Pro Controller showcasing its key features: Dual Shock, Wireless Connection, Long Battery Life, and Motion Controls.

Your browser does not support the video tag.

Video: A brief overview of the Gold and Green YKASEK Switch Pro Controller, including its design and the accompanying storage case.

Setup Instructions

Pairing with Nintendo Switch/Switch Lite/OLED

1. Turn on your Nintendo Switch console.
2. From the HOME Menu, select 'Controllers' > 'Change Grip/Order'.
3. On the controller, press and hold the SYNC button (located on the top edge, near the USB-C port) for 3-5 seconds until the LED indicators start flashing rapidly.
4. Once the controller is successfully paired, the player LED(s) corresponding to its player number will light up solid.
5. You can now use your controller for gaming.

Connecting to PC (Wired)

1. Connect the controller to your PC using the provided USB-C charging cable.
2. The PC should automatically detect and install the necessary drivers.
3. The controller will function as a standard XInput device. You may need to configure controller settings within specific games.

Operating Instructions

Basic Controls

The controller features standard button layouts for a Pro Controller:

- **Left/Right Analog Sticks:** For movement and camera control.
- **D-Pad:** Directional input.
- **A/B/X/Y Buttons:** Action buttons.
- **L/R/ZL/ZR Buttons:** Shoulder and trigger buttons.
- **+ (Plus)** / **- (Minus) Buttons:** Start/Select functions.
- **HOME Button:** Returns to the Switch HOME Menu.
- **Screenshot Button:** Captures screenshots.

Wake-up Function

When the Switch console is in sleep mode, you can press the HOME button on the controller to wake up the console, provided the controller is already paired.

NFC Function

The controller supports NFC (Near Field Communication) for Amiibo figures. To use this feature:

1. Ensure the game you are playing supports Amiibo functionality.
2. When prompted in-game, place your Amiibo figure close to the sensing area located in the center of the controller, typically over the HOME button.
3. The controller will read the Amiibo data, granting you special characters, items, or other in-game bonuses.



Image: The YKASEK Switch Pro Controller with an Amiibo logo, indicating support for NFC functionality by placing an Amiibo card over the home button area.

Motion Control

The YKASEK Pro Controller is equipped with a six-axis gyroscope, enabling precise motion control in compatible games. This allows for intuitive gameplay where tilting and moving the controller translates into in-game actions, enhancing the immersive experience.



Image: The YKASEK Switch Pro Controller highlighting its built-in dual motors and 6-axis gyro motion sensors for an immersive gaming experience.

Customization with Keylinker App

Personalize your gaming experience using the Keylinker App. This application allows you to adjust various parameters of your Pro Controller to match your preferences and operating habits. You can:

- Remap button assignments.
- Adjust joystick sensitivity.
- Control LED lighting effects.
- Modify motor vibration intensity.

Refer to the Keylinker App's instructions for detailed usage.

Battery Life and Charging

The controller features an 800 mAh rechargeable battery. To charge the controller:

1. Connect the provided USB-C charging cable to the controller's USB-C port.
2. Connect the other end of the cable to a USB power source (e.g., Switch dock, PC, USB wall adapter).
3. Charging typically takes 2-3 hours.
4. A full charge provides up to 22 hours of playtime.



Image: The YKASEK Switch Pro Controller highlighting its long battery life, with details on charging time (2 hours), battery capacity (800mAh), and maximum play time (20 hours).

Maintenance

To ensure the longevity and optimal performance of your controller:

- **Cleaning:** Use a soft, dry cloth to wipe the controller. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the controller in its included storage case when not in use to protect it from dust, scratches, and

accidental damage.

- **Avoid Extreme Conditions:** Do not expose the controller to extreme temperatures, direct sunlight, or high humidity.
- **Liquid Contact:** Keep the controller away from liquids. The storage case offers splash protection, but the controller itself is not waterproof.

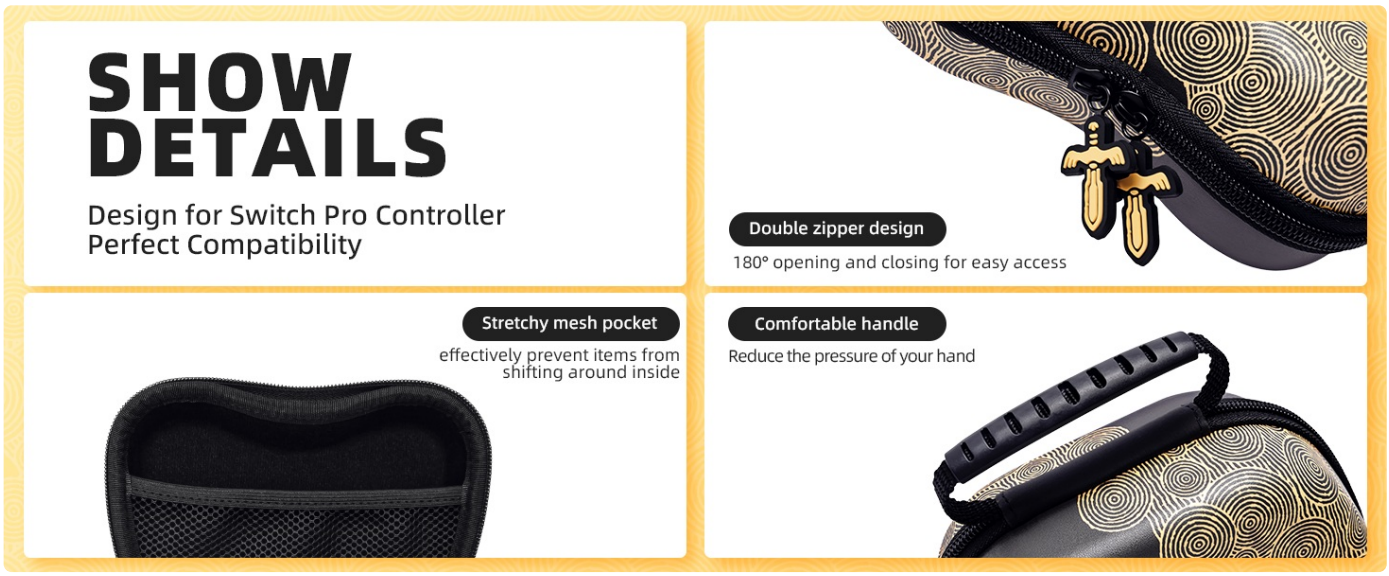


Image: The YKASEK Switch Pro Controller storage case demonstrating its compression and fall resistance, made from a three-layer material for protection.

Troubleshooting

Problem	Possible Solution
Controller does not connect/pair.	• Ensure the controller is charged. • Verify the Switch console is in 'Change Grip/Order' mode. • Press and hold the SYNC button firmly. • Try restarting both the controller and the Switch console. • Ensure no other wireless devices are causing interference.
Buttons/Joysticks are unresponsive.	• Check battery level. • Reconnect the controller. • If using the Keylinker App, ensure no custom settings are causing conflicts. Reset to default if necessary. • Clean around buttons/joysticks to remove any debris.
Controller does not charge.	• Ensure the charging cable is securely connected to both the controller and the power source. • Try a different USB-C cable or power source. • Verify the power source is active.

Problem	Possible Solution
NFC function not working.	• Ensure the Amiibo is placed correctly over the NFC sensing area. • Verify the game supports Amiibo and that the feature is enabled in-game. • Check if the Amiibo itself is functional.

Specifications

Feature	Detail
Brand Name	YKASEK
Model Number	B0CCXBYQB4
Compatible Devices	PC, Nintendo Switch, Switch Lite, Switch OLED
Controller Type	Gamepad
Connectivity Technology	Wireless, USB (Wired)
Additional Features	NFC, Dual Vibration, Motion Control (6-axis gyroscope), Customizable via Keylinker App
Button Quantity	13
Power Source	Battery Powered (800 mAh rechargeable)
Charging Time	2-3 hours
Play Time	Up to 22 hours
Material	ABS (Controller), PU/EVA/Polyester Fiber (Case)

Warranty and Support

Your YKASEK Wireless Switch Pro Controller comes with a**12-month warranty** from the date of purchase. If you encounter any issues or have questions regarding your product, please do not hesitate to contact our customer support team. We are committed to providing excellent service and assistance.
For support, please refer to the contact information provided with your purchase or visit the official YKASEK store on Amazon: YKASEK Store

© 2023 YKASEK. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CCXBYQB4

More documents and user manuals: **https://manuals.plus/**