Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

VONLUCE CFN130900

VONLUCE 52-Inch Ceiling Fan with Light and Remote

Model: CFN130900

Introduction

This manual provides detailed instructions for the safe installation, operation, and maintenance of your VONLUCE 52-inch Ceiling Fan with Light and Remote. Please read this manual thoroughly before installation and retain it for future reference.

Important Safety Instructions

- Always disconnect power at the main circuit breaker before installation or servicing.
- Ensure all electrical connections comply with local codes and ordinances.
- The fan must be mounted to a ceiling joist or support structure capable of supporting at least 35 lbs (15.9 kg).
- Do not bend blade holders during installation or cleaning.
- Keep children away from the fan when it is operating.
- This fan is suitable for indoor and damp outdoor locations (not exposed to direct rain).

Package Contents

Verify that all components are present before beginning installation. If any parts are missing or damaged, contact customer service.



Image: Diagram showing the package contents including fan blades, mounting bracket, motor assembly, downrods, LED light kit, shade, remote control, and accessory pack.

- Fan Blades (x3)
- Mounting Bracket (x1)
- Fan Motor Assembly (x1)
- 5" Downrod (x1)
- 10" Downrod (x1)
- Canopy (x1)
- Coupling Cover (x1)
- LED Light Kit (x1)
- Shade (x1)
- Remote Control (x1)
- Accessory Pack (x1)
- Instructions (x1)

Specifications

Model	CFN130900
Brand	VONLUCE
Blade Length	52 Inches
Number of Blades	3
Material	Wood (Walnut)
Motor Type	DC Motor
Fan Speeds	6
Light Color Temperature	3000K (Warm White), 4500K (Neutral White), 6500K (Cool White)
Noise Level	<35 dB
Control Method	Remote Control

Timer Functions	1H, 2H, 4H, 8H
Indoor/Outdoor Usage	Indoor, Outdoor (Damp-rated, not exposed to direct rain)
Wattage	45 watts
Air Flow Capacity	6895 Cubic Feet Per Minute



Image: Table showing noise levels at different fan speeds, confirming ultra-quiet operation.

Installation and Setup

1. Pre-Installation Considerations

- **Power Disconnection:** Before starting, ensure the power is turned off at the circuit breaker to prevent electrical shock.
- **Mounting Location:** The fan must be installed in a location where the blades are at least 7 feet (2.1 meters) from the floor and have at least 30 inches (76 cm) clearance from any walls or obstructions.
- **Ceiling Support:** The outlet box and support structure must be securely mounted and capable of supporting a minimum of 35 lbs (15.9 kg).

2. Mounting Options

This fan supports both flat and vaulted ceilings (up to 10 degrees slope) and includes 5-inch and 10-inch downrods for customizable installation height.

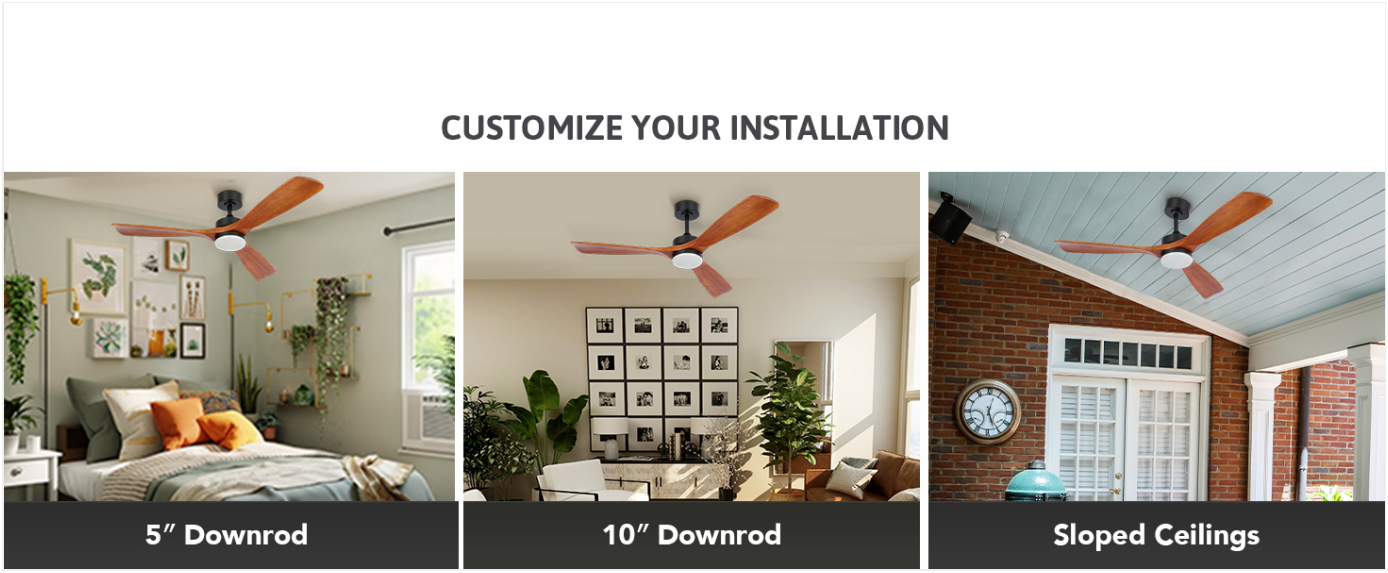


Image: Illustrations demonstrating installation with 5-inch downrod, 10-inch downrod, and on sloped ceilings.

3. Assembly Steps (General Overview)

1. **Secure Mounting Bracket:** Attach the mounting bracket to the ceiling outlet box.
2. **Assemble Downrod:** Insert the chosen downrod into the canopy and feed the wires through.
3. **Attach Fan Motor Assembly:** Connect the downrod to the fan motor assembly.
4. **Hang Fan:** Carefully lift the fan assembly and hang it on the mounting bracket.
5. **Electrical Connections:** Connect the fan's electrical wires to the household wiring according to the wiring diagram in the full instruction manual. Ensure the receiver for the remote control is properly installed.
6. **Attach Blades:** Securely attach the fan blades to the motor housing.
7. **Install Light Kit:** Connect and install the LED light kit and shade.
8. **Restore Power:** Once all connections are secure and components are assembled, restore power at the circuit breaker.

Operation

Your VONLUCE ceiling fan is operated using the included remote control. Ensure the remote has working AAA batteries (not included).



Image: Diagram illustrating the buttons and functions of the remote control, including power, fan speed, reverse, timer, and light controls.

Remote Control Functions:

- **Power On/Off:** Turns the fan and light on or off.
- **Fan Speed (1-6):** Adjusts the fan speed from gentle breeze (1-2) to strong cooling air (5-6).



Image: Visual representation of the 6 fan speeds, categorized into gentle breeze, natural wind, and cooling air.

- **Reverse Fan Direction (F/R):** Changes the direction of blade rotation for summer (downward airflow) or winter (upward airflow).



Image: Illustration showing airflow direction for cooling in summer and warming in winter.

- **Timer (1H, 2H, 4H, 8H):** Sets the fan to turn off automatically after the selected duration.
- **Light On/Off:** Turns the LED light on or off.
- **Light Color Temperature (3000K/4500K/6500K):** Cycles through warm white, neutral white, and cool white light settings. The fan features a memory function that remembers the last light setting after 10 seconds of operation.



Image: Depiction of the three adjustable LED light color temperatures: 3000K Warm White, 4500K Neutral White, and 6500K Cool White.

- **Nature Mode:** Hold the "Nature Mode" button (often combined with a fan speed button or a dedicated button) for 5 seconds to activate a fluctuating fan speed that simulates natural breezes.
- **Mute Fan:** The fan operates at a whisper-quiet level, typically below 35dB.

Maintenance

- **Cleaning:** To clean the fan, wipe with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Blade Care:** The wood blades are hand-finished and lacquered. Avoid harsh chemicals that could damage the finish.
- **Tighten Fasteners:** Periodically check and tighten all screws and fasteners to ensure safe operation.
- **No Lubrication Required:** The motor is permanently lubricated and does not require oiling.

Troubleshooting

Problem	Possible Cause	Solution
Fan does not start	Power off at circuit breaker. Loose wire connections. Remote control batteries dead or not installed. Incorrect remote pairing.	Check circuit breaker and wall switch. Verify all wire connections are secure. Replace remote batteries (AAA). Refer to remote pairing instructions in the full manual.
Fan wobbles	Loose blade screws. Unbalanced blades. Loose mounting bracket.	Tighten all blade screws. Use the included balancing kit (if applicable) to balance blades. Ensure mounting bracket is securely fastened to the ceiling joist.
Light does not work	Loose wire connection to light kit. LED light kit failure.	Check light kit wiring connections. Contact customer service for replacement if LED kit is faulty.
Remote control not working	Dead batteries. Remote not paired with receiver. Obstruction between remote and receiver.	Replace batteries (AAA). Re-pair remote with receiver (refer to full manual for specific steps). Ensure clear line of sight.

Warranty and Customer Support

VONLUCE products are designed for quality and reliability. For warranty information, technical assistance, or to report missing/damaged parts, please contact VONLUCE customer support. Refer to the product packaging or the official VONLUCE website for contact details.
Online Support: Visit the VONLUCE Store on Amazon

© 2025 VONLUCE. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CD6X34H4

More documents and user manuals: **https://manuals.plus/**