ZdalaMit ONN1962

User Manual for ZdalaMit Replacement Remote Control

Model: ONN1962

Brand: ZdalaMit

1. Introduction

Thank you for purchasing the ZdalaMit Replacement Remote Control. This remote is designed to be a direct replacement for select ONN Soundbar models, providing seamless control without the need for complex programming. This manual provides essential information on setting up, operating, maintaining, and troubleshooting your new remote control.

Please read this manual thoroughly before using the product to ensure proper operation and longevity.

2. Product Overview

2.1 Package Contents

- 1 x ZdalaMit Replacement Remote Control

2.2 Key Features

- No programming required: Ready for use after battery installation.
- Direct replacement for original ONN Soundbar remotes.
- Compatible with ONN Soundbar models: 100019624, 100020788, 100024201, 100008045.

2.3 Product Diagram




VOL
+
VOL
−
STANDARD
SOUND
SOUND
MODES
AUX
OPTICAL
LINE IN

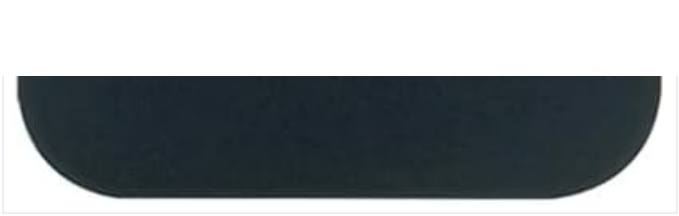


Figure 1: Front view of the ZdalaMit replacement remote control, showing all buttons including Power, Bluetooth, Mute, Volume Up/Down, Play/Pause, Skip Back/Forward, Standard Sound, Sound Modes, AUX, Optical, and Line In.


VOL
+
VOL
−
STANDARD SOUND
SOUND MODES
AUX
OPTICAL
LINE IN

Figure 2: Angled view of the ZdalaMit replacement remote control, highlighting its ergonomic design and button layout.

3. Setup

3.1 Installing Batteries

The remote control requires two (2) 1.5V AAA Alkaline batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two AAA batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.

Note: Always use new alkaline batteries for optimal performance. Do not mix old and new batteries, or different types of batteries.

4. Operating Instructions

This replacement remote control is designed to function immediately with compatible ONN Soundbar models once batteries are installed. No additional programming or pairing is required.

4.1 Basic Functions

- **Power Button ( ):** Press to turn the soundbar On or Off.
- **Volume Up/Down (VOL +/-):** Adjusts the soundbar's volume level.
- **Mute Button ( ):** Mutes or unmutes the sound.
- **Input Selection (AUX, OPTICAL, LINE IN, Bluetooth):** Selects the desired audio input source for your soundbar.
- **Playback Controls (◀◀, ▶▶, ▶▮):** Controls media playback (e.g., skip tracks, play/pause) when applicable to the soundbar's capabilities and selected input.
- **Sound Modes (STANDARD SOUND, SOUND MODES):** Cycles through available sound presets or modes on your soundbar.

5. Maintenance

5.1 Cleaning the Remote

To clean the remote control, gently wipe it with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Do not use abrasive cleaners, alcohol, or chemical solvents, as these may damage the remote's surface or internal components.

5.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Refer to Section 3.1 for battery installation instructions. Always dispose of used batteries responsibly according to local regulations.

5.3 Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the remote.

6. Troubleshooting

If you experience issues with your remote control, please refer to the following common problems and solutions:

- **Remote is not responding:**
  - Ensure batteries are inserted with correct polarity (+/-).
  - Replace old batteries with new 1.5V AAA Alkaline batteries.
  - Ensure there is a clear line of sight between the remote and the soundbar's IR receiver. Obstructions can block the signal.
  - Make sure the soundbar is powered on.
- **Some buttons are not working:**
  - This remote is a direct replacement; however, some advanced functions specific to your original soundbar remote might not be supported if they are not standard.
  - Clean the remote's surface and buttons to ensure no debris is interfering with button presses.

If the problem persists after trying these solutions, please contact customer support.

7. Specifications

Feature	Detail
Model Number	ONN1962
Product Dimensions	5.9 x 1.57 x 0.55 inches
Item Weight	1.41 ounces
Power Supply	2 x 1.5V AAA Alkaline Battery (Not Included)
Color	Black
Compatible Devices	ONN Soundbar Speaker 100019624, 100020788, 100024201, 100008045

8. Warranty and Support

This product is covered by a standard manufacturer's warranty. For specific warranty details, please refer to the product packaging or contact your retailer.

If you have any questions, require technical assistance, or encounter issues not covered in this manual, please feel free to contact the seller or ZdalaMit customer support. Contact information can typically be found on the product packaging or the retailer's website.

We are committed to providing high-quality products and excellent customer service.