eufy T2267111

eufy L60 Robot Vacuum User Manual

Model: L60 | Brand: eufy

Introduction

The eufy L60 Robot Vacuum is designed for efficient and powerful floor cleaning. Featuring ultra-strong 5,000 Pa suction and iPath Laser Navigation, it provides thorough cleaning for various floor types, including hard floors and carpets. This manual provides essential information for setting up, operating, and maintaining your robot vacuum.

Key Features:

- Ultra-Strong 5,000 Pa Suction: Effectively removes hair, crumbs, and dust.
- iPath Laser Navigation: Advanced Lidar technology for precise mapping and efficient cleaning routes.
- Obstacle Conquering: Capable of climbing up to 20 mm over thresholds and carpet edges.
- BoostIQ Technology: Automatically increases suction power on carpets for deeper cleaning.
- AI.Map 2.0: Customize cleaning with room selection, No-Go Zones, and Multi-Floor Mapping via the app.



Figure 1: eufy L60 Robot Vacuum and its accompanying mobile application interface.

Setup

What's in the Box:

- Robot (includes Roller Brush and Dust Bin)
- RoboVac Charging Station with Adapter
- Cleaning Tool



Figure 2: Included components with your eufy L60 Robot Vacuum.

Initial Setup and Charging:

1. Place the charging base on a flat, hard surface against a wall, ensuring no obstacles are around it.
2. Ensure the charging base is powered correctly.
3. Place the robot vacuum on the charging base to fully charge before first use.

Connecting to Wi-Fi:

To unlock all smart features, connect your eufy L60 to your home Wi-Fi network using the eufy Clean app. The app allows for precise mapping, scheduling, and custom cleaning zones.

Your browser does not support the video tag.

Video 1: Official eufy guide on how to connect your L60 Robot Vacuum to the internet via the eufy Clean app. This video demonstrates the steps for Wi-Fi setup and initial app configuration.

Tip: Ensure your phone's Bluetooth is on and the robot vacuum is close to your Wi-Fi router for a smooth connection process. The eufy Clean app supports 2.4/5.0GHz networks.

Operating Your eufy L60

Cleaning Modes:

- **Auto Clean:** The robot vacuum intelligently navigates and cleans your entire home.
- **Room Clean:** Select specific rooms for cleaning via the eufy Clean app.
- **Zone Clean:** Define custom cleaning zones in the app for targeted cleaning.
- **Spot Clean:** For concentrated cleaning of a small, dirty area.

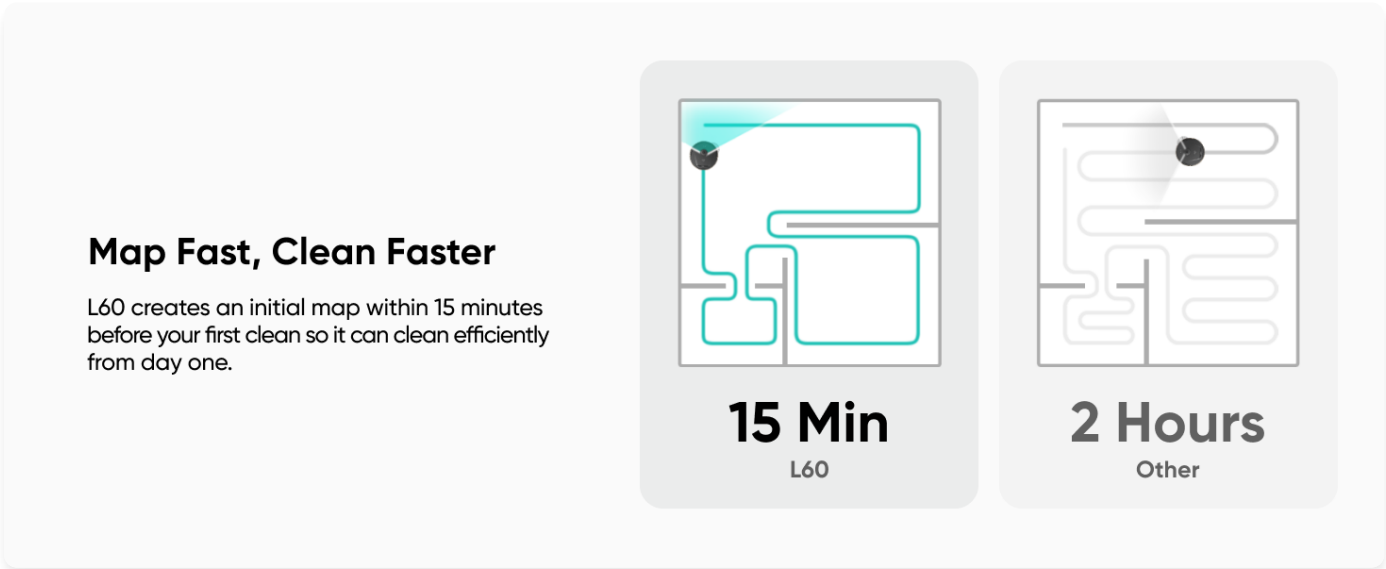


Figure 3: Customizable cleaning options available through the AI.Map 2.0 feature in the eufy Clean app.

Navigation and Obstacle Avoidance:

The L60 uses iPath Laser Navigation to create accurate maps of your home, ensuring efficient and systematic cleaning. It can climb over obstacles up to 20 mm, such as door thresholds and carpet edges, minimizing interruptions during cleaning cycles.



Figure 4: The iPath Laser Navigation system builds a visual map and accurately scans your house for efficient cleaning.

Suction Power and Runtime:

The robot vacuum features Ultra-Strong 5,000 Pa Suction for deep cleaning. BoostIQ Technology automatically adjusts suction power based on the surface, providing optimal cleaning for both hard floors and carpets. A single charge provides up to 120 minutes of runtime on smooth hard flooring.



Figure 5: The powerful 5,000 Pa suction ensures thorough cleaning of various debris.

Maintenance

Dust Bin Emptying:

To maintain effective cleaning performance, empty the dustbin after each use. The dustbin is easily accessible for quick disposal of collected debris.

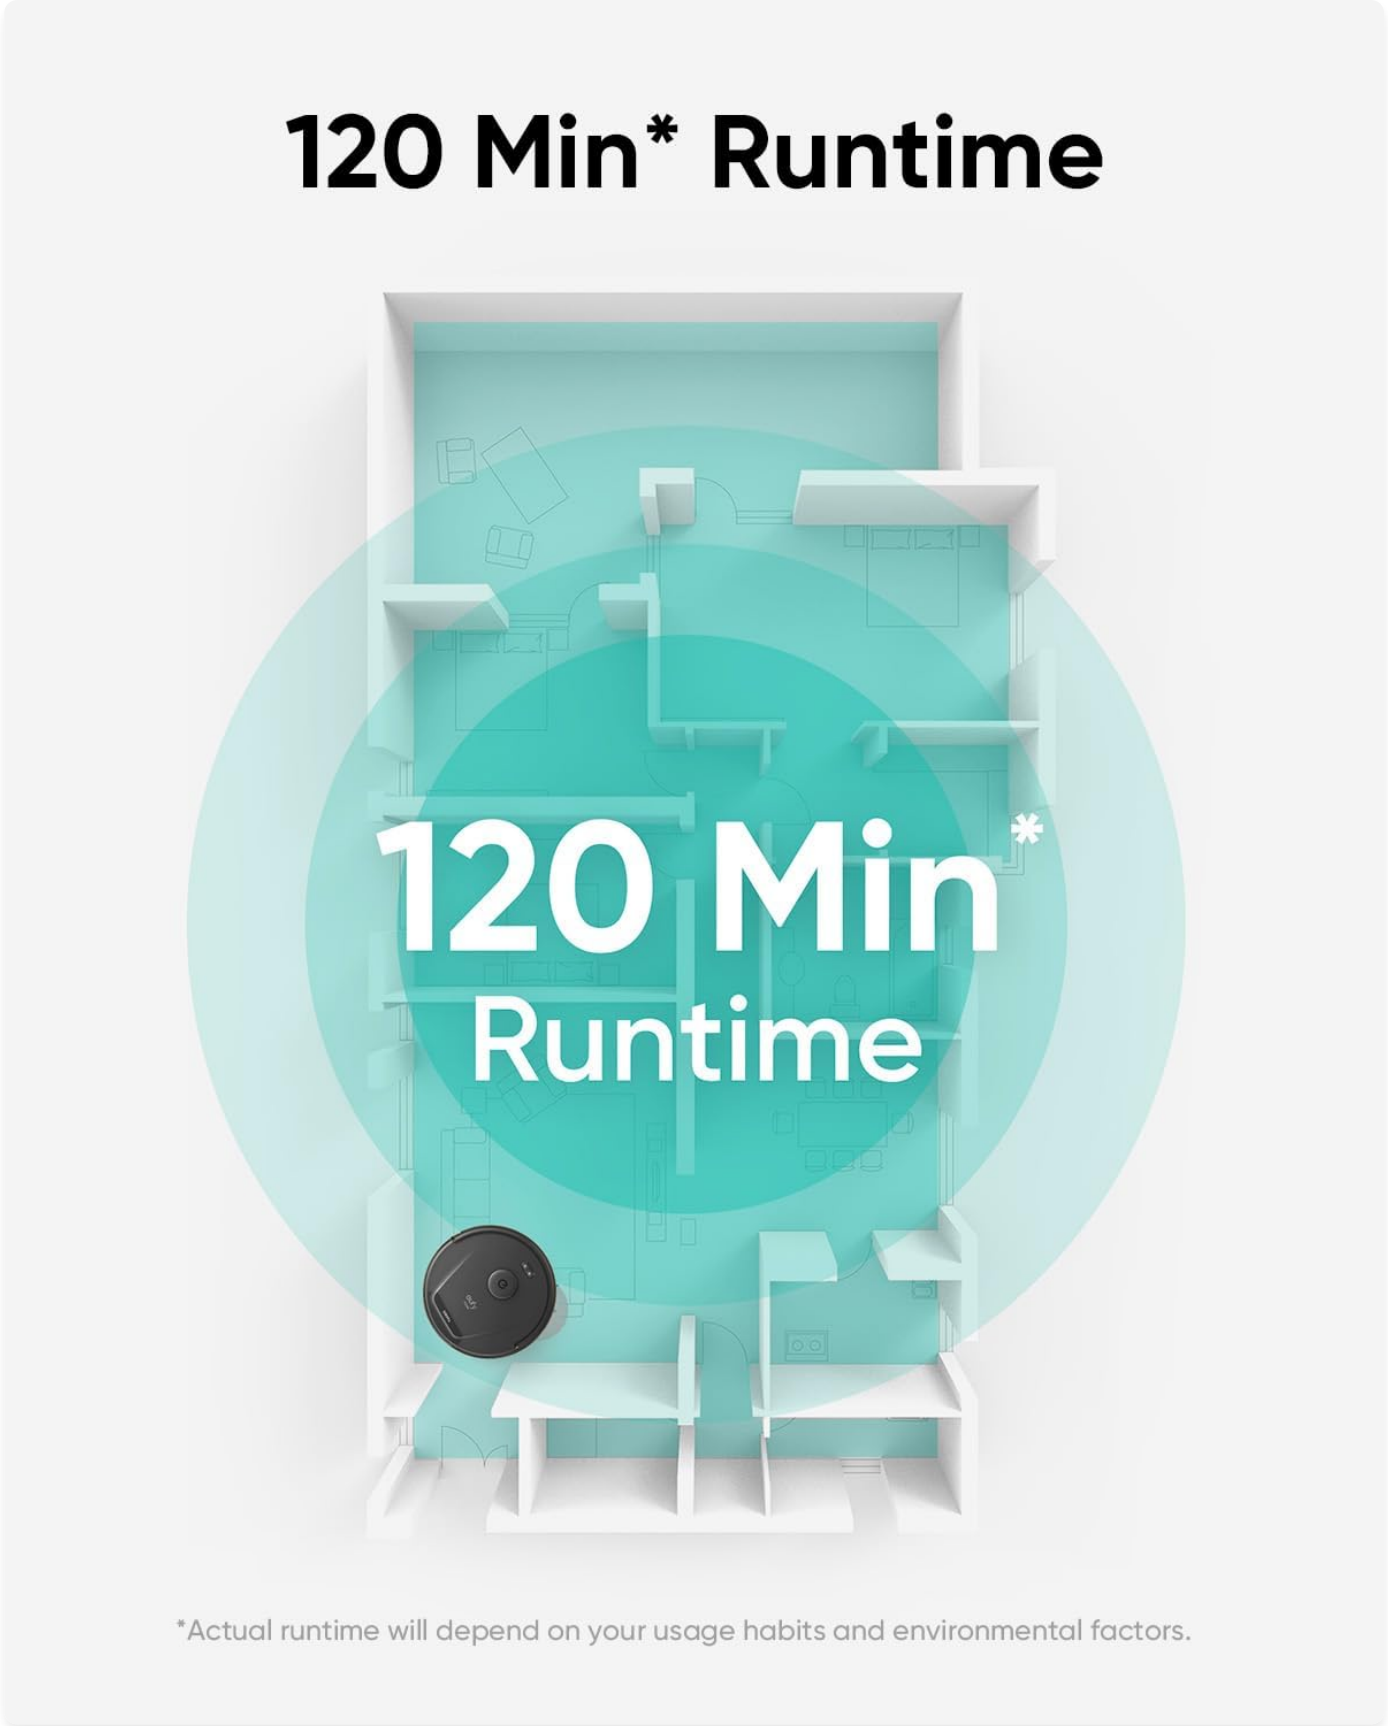


Figure 6: The dustbin is designed for easy removal and emptying.

Filter and Brush Cleaning:

Regularly clean the roller brush, side brushes, and filter at least once a week. Refer to the accessory maintenance page in the eufy Clean app for detailed instructions. This ensures optimal suction and prevents clogs.

Firmware Updates:

Regularly check for firmware updates in the app and upgrade to ensure the best cleaning performance and access to new features.

Troubleshooting

Common Issues and Solutions:

- **Dirty or Incomplete L60 Due to Transportation/Warehouse Issues:**Please refer to the instruction manual for a detailed list of included accessories. eufy ensures all products sold are brand new. If you experience issues such as damaged packaging, missing accessories, or signs of use, please get in touch with eufy support immediately.
- **Robot Vacuum Getting Stuck:** Clear wires and toys before using L60 to prevent it from getting stuck. Set no-go zones for long-pile carpets and furniture with similar bottom heights.
- **Battery Performance:** Keep an eye on new firmware updates in the app to improve battery performance.
- **Efficient Recharging:** Ensure the charging base is powered correctly. Place the charging base on a flat, hard surface against the wall, with no obstacles around it. Regularly wipe the connection pins of the robot and base. Ensure the charging base's pins can rebound normally. If not, contact eufy for a replacement.

For more detailed troubleshooting, please refer to the official User Guide (PDF) available on the product's Amazon page or eufy's support website.

Specifications

Feature	Detail
Brand	eufy
Model Name	L60
Special Feature	Ultra Strong 5000 Pa Suction, iPath Laser Navigation
Color	Black
Product Dimensions	12.8"L x 13"W x 4"H
Battery Life	120 minutes
Control Method	App
Item Weight	6.95 pounds

Warranty & Support

For warranty information, technical support, or any product-related inquiries, please visit the official eufy support website or refer to the contact information provided in your product packaging.
You can also find additional resources, including the full User Guide and Troubleshooting Guide, on the product's Amazon page under the "Documents" section.

© 2024 eufy. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question