Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Bellemave bed-frames

Bellemave Full Size Metal Loft Bed with Desk and Stairs Instruction Manual

Model: bed-frames

1. Introduction

This instruction manual provides essential information for the safe and correct assembly, operation, and maintenance of your Bellemave Full Size Metal Loft Bed with Desk and Stairs. Please read this manual thoroughly before beginning assembly and retain it for future reference.
The Bellemave Full Size Metal Loft Bed is designed to provide a versatile sleeping and workspace solution. It features a full-size upper bed, an integrated desk, and a staircase with built-in storage compartments, including a small wardrobe.

2. Safety Information

Important Safety Warnings:

- **Do not use with a box spring.** The bed frame is designed for use with a mattress directly on the provided slats.
- Always assemble according to the provided instructions. Failure to do so may result in instability and injury.
- Supervise children when using the staircase to prevent falls or accidents.
- Ensure all connections are tight before use and check periodically.
- The maximum recommended weight capacity for the upper bed is 350 lbs.
- Recommended upper bed mattress thickness: 6 inches.
- Do not allow jumping on the bed.
- Keep hands and fingers clear of moving parts during assembly.

3. Package Contents

Your Bellemave Full Size Metal Loft Bed will arrive in two packages. Please verify that all components and hardware are present before beginning assembly. If any parts are missing or damaged, contact customer support immediately.

Materials: Metal frame, MDF (Medium-Density Fiberboard) for desk and staircase storage.
Color: Black

4. Setup and Assembly

Assembly is required for this product. It is recommended that two adults perform the assembly. All necessary tools are typically provided. Refer to the detailed assembly instruction guide included in your package for step-by-step instructions.

General Assembly Tips:

- Clear a spacious area for assembly.
- Lay out all parts and hardware, identifying each component using the provided diagrams.
- Do not fully tighten screws until all components are loosely assembled, then tighten securely.
- Pay close attention to the orientation of parts, especially for the staircase and desk sections.
- Consider anchoring the bed frame to a wall for enhanced stability, if desired.

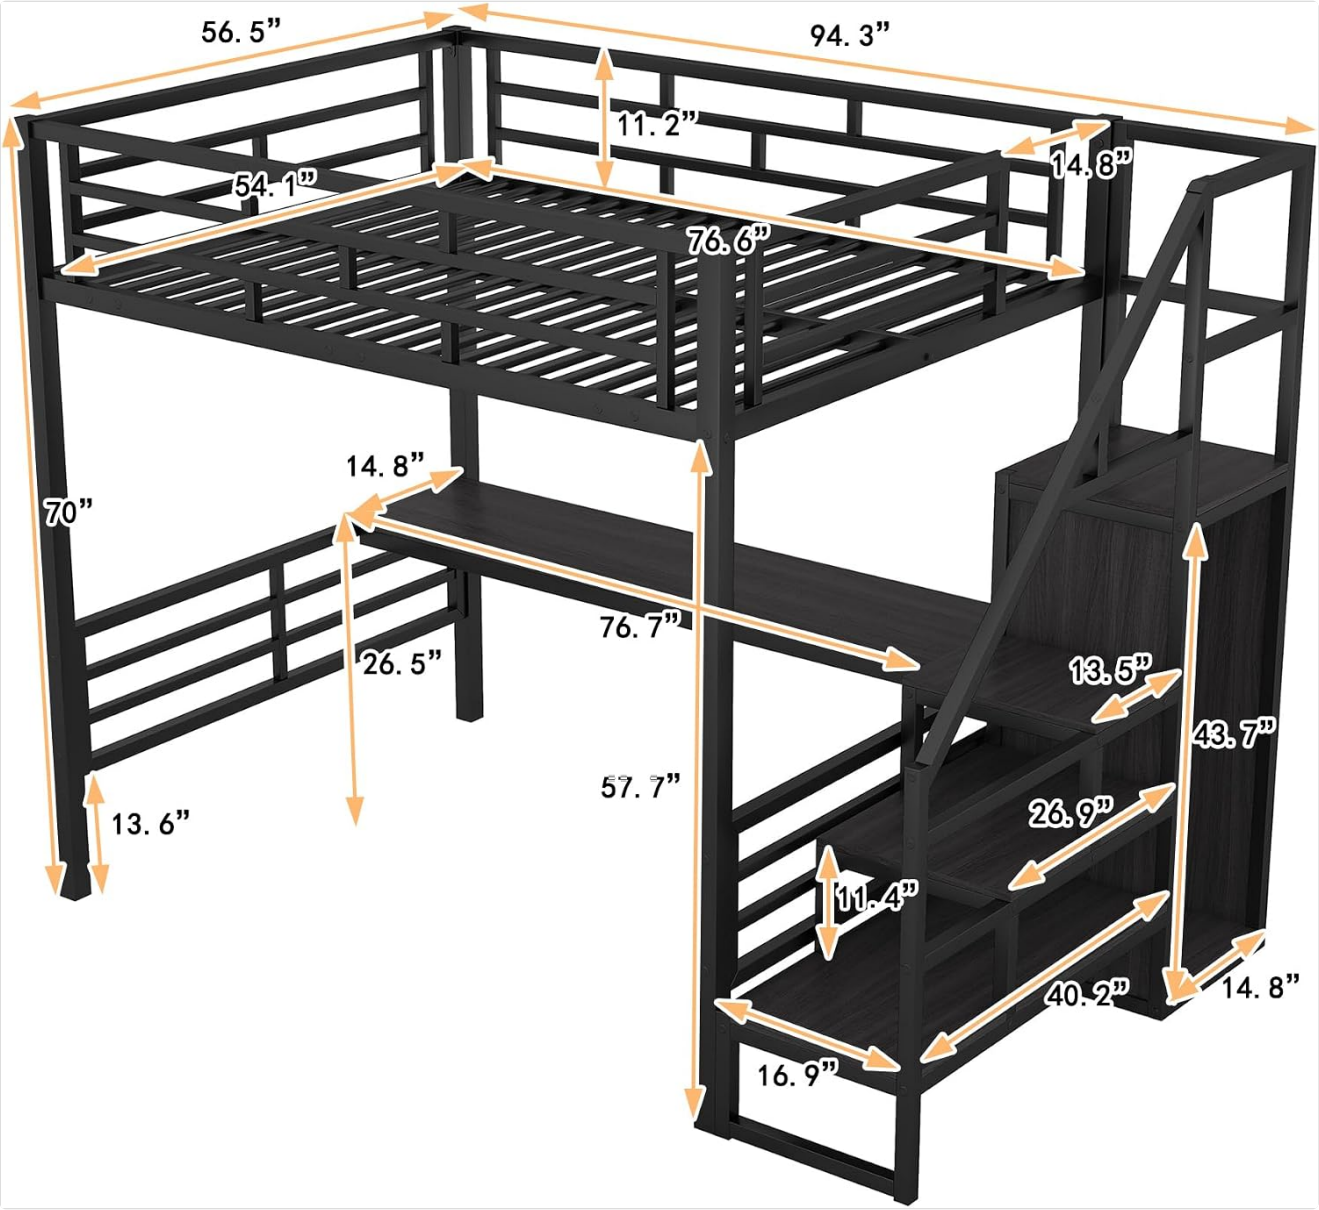


Figure 4.1: Detailed dimensions of the Bellemave Full Size Metal Loft Bed, including bed, desk, and staircase measurements.



Figure 4.2: An assembled view of the Bellemave Full Size Metal Loft Bed, showcasing the upper bed, integrated desk, and storage staircase.

5. Operating Instructions

The Bellemave Loft Bed is designed for multi-functional use, providing a sleeping area, a workstation, and storage.

5.1. Using the Upper Bed

- Place a full-size mattress directly onto the metal slats. A box spring is not required or recommended.
- Ensure the mattress thickness does not exceed 6 inches to maintain adequate guardrail height for safety.
- Access the bed using the integrated staircase.

5.2. Utilizing the Integrated Desk

The spacious desk area located beneath the loft bed provides a dedicated space for study, work, or creative activities. Ensure proper lighting and ergonomic seating for comfortable use.



Figure 5.1: The integrated desk area beneath the loft bed, suitable for a workstation or study space.

5.3. Storage Staircase and Wardrobe

The staircase features multiple storage compartments, ideal for books, decor, or personal items. The bottom step integrates a small wardrobe with a clothes rack for hanging frequently worn garments.



Figure 5.2: A detailed view of the staircase, highlighting the integrated storage shelves and the small wardrobe at the base.

6. Maintenance

- **Cleaning:** Wipe down metal surfaces with a soft, damp cloth. For MDF components, use a dry or slightly damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Hardware Check:** Periodically inspect all bolts, screws, and connections to ensure they remain tight. Re-tighten as necessary to maintain structural integrity.
- **Rust Prevention:** The metal frame is coated with a rust-proof finish. Avoid scratching the finish to prevent potential rust.
- **Mattress Care:** Follow your mattress manufacturer's guidelines for cleaning and maintenance.

7. Troubleshooting

Problem	Possible Cause	Solution
Bed feels wobbly or unstable.	Loose hardware; uneven floor; not anchored to wall.	Check and tighten all bolts and screws. Ensure the bed is on a level surface. Consider anchoring the bed to a wall for added stability (hardware not included).

Problem	Possible Cause	Solution
Squeaking noises.	Loose connections; friction between metal parts.	Re-tighten all assembly hardware. Apply a small amount of lubricant (e.g., silicone spray) to connection points if squeaking persists.
Missing parts or damaged components upon arrival.	Shipping error or manufacturing defect.	Do not proceed with assembly. Contact Bellemave customer support immediately for replacement parts.
Difficulty with assembly instructions.	Unclear diagrams or steps.	Review the instructions carefully, paying attention to small details and part orientations. If still stuck, contact customer support.

8. Specifications

Feature	Detail
Product Dimensions (Overall)	94.4"L x 56.5"W x 70"H
Bed Dimensions	76.6"L x 54.1"W (Full Size)
Total Height	70"
Finish Type	Powder Coated (Black)
Compatible Mattress Size	Full
Assembly Required	Yes
Item Weight	190 pounds
Bed Weight Capacity	350 lbs
Recommended Mattress Thickness	6 inches
Number of Slats	20 pcs
Model Number	bed-frames

9. Warranty and Support

9.1. Warranty Information

This Bellemave metal loft bed frame comes with a**12-month warranty** from the date of purchase. This warranty covers manufacturing defects and material flaws under normal use. It does not cover damage resulting from improper assembly, misuse, accidents, or normal wear and tear.
Please retain your proof of purchase for warranty claims.

9.2. Customer Support

For any questions regarding assembly, missing parts, or warranty claims, please contact Bellemave customer support. Refer to the contact information provided in your product packaging or on the official Bellemave website. When contacting support, please have your model number (bed-frames) and purchase date available.

© 2025 Bellemave. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CDC3S72F

More documents and user manuals: **https://manuals.plus/**