HomeSpot HS-JY508

HomeSpot JY508 Wireless Neckband Speaker

User Manual

1. Product Overview

The HomeSpot JY508 Wireless Neckband Speaker offers an immersive audio experience with 3D surround sound technology. Designed for comfort and versatility, it provides low-latency audio, making it ideal for TV viewing and gaming. Its intuitive controls and long battery life ensure seamless enjoyment at home, in the office, or outdoors.



Figure 1.1: HomeSpot JY508 Wireless Neckband Speaker

2. Features

- **360-Degree Surround Sound:** Delivers an immersive audio experience, creating a concert-like atmosphere.
- **Low Latency:** Ensures a lag-free audio experience, perfect for TV watching and gaming.
- **Extended Battery Life:** Up to 12 hours of continuous playback on a single charge.
- **Intuitive Button Controls:** Easy navigation for volume, track skipping, and call management.

- **Comfortable Design:** Seamlessly adapts to various scenarios, including home, office, and outdoor use.



Figure 2.1: 3D Surround Sound Capability

3. Package Contents

Please check the box for the following items:

- HomeSpot HS-JY508 Wireless Neckband Speaker
- Charging cable (Type-C)
- User Manual (this document)

4. Controls and Indicators

Familiarize yourself with the buttons and indicators on your HomeSpot JY508 speaker:



Figure 4.1: Control Button Layout

- **Power Button:** Press and hold to power on/off.
- **Play/Pause Button:** Press to play or pause audio.
- **Volume Up / Next Song Button:** Press to increase volume. Press and hold to skip to the next song.
- **Volume Down / Previous Song Button:** Press to decrease volume. Press and hold to go to the previous song.
- **Type-C Charging Port:** For connecting the charging cable.
- **LED Indicator:** Shows power status, charging status, and Bluetooth pairing status.

5. Setup

5.1. Charging the Speaker

1. Connect the provided Type-C charging cable to the charging port on the speaker.
2. Connect the other end of the cable to a USB power adapter (not included) or a computer's USB port.
3. The LED indicator will show charging status (e.g., red while charging, off when fully charged).

4. A full charge takes approximately 2 hours and provides up to 12 hours of playback time.

5.2. Bluetooth Pairing

1. Ensure the speaker is fully charged before first use.
2. Press and hold the Power button to turn on the speaker. The LED indicator will flash, indicating it's in pairing mode.
3. On your device (smartphone, tablet, TV, etc.), enable Bluetooth and search for available devices.
4. Select "HS-JY508" from the list of found devices.
5. Once connected, the LED indicator will stop flashing and remain solid (or turn off, depending on model). You will hear an audible confirmation.
6. The speaker will automatically reconnect to the last paired device when powered on, if the device is within range and Bluetooth is enabled.

6. Operating Instructions

6.1. Power On/Off

- **To Power On:** Press and hold the Power button until the LED indicator lights up and you hear a power-on sound.
- **To Power Off:** Press and hold the Power button until the LED indicator turns off and you hear a power-off sound.

6.2. Music Playback

- **Play/Pause:** Press the Play/Pause button.
- **Volume Adjustment:** Press the Volume Up (+) or Volume Down (-) buttons.
- **Next Track:** Press and hold the Volume Up (+) button.
- **Previous Track:** Press and hold the Volume Down (-) button.

6.3. Call Management

- **Answer/End Call:** Press the Play/Pause button during an incoming call.
- **Reject Call:** Press and hold the Play/Pause button during an incoming call.
- The built-in microphone allows for hands-free communication.

6.4. TV and Gaming Use

The HomeSpot JY508 features low latency audio, making it suitable for synchronized audio with video content.

- **For TV Connectivity:** Your television must have a built-in Bluetooth function. If not, a separate HomeSpot TV Bluetooth Transmitter (not included) is required to connect the speaker to your TV.
- **For Gaming:** Connect the speaker via Bluetooth to your gaming console or PC for an immersive audio experience without disturbing others.

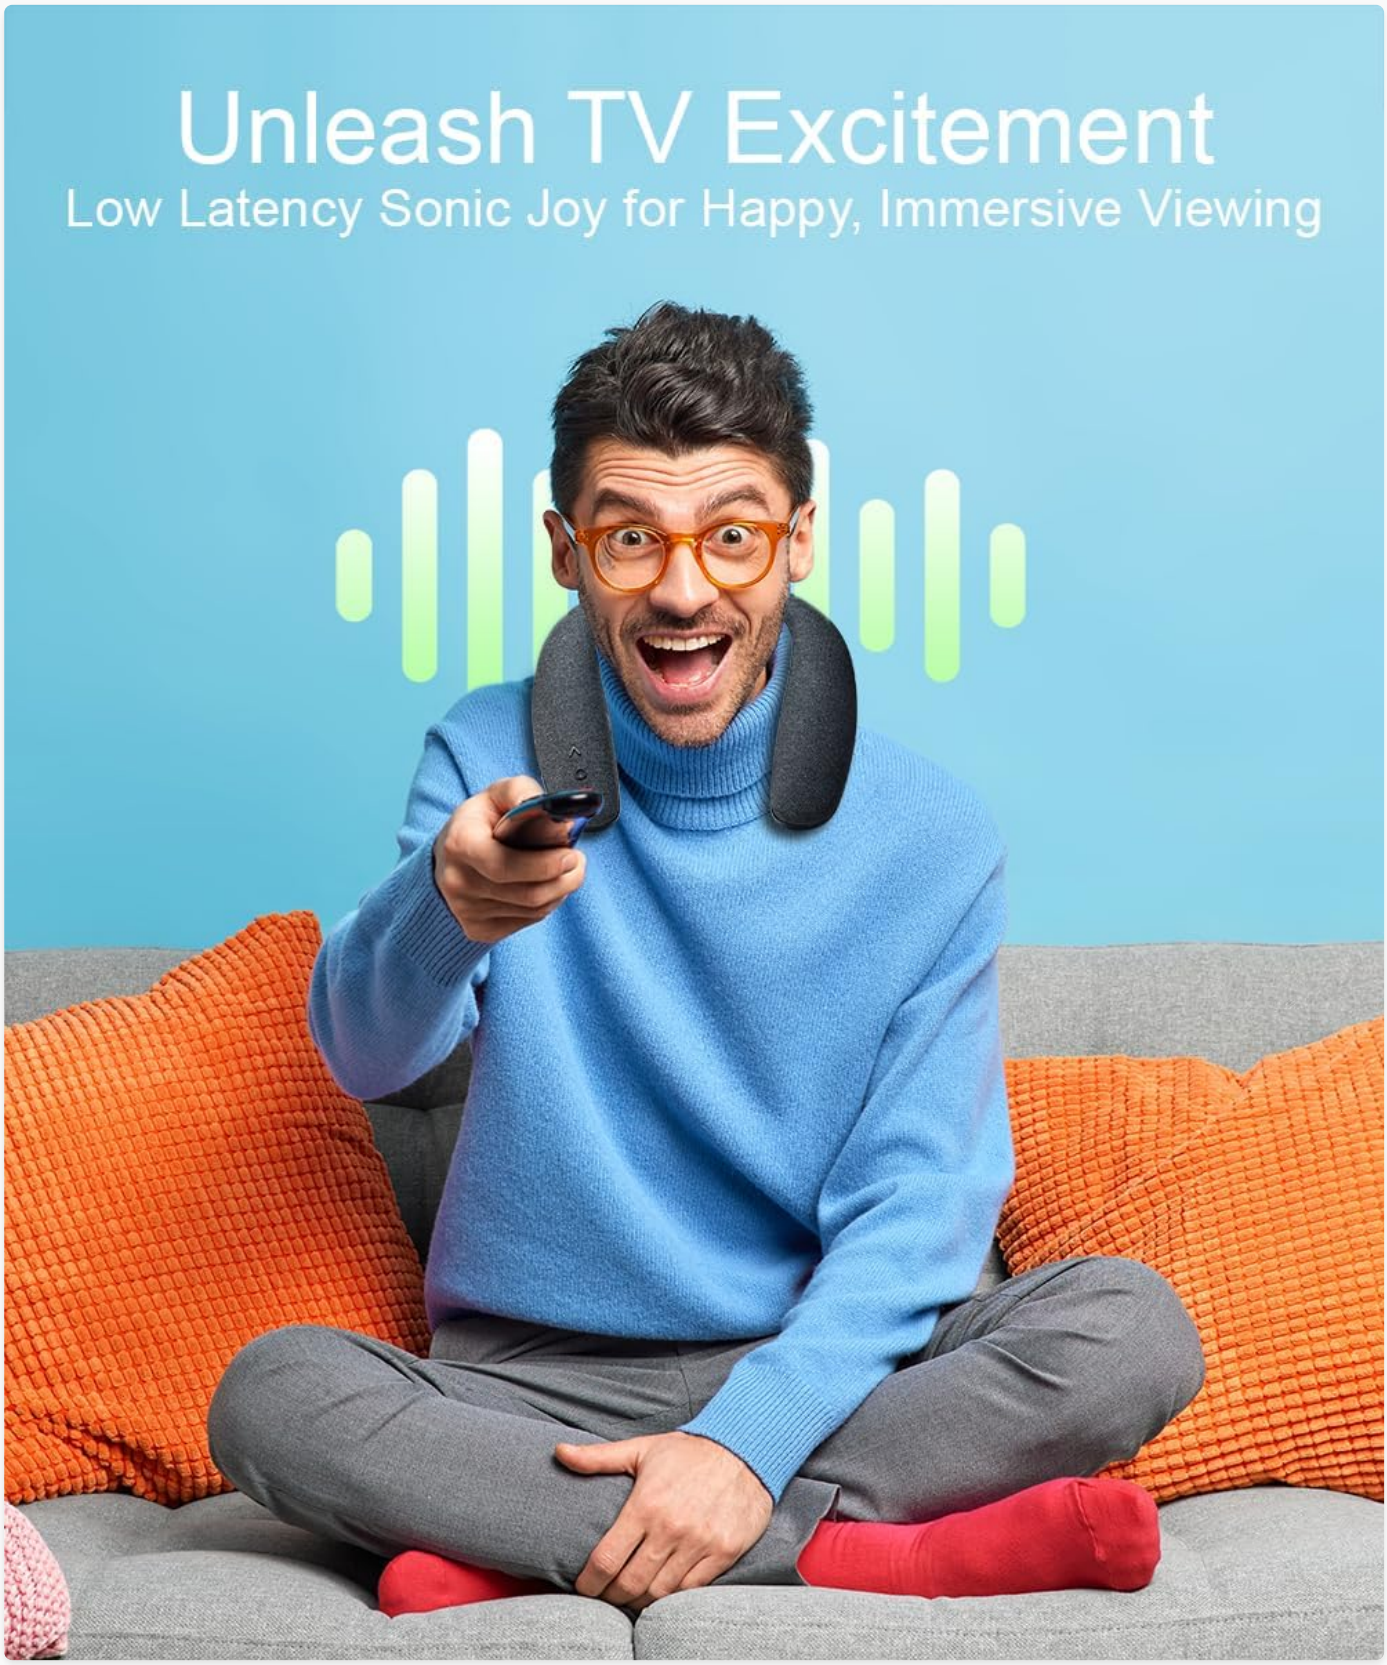


Figure 6.1: Using the speaker for TV viewing



Figure 6.2: Enhancing VR experiences with the speaker

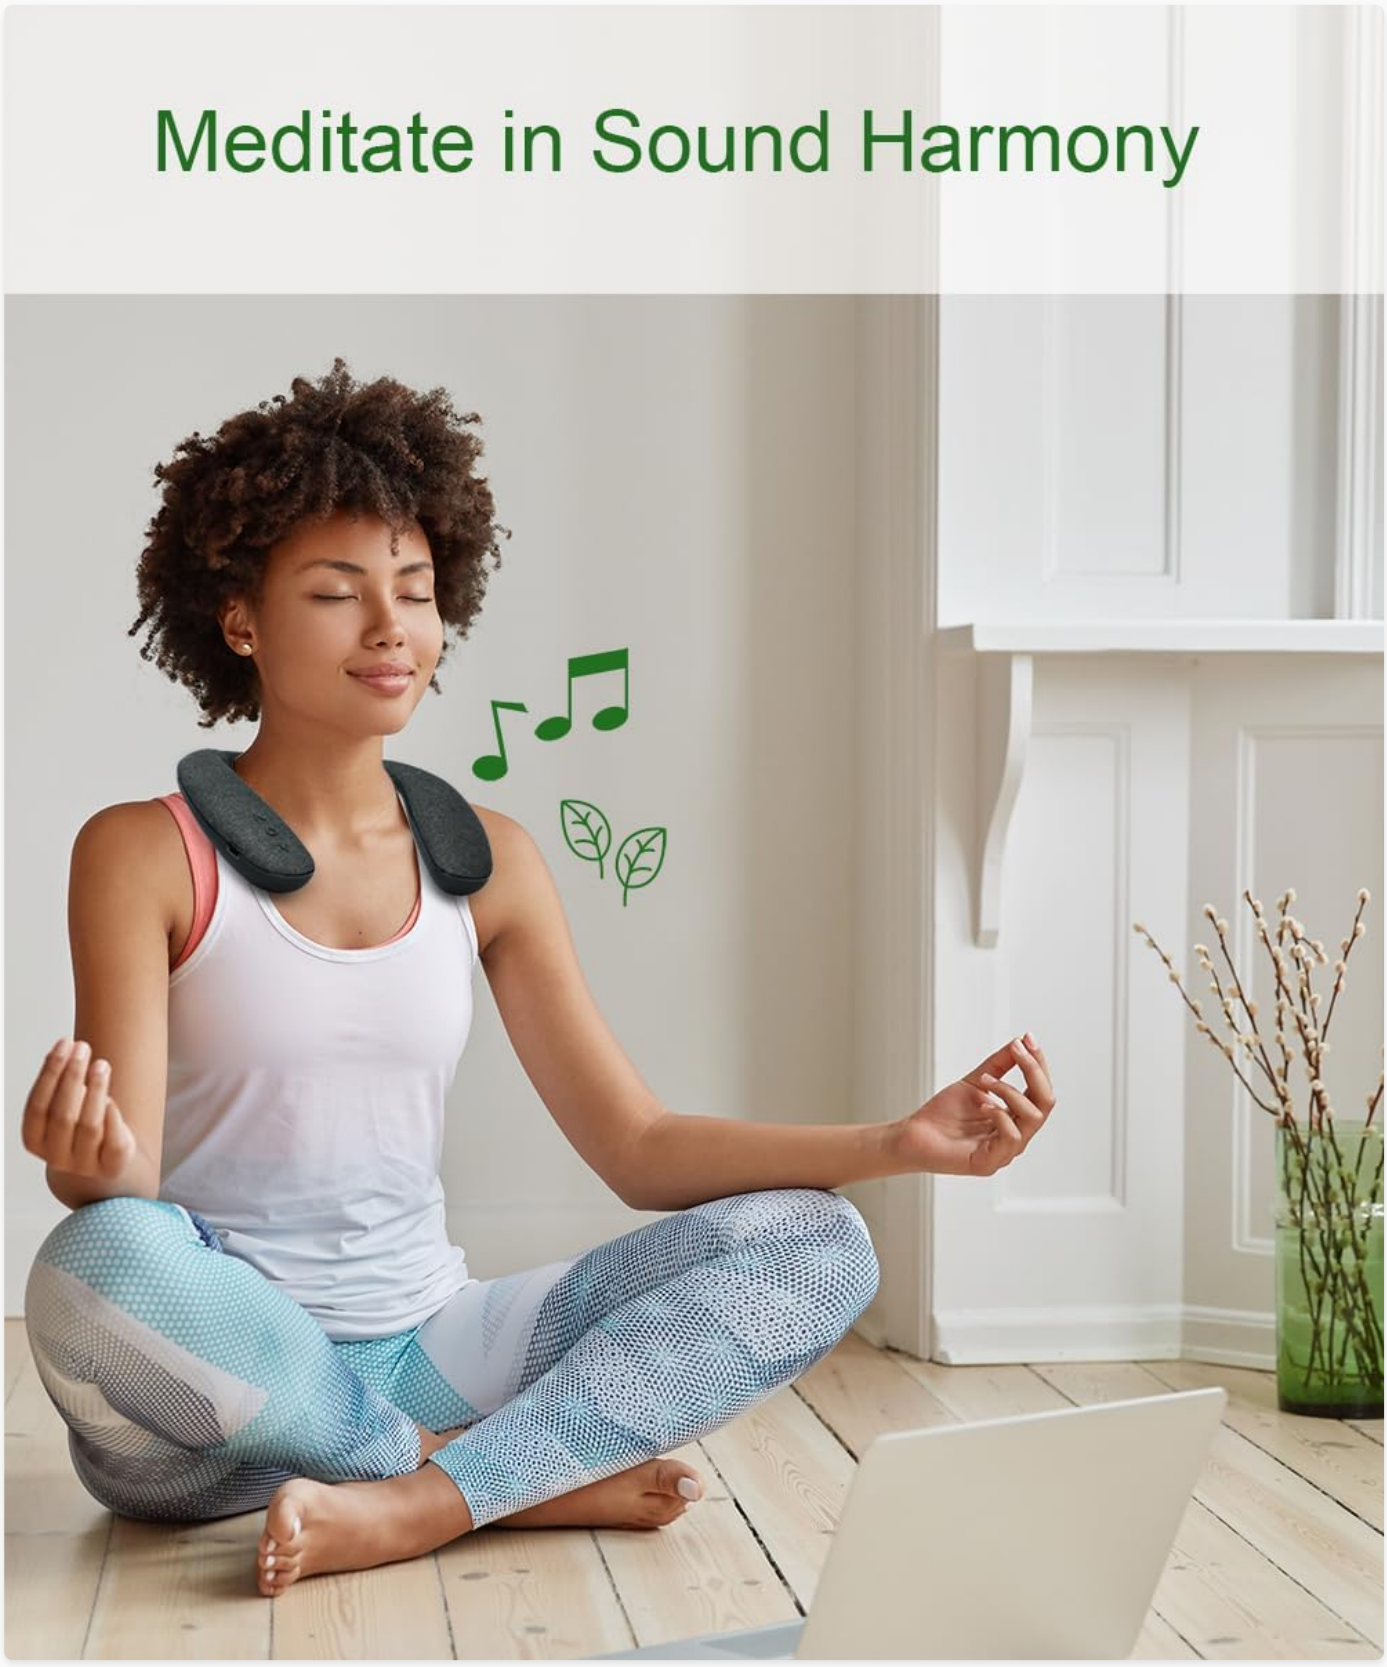


Figure 6.3: Speaker use for meditation and relaxation

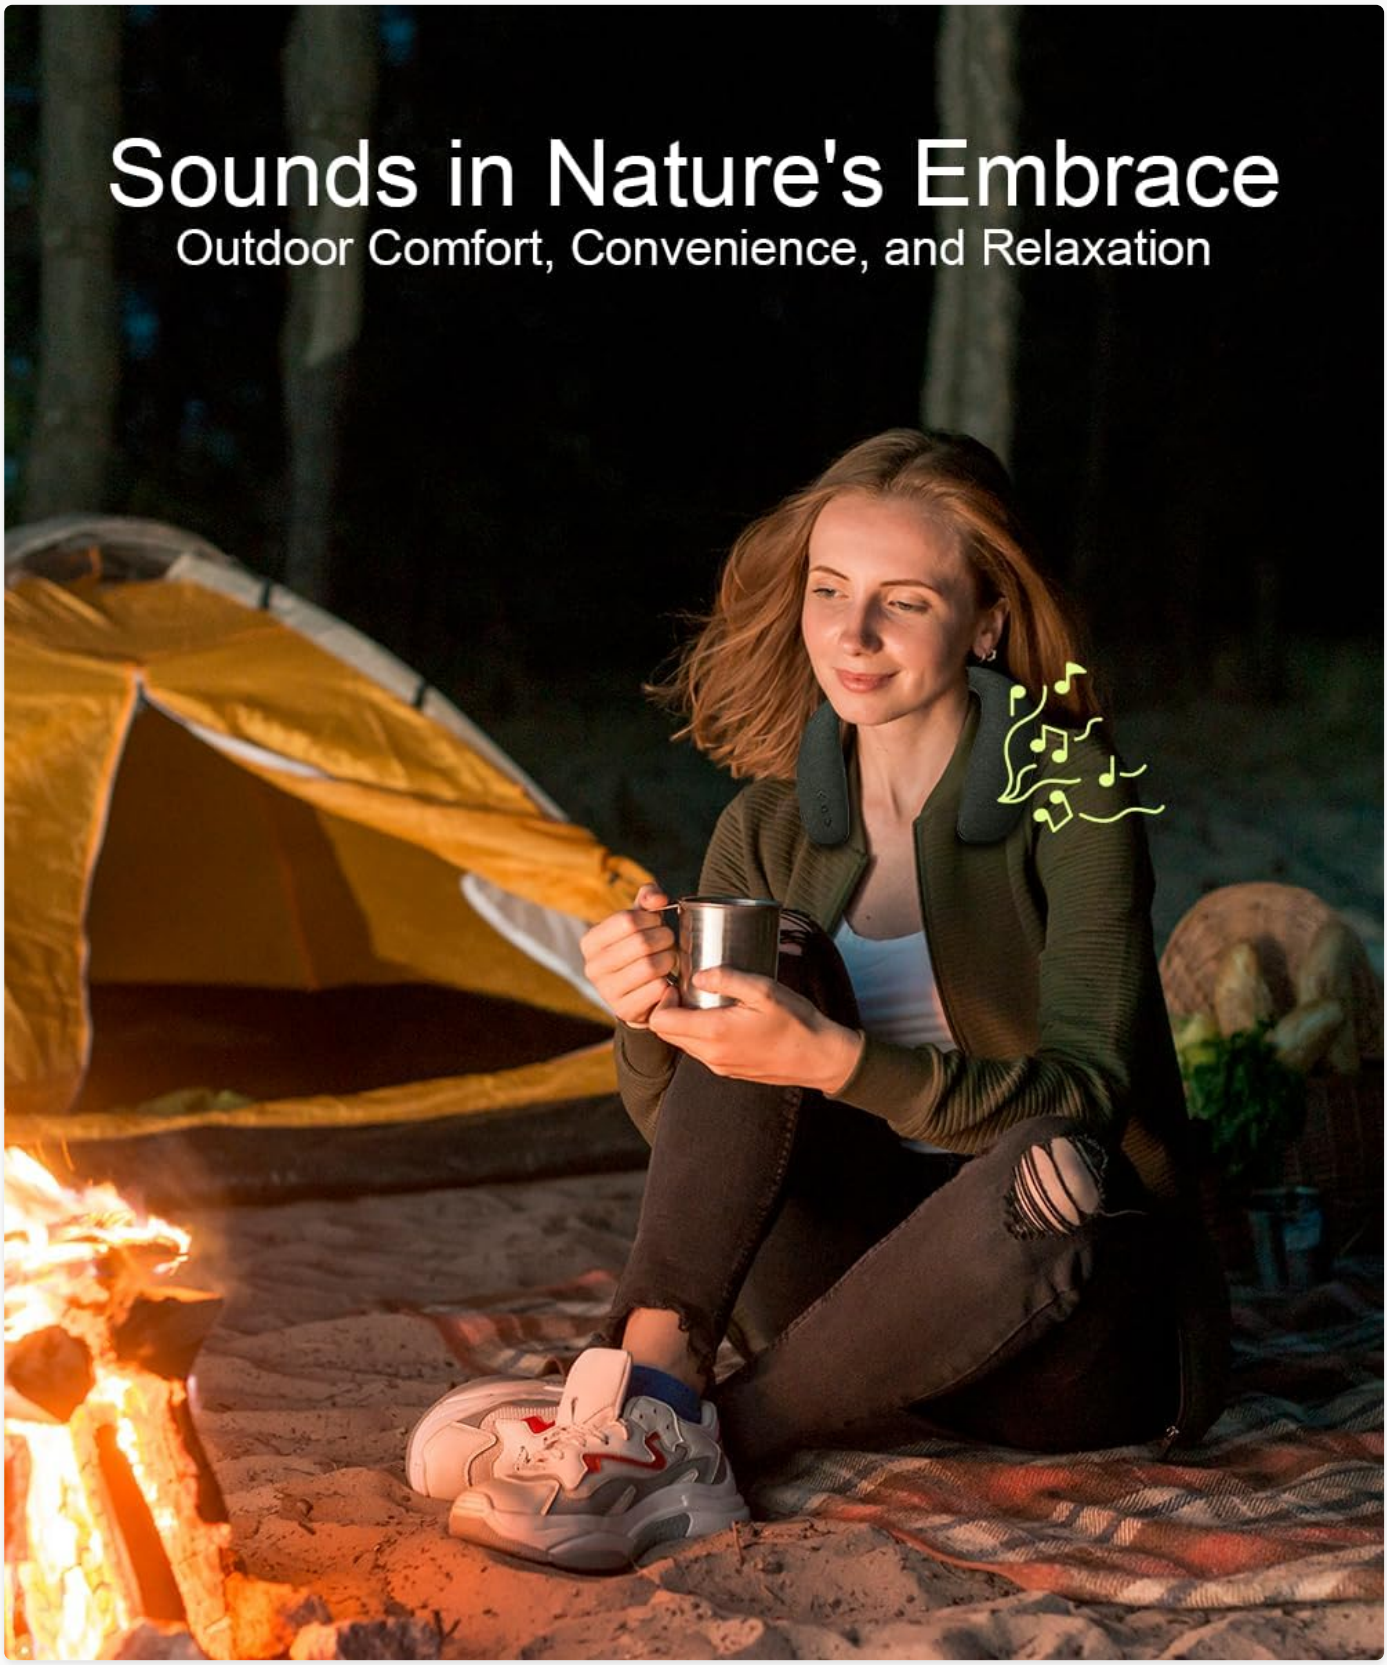


Figure 6.4: Speaker use in outdoor settings

7. Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the speaker. Do not use abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To preserve battery life, charge the speaker at least once every three months if not used regularly.
- **Water Resistance:** This product is not water resistant. Avoid exposure to liquids.

8. Troubleshooting

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery.	Charge the speaker fully.
Cannot pair with device.	Speaker not in pairing mode; Device Bluetooth off; Out of range.	Ensure speaker is in pairing mode (flashing LED). Turn on Bluetooth on your device. Move device closer to speaker (within 10 meters).
No sound or low volume.	Volume too low; Speaker not connected; Audio source issue.	Increase volume on both speaker and connected device. Reconnect Bluetooth. Check audio source playback.
Audio delay with TV.	TV Bluetooth latency; No dedicated transmitter.	Ensure your TV has low-latency Bluetooth or use a HomeSpot TV Bluetooth Transmitter for optimal performance.

9. Specifications

Feature	Detail
Model Name	HS-JY508
Mounting Type	Neckband
Material	Plastic
Connectivity Technology	Bluetooth
Wireless Communication Technology	Bluetooth
Bluetooth Range	10 Meters
Audio Latency	60 Milliseconds
Battery Life	12 Hours
Charging Time	2 Hours
Battery Capacity	600 mAh (Amp Hours)
Speaker Maximum Output Power	10 Watts
Frequency Response	20000 Hz
Audio Output Mode	Stereo
Number of Microphones	1
Item Weight	13 ounces
Product Dimensions	3"D x 2"W x 2"H

10. Warranty and Support

The HomeSpot JY508 Wireless Neckband Speaker comes with a limited warranty. Please refer to the product packaging or the HomeSpot official website for detailed warranty terms and conditions.

For technical support, troubleshooting assistance, or any inquiries regarding your HomeSpot product, please contact HomeSpot customer service. Contact information can typically be found on the HomeSpot website or on the product packaging.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question