Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Kary LA-H698

Kary LED Desk Lamp LA-H698 User Manual

Model: LA-H698

1. Introduction

Thank you for purchasing the Kary LED Desk Lamp, Model LA-H698. This manual provides detailed instructions for the safe and efficient use of your new desk lamp. Please read this manual thoroughly before installation and operation, and retain it for future reference.

Package Contents

- 1x Kary LED Desk Lamp with Clamp (Aluminum Alloy)
- 1x Power Adapter (Cord Length: 71 inches)
- 1x Wireless Remote Control (with pre-installed battery)
- 1x User Manual

2. Important Safety Instructions

- Ensure the power adapter voltage matches your local power supply before connecting.
- Do not disassemble, repair, or modify the lamp. This may cause electric shock or damage.
- Avoid exposing the lamp to water or high humidity. This product is not waterproof.
- Do not look directly into the LED light source for extended periods to prevent eye strain.
- Keep the lamp away from heat sources and direct sunlight.
- Unplug the power adapter during cleaning or when not in use for a long time.
- Ensure the clamp is securely fastened to a stable surface with a thickness of up to 4.3 cm (1.7 inches).

3. Setup and Installation

3.1 Attaching the Lamp to Your Desk

The Kary LED Desk Lamp features a space-saving clamp design for easy attachment to most desks or tables.

1. Choose a suitable location on your desk. The clamp supports surfaces up to 4.3 cm (1.7 inches) thick.
2. Unscrew the clamp's tightening knob until the opening is wide enough to fit over your desk edge.
3. Position the clamp onto the desk edge and tighten the knob firmly until the lamp is secure. Ensure it does not wobble.
4. Connect the power adapter cable to the lamp's power input port, typically located near the clamp base.

5. Plug the power adapter into a standard electrical outlet.

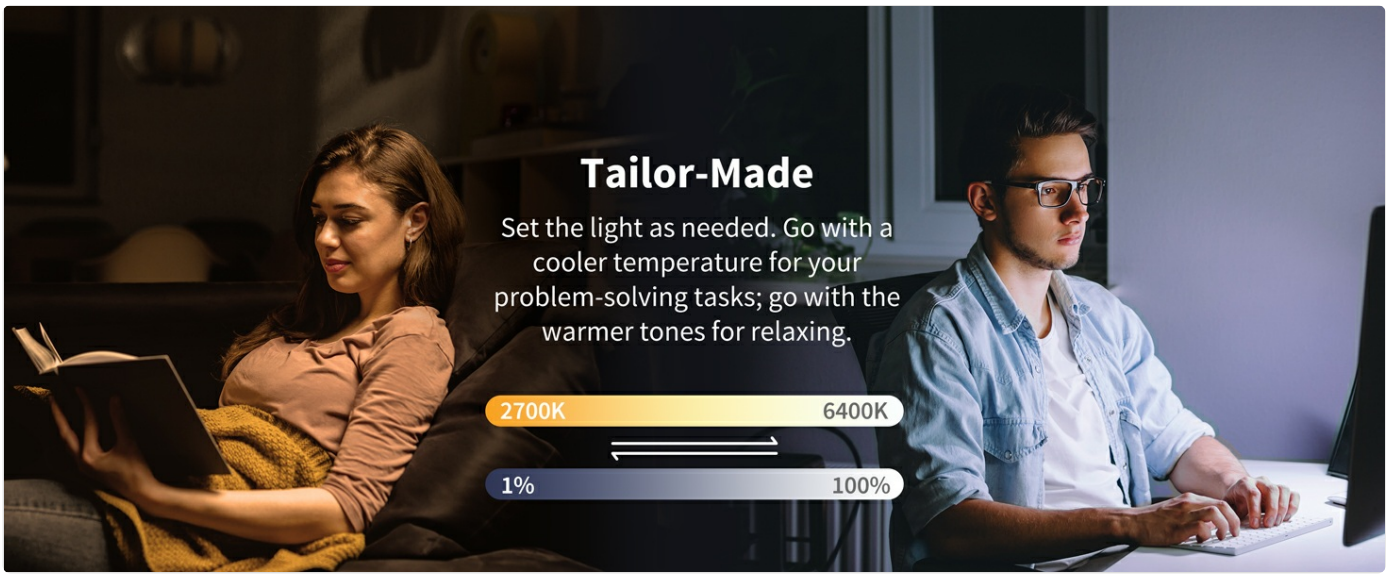


Image: The Kary LED Desk Lamp securely clamped to the edge of a desk, demonstrating its space-saving design.



Image: A close-up view of the lamp's clamp, showing its robust construction and how it attaches to a desk surface.



Image: A detailed view illustrating the clamp's maximum supported desk thickness of 4.3 inches.

4. Operating Instructions

4.1 Adjusting the Lamp Position

The Kary LED Desk Lamp features an aluminum alloy swing-arm design with multiple joints, allowing for flexible positioning and illumination angles.

- Gently adjust the lamp arm at its joints to achieve the desired height and reach.
- The lamp head can be rotated and tilted to direct light precisely where needed.
- The entire lamp can swivel 360 degrees at its base for broad coverage.



Image: The lamp's aluminum alloy swing-arm design, illustrating its 270-degree rotation at the head, 180-degree arm articulation, and 360-degree base swivel for flexible positioning.



Image: A visual representation of the lamp's foldable, space-saving design, various adjustable angles, and omni-directional lighting capabilities.

4.2 Using the Touch Control Button

The lamp features a touch-sensitive button on the right side of the lamp head for basic control.

- **Short Press:** Turns the lamp On/Off.
- **Long Press:** Cycles through brightness levels (10% to 100%) or color temperatures (2700K to 6400K), depending on the current mode.



Image: A close-up of the touch-sensitive power button located on the lamp head, indicated by a blue light.

4.3 Using the Wireless Remote Control

The included wireless remote control provides convenient access to all lighting functions from your seat. The remote also functions as a phone stand.



Image: The wireless remote control, highlighting its buttons for color temperature adjustment, brightness adjustment, and on/off function, along with its integrated cell phone stand feature.

- **Power Button:** Turns the lamp On/Off.
- **Brightness Adjustment Buttons (+/-):** Increases or decreases brightness in 5 levels (10% to 100%).

- **Color Temperature Adjustment Buttons (Sun/Moon icons):** Changes color temperature in 5 levels (2700K warm white to 6400K cool white).
- **Memory Function:** The lamp remembers your last brightness and color temperature settings when turned off and on.



Image: A visual guide demonstrating the lamp's five distinct color temperature modes (from warm to cool) and five brightness levels (from dim to bright).



Image: An illustration showing the versatility of the lamp's adjustable color temperature, with one person reading under warm light (2700K) and another working under cool light (6400K).

4.4 Eye Protection Features

The Kary LED Desk Lamp is designed with eye-caring technology to reduce visual fatigue during prolonged use.

- **No Glare:** The light source is designed to minimize direct glare.
- **No Flickering:** Provides stable, flicker-free illumination.
- **No Shadow:** Offers even light distribution to reduce harsh shadows.
- **Adjustable Color Temperature:** Allows selection of light color that is most comfortable for your eyes and task.



Image: A woman comfortably working at her desk under the Kary LED Desk Lamp, emphasizing its eye-caring benefits such as no glare, no flickering, no direct light, and reduced eye strain.

5. Maintenance

- Always unplug the lamp from the power outlet before cleaning.
- Wipe the lamp's surface with a soft, dry cloth. Do not use abrasive cleaners, solvents, or harsh chemicals.
- Do not immerse the lamp or its components in water.
- The LED light source is not replaceable. Do not attempt to replace it.

6. Troubleshooting

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Lamp does not turn on.	Not plugged in. Power outlet is not working. Remote control battery is dead or not paired.	Ensure the power adapter is securely plugged into the lamp and the wall outlet. Test the outlet with another device. Replace the remote control battery (Type 12V 23A) or re-pair the remote if necessary (refer to remote instructions).
Remote control is not responding.	Battery is low or dead. Obstruction between remote and lamp. Remote needs re-pairing.	Replace the remote control battery. Ensure a clear line of sight between the remote and the lamp's sensor. Consult the remote's specific pairing instructions if provided.
Lamp turns on/off or changes settings by itself.	Interference from other IR devices. Faulty remote or lamp sensor.	Move other IR remote-controlled devices away from the lamp. If the issue persists, contact customer support.

7. Product Specifications

Model Number	LA-H698
Brand	Kary
Light Source Type	LED
Wattage	12 Watts
Voltage	24 Volts (DC)
Color Temperatures	5 levels (2700K - 6400K)
Brightness Levels	5 levels (10% - 100%) with stepless dimming
CRI (Color Rendering Index)	≥90
Control Method	Remote Control, Push Button
Connectivity Technology	IR (Infrared)
Material	Aluminum Alloy, Acrylonitrile Butadiene Styrene
Product Dimensions (D x W x H)	8"D x 15.7"W x 31"H
Clamp Thickness Support	Max 4.3 inches (10.9 cm)
Indoor/Outdoor Usage	Indoor Only
Special Features	Memory Function, No Glare, No Flickering, No Shadow, Eye-Caring



Image: A detailed diagram illustrating the physical dimensions of the Kary LED Desk Lamp, including arm lengths, lamp head width, and overall height, along with clamp dimensions.

8. Warranty and Support

8.1 Manufacturer's Warranty

The Kary LED Desk Lamp Model LA-H698 comes with a**one-year warranty** from the date of purchase. This warranty covers manufacturing defects and material faults under normal use. It does not cover damage caused by misuse, accidents, unauthorized repairs, or normal wear and tear.

8.2 Customer Support

For any questions, technical assistance, or warranty claims, please contact Kary customer support. Please have your model number (LA-H698) and proof of purchase ready when contacting support.
Contact information can typically be found on the product packaging or the official Kary website.

© 2024 Kary. All rights reserved. Kary and the Kary logo are trademarks of Kary.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CF4TSYMW

More documents and user manuals: **https://manuals.plus/**