Blue Tees Golf Player Speaker

Blue Tees Golf Player+ GPS Speaker Instruction Manual

Model: Player Speaker

Brand: Blue Tees Golf

1. Introduction

Welcome to the Blue Tees Golf Player+ GPS Speaker experience. This versatile device combines a high-quality Bluetooth speaker with advanced golf GPS features, designed to enhance your game and enjoyment on the course. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure you get the most out of your Player+ GPS Speaker.





Figure 1: Blue Tees Golf Player+ GPS Speaker

2. Key Features

The Player+ GPS Speaker is packed with features to elevate your golf game:

- **Touch Screen Display:** A user-friendly touch screen for easy navigation and precise control of your golf GPS device.
- **Driving Distance:** Track and measure your driving distance off the tee, allowing you to improve your game over time.
- **Dynamic Hazards:** Stay informed about dynamic hazards on the course, such as bunkers, water hazards, and more, to make strategic decisions.
- **Score Keeping:** Keep track of your scores right on your GPS speaker player, eliminating the need for a separate scorecard.
- **Premium Dynamic Audio:** Enjoy high-quality sound with radical deep bass, enhancing your golf experience with crisp, clear audio.

- **Links Party Pairing:** Connect with fellow golfers by linking your devices for a shared golfing experience, enhancing the social aspect of your game.
- **Magnetic Strip:** Easily attach your GPS speaker player to golf carts, clubs, or other metallic surfaces, ensuring it's always within reach.
- **Power Bank:** Doubles as a power bank, so you can charge your smartphone or other devices on the go, ensuring you stay connected throughout your round.
- **100-Foot Range:** Stay connected to your device from up to 100 feet away, giving you flexibility on the course.
- **IPX7 Waterproof:** Designed to withstand water and weather conditions, providing durability and peace of mind during wet rounds.
- **10+ Hours Battery Life:** Enjoy a long-lasting battery, ensuring your GPS speaker player will last through multiple rounds without the need for constant recharging.
- **Visual + Audible Distances:** Receive both visual and audible distance readings for added convenience on the course.
- **Front/Center/Back Yardages:** Get accurate distances to the front, center, and back of the green, helping you make more informed club choices.



Figure 2: Player+ GPS Speaker highlighting key features

3. Setup

3.1 Unboxing

Your Blue Tees Golf Player+ GPS Speaker package includes:

- Player+ GPS Speaker
- Charging Cable
- Magnetic Strip (integrated)
- Wrist Strap

3.2 Initial Charging

Before first use, fully charge your Player+ GPS Speaker. The device comes with 2 Lithium Ion batteries included, providing over 10 hours of battery life on a full charge.

1. Locate the charging port on the device (usually covered by a rubber flap for waterproofing).
2. Connect the provided USB charging cable to the speaker and a power source.
3. The screen will indicate charging status. A full charge typically takes a few hours.

3.3 Power On/Off

To power on the device, press and hold the power button located on the front panel until the screen illuminates. To power off, press and hold the power button again until the screen turns off.

3.4 App Installation & Bluetooth Pairing

For full functionality, including course maps and advanced features, download the official Blue Tees Golf app on your smartphone. The app is essential for course selection and data synchronization.

1. Ensure your Player+ GPS Speaker is powered on.
2. Enable Bluetooth on your smartphone.
3. Open the Blue Tees Golf app and follow the on-screen prompts to pair your device. Look for 'Blue Tees Player+' in your Bluetooth device list.
4. Once paired, the device will synchronize with the app, allowing access to over 40,000 courses.



Figure 3: Different views of the Player+ GPS Speaker

4. Operating Instructions

4.1 Touch Screen Display & GPS Functionality

The Player+ features a responsive touch screen display for easy access to golf data.

- **Distances:** The main screen displays Front, Center, and Back yardages to the green.
- **Swiping:** Swipe left or right on the screen to access different views, including dynamic hazards, scorekeeping, music player controls, and driving distance tracking.
- **Course Selection:** Use the paired app on your smartphone to select your course. The device will automatically load the course data.

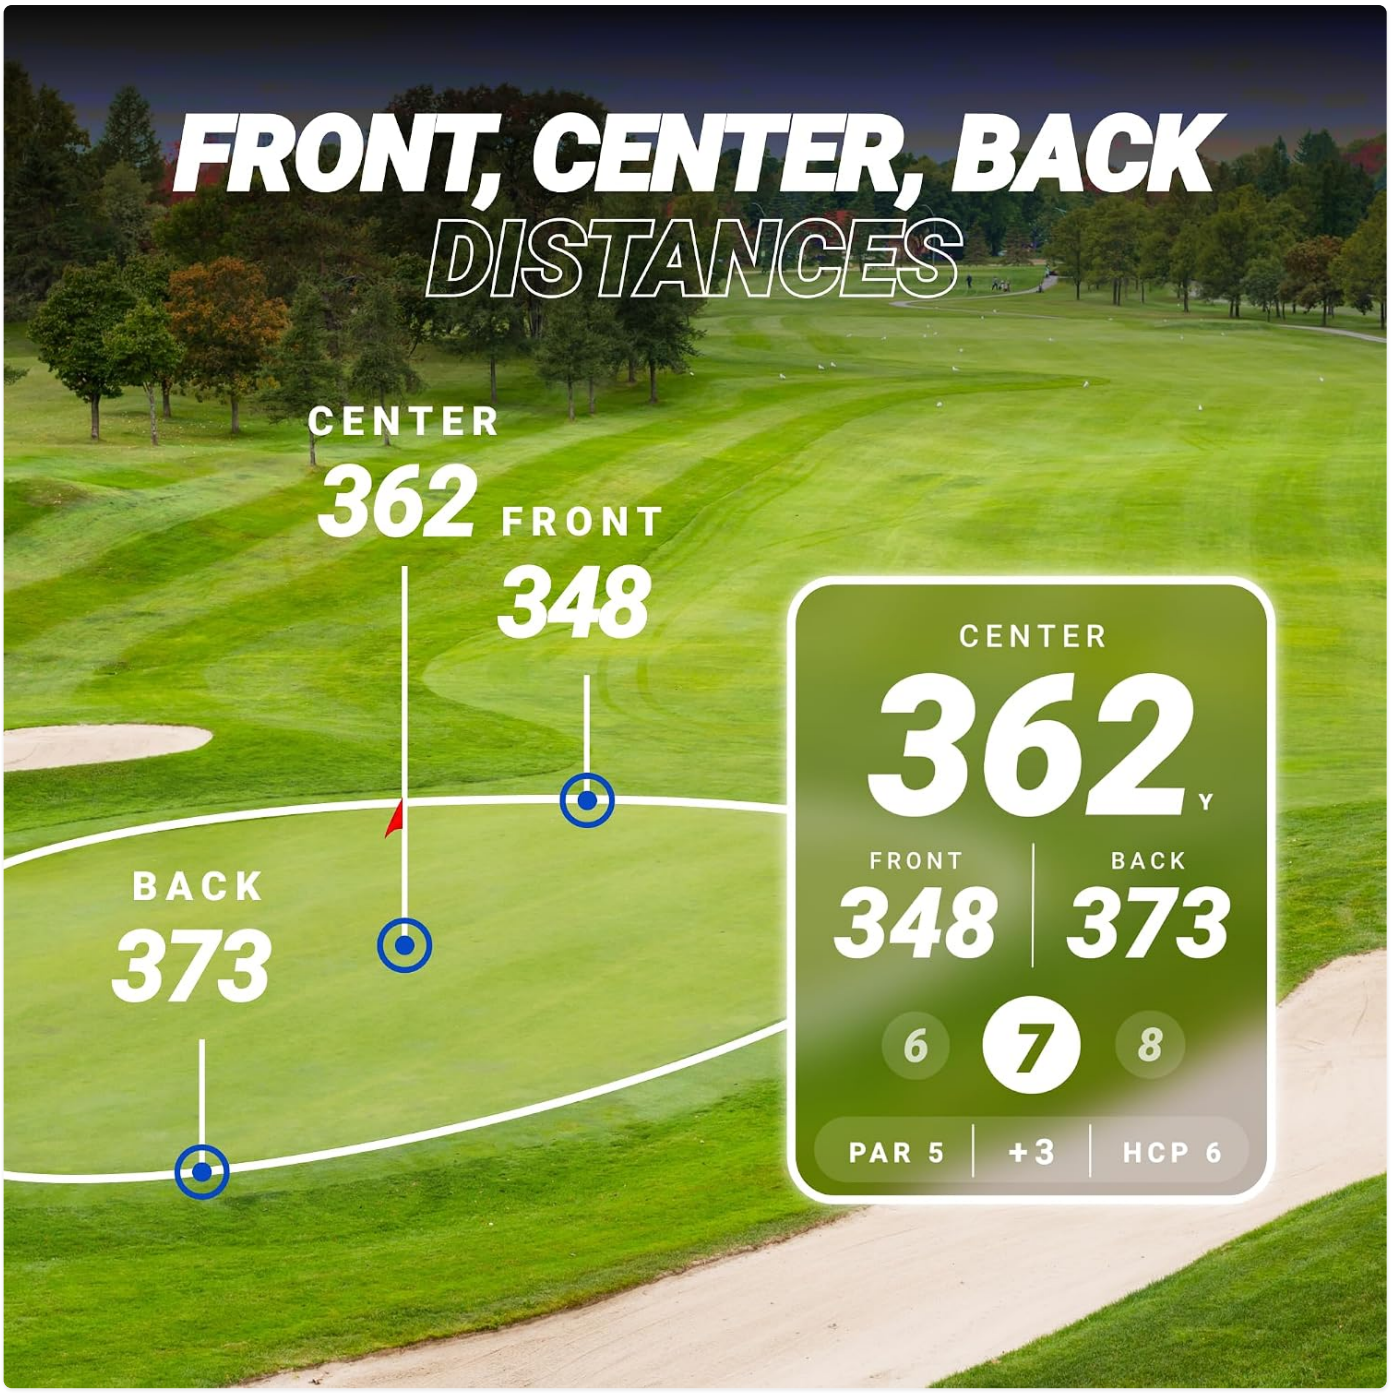


Figure 4: Displaying Front, Center, Back distances



Figure 5: Displaying driving distance

4.2 Speaker Functionality

The Player+ GPS Speaker delivers premium audio for your music. Use the volume controls on the side of the device or through your paired smartphone.

4.3 Magnetic Strip Attachment

The integrated magnetic strip allows for convenient attachment to metal surfaces, such as a golf cart frame or golf club. Ensure the surface is clean and dry for optimal adhesion.



Figure 6: Attaching the Player+ to a golf cart

4.4 Power Bank Feature

The Player+ can act as a power bank to charge other USB-powered devices. Simply connect your device to the USB-A port located under the rubber flap next to the charging port.

4.5 Links Party Pairing

The Links Party Pairing feature allows you to connect with other compatible Blue Tees Golf devices for a synchronized experience. Refer to the app for specific instructions on enabling and managing Links Party Pairing.

Video 1: Official product video showcasing the Player+ GPS Speaker features.

5. Maintenance

5.1 Cleaning

To clean your Player+ GPS Speaker, wipe it with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials that could damage the device or screen.

5.2 Waterproofing

The Player+ is IPX7 waterproof, meaning it can withstand submersion in up to 1 meter of water for 30 minutes. Ensure all port covers are securely closed before exposing the device to water.

5.3 Storage

Store the device in a cool, dry place when not in use. Avoid extreme temperatures and direct sunlight for prolonged periods to preserve battery life and device integrity.

6. Troubleshooting

If you encounter issues with your Player+ GPS Speaker, try the following solutions:

- **Device Not Powering On:** Ensure the device is fully charged. Connect it to a power source and wait a few minutes before attempting to power on again.
- **Bluetooth Connectivity Issues:** Ensure Bluetooth is enabled on your smartphone and the device is within the 100-foot range. Try unpairing and re-pairing the device in your phone's Bluetooth settings.
- **Screen Visibility in Bright Sunlight:** While the screen is designed for outdoor use, extreme direct sunlight may reduce visibility. Try shading the screen or adjusting your viewing angle.
- **Inaccurate GPS Readings:** Ensure the Blue Tees Golf app is updated to the latest version. Verify that location services are enabled for the app on your smartphone.
- **App Functionality Issues:** If the app is behaving unexpectedly, try closing and reopening it. If the problem persists, uninstall and reinstall the app.

7. Specifications

Specification	Detail
Item Weight	2.75 pounds
Product Dimensions	3 x 3 x 8 inches
Item Model Number	Player Speaker
Batteries	2 Lithium Ion batteries required (included)
Display Size	3.5 Inches
Battery Life	10+ Hours

Voice Command	Touchscreen
Waterproof Rating	IPX7
Connectivity Technology	USB
Map Type	Worldwide (40,000+ Courses)
Included Components	Power Bank, Magnetic Strip, Links Party Pairing

8. Warranty & Support

8.1 Warranty Information

The Blue Tees Golf Player+ GPS Speaker comes with a 2-Year Warranty from the date of purchase. This warranty covers manufacturing defects and ensures the product meets its specified performance standards. Please retain your proof of purchase for warranty claims.

8.2 Customer Support

For further assistance, technical support, or warranty inquiries, please visit the official Blue Tees Golf website or contact their customer service team. Contact information can typically be found on the product packaging or the brand's official website.

© 2024 Blue Tees Golf. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question